

64000

**HP64000
Logic Development
System**

**Model 64191A
6805 Emulator
Controller**



CERTIFICATION

Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY

This Hewlett-Packard system product is warranted against defects in materials and workmanship for a period of 90 days from date of installation. During the warranty period, HP will, at its options, either repair or replace products which prove to be defective.

Warranty service of this product will be performed at Buyer's facility at no charge within HP service travel areas. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses. In all other cases, products must be returned to a service facility designated by HP.

For products returned to HP for warranty service. Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

HP warrants that its software and firmware designated by HP for use with an instrument will execute its programming instructions when properly installed on that instrument. HP does not warrant that the operation of the instrument, or software, or firmware will be uninterrupted or error free.

LIMITATION OF WARRANTY

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

EXCLUSIVE REMEDIES

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

ASSISTANCE

Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

HEWLETT-PACKARD
SERVICE MANUAL
MODEL 64191A
6805 EMULATOR CONTROLLER

REPAIR NUMBERS

This manual applies directly to models
with repair numbers prefixed 2301A.

© COPYRIGHT HEWLETT-PACKARD COMPANY/LOGIC SYSTEMS DIVISION 1983
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

ALL RIGHTS RESERVED

Manual Part Number: 64191-90901
Microfiche Part Number: 64191-90801

PRINTED: JANUARY 1983

SAFETY SUMMARY

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.

GROUND THE INSTRUMENT.

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

KEEP AWAY FROM LIVE CIRCUITS.

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

DO NOT SERVICE OR ADJUST ALONE.

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification of the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

DANGEROUS PROCEDURE WARNINGS.

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

WARNING

**Dangerous voltages, capable of causing death, are present in this instrument.
Use extreme caution when handling, testing, and adjusting.**

Table of Contents

Section	Page
I	GENERAL INFORMATION.....1-1
	1-1. Introduction.....1-1
	1-5. Related Service Manuals.....1-2
	1-7. Instruments Covered By This Manual.....1-2
	1-11. Description.....1-3
	1-19. Accessories Supplied.....1-4
	1-21. Additional Equipment Required.....1-4
	1-23. Power Requirements.....1-4
	1-25. Conventions.....1-4
II	INSTALLATION.....2-1
	2-1. Introduction.....2-1
	2-3. Initial Inspection.....2-1
	2-5. Development Station Configuration.....2-1
	2-7. Installation.....2-3
	2-9. Removal.....2-4
	2-11. RFI Ground Bracket Installation.....2-5
	2-15. Operating Environment.....2-5
	2-17. Storage and Shipping Environment.....2-6
	2-19. Original Packaging.....2-6
	2-21. Other Packaging.....2-6
III	OPERATION.....3-1
IV	PERFORMANCE TESTS.....4-1
V	ADJUSTMENTS.....5-1
VI	REPLACEABLE PARTS.....6-1
	6-1. Introduction.....6-1
	6-3. Abbreviations.....6-1
	6-5. Replaceable Parts.....6-1
	6-8. Ordering Information.....6-2
	6-11. Direct Mail Order System.....6-2
VII	MANUAL CHANGES.....7-1

Table of Contents - Model 64191A

Table of Contents (Cont'd)

Section	Page
VIII SERVICE.....	8-1
8-1. Introduction.....	8-1
8-4. General Theory.....	8-1
8-12. Development Station Interface.....	8-2
8-23. Control Logic.....	8-3
8-35. Foreground/Background Memory.....	8-5
8-38. Pod Interface and Memory Monitor.....	8-5
8-51. Last Address and Break Logic.....	8-7
8-58. Foreground/Background Logic.....	8-7
8-62. Pod Interface and Opcode Monitor.....	8-8

List of Illustrations

Figure	Title	Page
1-1.	Emulator Controller.....	1-1
2-1.	Development Station Card Cage.....	2-1
2-2.	Typical 6805 Emulator Subsystem.....	2-3
2-3.	RFI Ground Bracket/Clamp Bar.....	2-4
6-1.	Component Locator.....	6-4
8-1.	Emulator Subsystem Memory Map.....	8-5
8-2.	Emulator Controller Block Diagram.....	8-9
8-3.	Connector Diagram.....	8-11
8-4.	Schematic 1, Development Station Interface.....	8-29
8-5.	Schematic 2, Control.....	8-31
8-6.	Schematic 3, Foreground/Background Memory.....	8-33
8-7.	Schematic 4, Pod Interface and Memory Monitor.....	8-35
8-8.	Schematic 5, Last Address and Break Logic.....	8-37
8-9.	Schematic 6, Foreground/Background Logic.....	8-39
8-10.	Schematic 7, Pod Interface and Opcode Monitor.....	8-41

List of Tables

Table	Title	Page
1-1.	Emulator System Service Manuals.....	1-2
1-2.	Power Supply Loads.....	1-4
6-1.	Reference Designators and Abbreviations.....	6-3
6-2.	Replaceable Parts List.....	6-5
6-3.	List Of Manufacturers' Codes.....	6-8
8-1.	Connector Signals.....	8-10
8-2.	Mnemonics.....	8-12
8-3.	Logic Symbols.....	8-23
8-4.	Schematic Diagram Notes.....	8-26
8-5.	IC To Schematic Cross-Reference.....	8-28

SECTION I

GENERAL INFORMATION

1-1. INTRODUCTION.

1-2. This manual supports board-level servicing of the Model 64191A 6805 Emulator Controller. It contains installation, parts list, component locator, and schematics for the model 64191A. Operating instructions are provided in a separate operating manual supplied with the instrument. Because the controller only runs with an emulator pod attached, performance test information is included in the service manual for the emulator pod.

1-3. Described in this section are instruments covered, the general features of the emulator controller, power supply loads, and its use with the Hewlett-Packard emulator pods. Also included are conventions used in the manual.

1-4. Shown on the title page is a microfiche part number. This number can be used to order 4 x 6 inch microfilm transparencies of the manual. Each microfiche contains up to 96 photoduplicates of the manual pages.



Figure 1-1. 6805 Emulator Controller

1-5. RELATED SERVICE MANUALS.

1-6. Table 1-1 shows the topics covered in the emulator controller and emulator pod service manuals. Service manuals for the models listed below provide additional information.

- a. Development station models 64100A and 64110A.
- b. Internal analyzer models 64300A and 64302A.

Table 1-1. Emulator Subsystem Service Manuals

Subject	Model 64191A Emulator Controller Service Manual	Emulator Pod Service Manual
General information	yes	yes
Installation	yes	yes
Operation	no, see op manual	no, see op manual
Testing	no, see pod	yes, control & pod
Adjustments	no, none required	no, none required
Parts list	yes, control only	yes, pod only
Service schematics and theory	yes, control only	yes, pod only

1-7. INSTRUMENTS COVERED BY THIS MANUAL.

1-8. Attached to the Model 64191A 6805 Emulator Controller is a repair number tag. The repair number is in the form 0000A00000. It is in two parts; the first four digits and the letter are the prefix and the last five are the suffix. The prefix is the same for each identical model 64191A; it only changes when a change is made to the instrument. The suffix is assigned sequentially and is different for each model 64191A manufactured. This manual applies to each model 64191A with a repair prefix listed on the title page.

1-9. A model 64191A manufactured after the printing of this manual may have a repair number not listed on the title page. The manual for the newer boards is accompanied by a yellow manual change supplement. The supplement explains how to adapt the manual to the newer emulator controller.

1-10. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest manual changes supplement. The supplement is identified by the manual print and part number, both of which appear on the manual title page. Copies are available at the Hewlett-Packard sales/service offices listed in the back of this manual.

1-11. DESCRIPTION.

1-12. Emulation of MC6805 microcomputers is provided by an emulation subsystem consisting of a Model 64191A 6805 Emulator Controller (figure 1-1), an emulator pod, and emulator software. The Model 64191A 6805 Emulator Controller plugs into Hewlett-Packard 64000 system development stations and provides the interface functions between the station, emulator pod, and software analysis options.

1-13. The products in the MC6805 family are single-chip microcomputers with their architecture optimized for controller applications. They have a microprocessor similar to the 6800, a clock oscillator, timer, ROM, RAM, or EPROM, and I/O control, all located on the integrated circuit package. The microcomputers communicate with the outside world through eight bit ports and have various user-specified options that can be hardware masked during manufacture.

1-14. The Model 64191A 6805 Emulator Controller has several important features. The controller contains memory that duplicates the on-chip memory of the 6805 microcomputer being emulated; no additional memory options are needed. This is called foreground memory and is available to the user to load programs and store data. Also located on the controller is background memory, which contains routines that force the emulator processor to perform utility functions.

1-15. The controller hardware passes the identification code of the attached emulator pod to the development station so that the appropriate emulator software is used for the menu-driven user interface. This function is particularly important because of the wide variety of options available on the 6805 microcomputer family. When the user enters the desired microcomputer configuration, the controller latches the pod option bits and passes them to the attached emulator pod.

1-16. Based upon the 6805 microcomputer version chosen for emulation, the controller maps foreground memory as ROM and RAM and monitors each access by the emulator processor to see if it is legal. The controller also contains all the control circuitry required to coordinate memory accesses between the development station and the emulator pod.

General Information - Model 64191A

1-17. Another feature located on the controller is the opcode monitor. This circuitry checks each emulator opcode. When an invalid opcode is found, a break bit can be set.

1-18. All emulator address, data, and status information is tapped on the controller and routed to the emulation bus edge connectors. This bus can be connected to an internal analyzer option card.

1-19. ACCESSORIES SUPPLIED.

1-20. No accessories are supplied with the Model 64191A 6805 Emulator Controller.

1-21. ADDITIONAL EQUIPMENT REQUIRED.

1-22. To operate, the Model 64191A 6805 Emulator Controller must be plugged into a Hewlett-Packard 64000 series development station and connected to an emulator pod for MC6805 series microcomputers.

1-23. POWER REQUIREMENTS.

1-24. Power requirements of the 6805 emulator controller are shown in the table below. Typical power useage is 6 watts.

Table 1-2. Power Supply Loads

Supply	+5 V
Controller current	1.2 A

1-25. CONVENTIONS.

1-26. The following conventions are used in the text and schematics.

- a. Abbreviations, see table 6-1.
- b. Mnemonics (signal names), see table 8-2.
- c. Logic symbols, see table 8-3.

d. Component designators are assigned according to the numbered-row, lettered-column method for integrated circuit packages. Discrete components are assigned reference designators using the upper left to lower right method.

e. TTL logic levels (in volts):

Input high threshold	Input low threshold	Output high threshold	Output low threshold
+2.0	+0.8	+2.4	+0.2

SECTION II

INSTALLATION

2-1. INTRODUCTION.

2-2. This section contains information necessary to install the Model 64191A 6805 Emulator Controller in the 64000 system. Also included is information concerning initial inspection, damage claims, environmental considerations, storage and shipment.

2-3. INITIAL INSPECTION.

2-4. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until contents have been checked for completeness and the model 64191A has been checked mechanically and electrically. If the contents are incomplete, if there is mechanical damage or defect, or if the 64191A does not pass performance verification, notify the nearest Hewlett-Packard office. If the shipping container or cushioning material is damaged, notify the carrier as well as the Hewlett-Packard office. Keep the shipping materials for carrier's inspection. The Hewlett-Packard office will arrange for repair or replacement at HP option without waiting for claim settlement.

2-5. DEVELOPMENT STATION CONFIGURATION.

2-6. The controller should be installed in the highest numbered slot of the development station. When a logic analyzer option card is used with the emulator, the analyzer should be installed in the next lower numbered slot adjacent to the emulator control board. See figure 2-1.

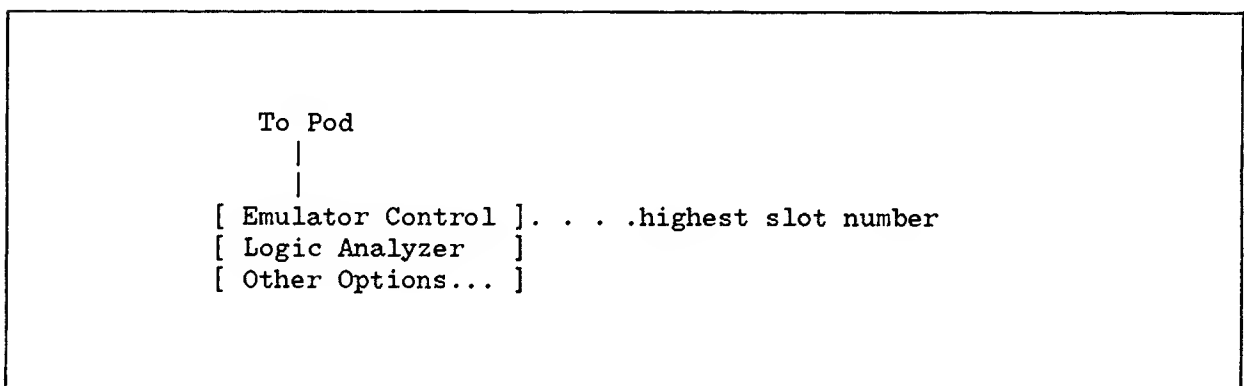


Figure 2-1. Development Station Card Cage

WARNING

Before installing the emulator subsystem, read the safety summary at the front of the manual.

CAUTION

The following precautions should be taken while using Hewlett-Packard emulator pods. Damage to the emulator circuitry may result if these precautions are not observed.

⚠ **TURN OFF THE POWER.** Turn off power to the user target system and the emulation development station, before inserting the user plug, to avoid circuit damage resulting from voltage transients or mis-insertion of the user plug.

⚠ **VERIFY USER PLUG ORIENTATION.** Make certain that pin 1 of the target system microprocessor socket, and pin 1 of the user plug, are properly aligned before inserting the user plug into the socket. Failure to do so may result in damage to the emulator circuitry.

⚠ **PROTECT AGAINST STATIC DISCHARGE.** The emulator pod contains devices which are susceptible to damage by static discharge. Therefore, operators should take precautionary measures before handling the user plug to avoid emulator damage.

⚠ **CONNECT THE RFI GROUND BRACKET.** The emulator controller and pod can be damaged by static discharge when the emulator pod cable is not firmly clamped in place.

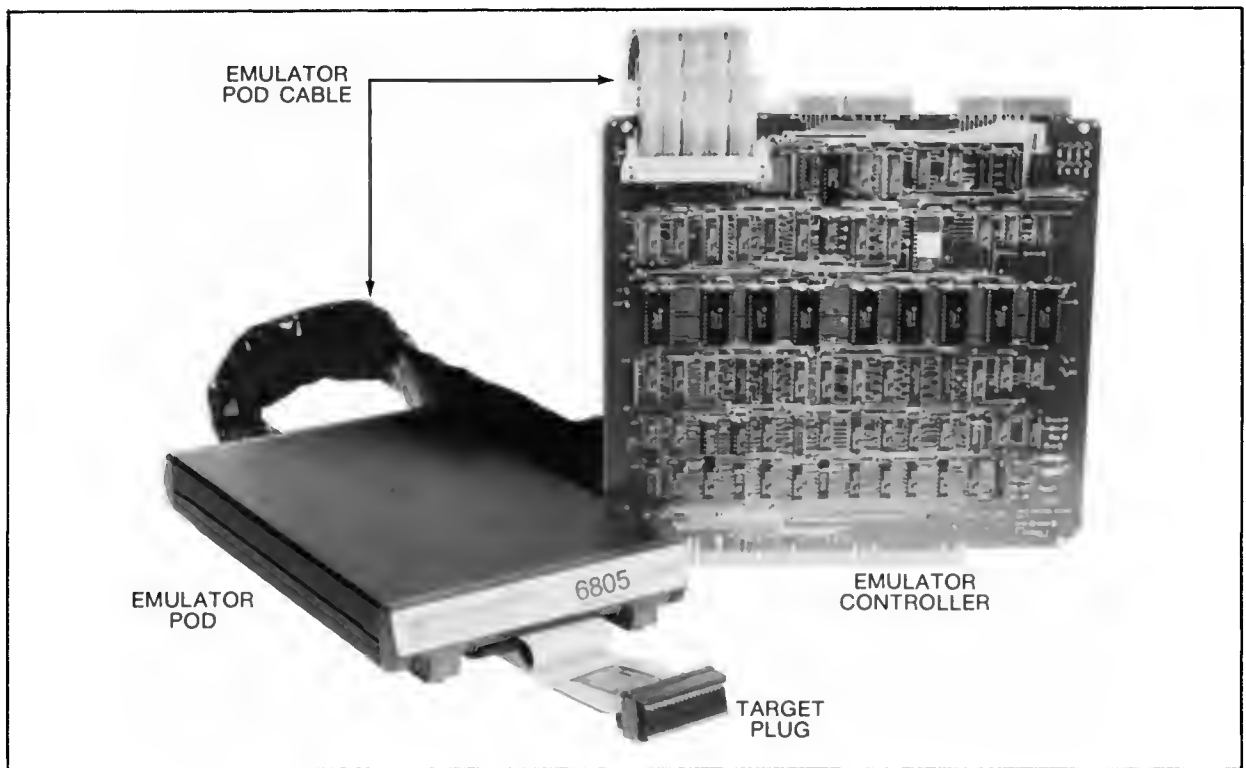


Figure 2-2. Typical 6805 Emulator Subsystem

2-7. INSTALLATION.

2-8. To install the emulator controller and pod proceed as follows:

- a. Remove the card cage cover. Position the development station so there is clear access to the card cage.
- b. Before placing the controller into the card cage, connect the emulator pod to it as directed in steps c and d.
- c. Locate the two multi-colored ribbon cables within the emulator pod cable. One cable is terminated in a female card-edge connector; the other is terminated in a female socket type connector. Locate pin 1, it is indicated by a triangle molded into the connector.
- d. Locate the mating male connectors on the controller. They are at the top left of the board, as you face the component side, and have color dots that match dots on the cables. Pin 1 of the male connectors is etched on the board. Align the connectors and attach the cables to the controller.
- e. Next, insert the controller into the highest numbered slot. Insure that it is completely seated in the motherboard.

- f. Refer to figure 2-3. If the development station has an RFI ground bracket/clamp bar as shown in the figure, perform the next step. If it does not have an RFI ground bracket/clamp bar, attach the bracket/bar as directed on the following page before going to step 'g'.
- g. Loosen the clamp bar and slip the emulator pod cable beneath it, placing the wire mesh is directly beneath the bar. Tighten the clamp bar to hold the cable firmly in place.
- h. If a logic analyzer option card is to be connected, refer to the appropriate manual and connect it to the control board now.
- i. Carefully fold all cables over the boards so as not to damage them. Replace the card cage cover.

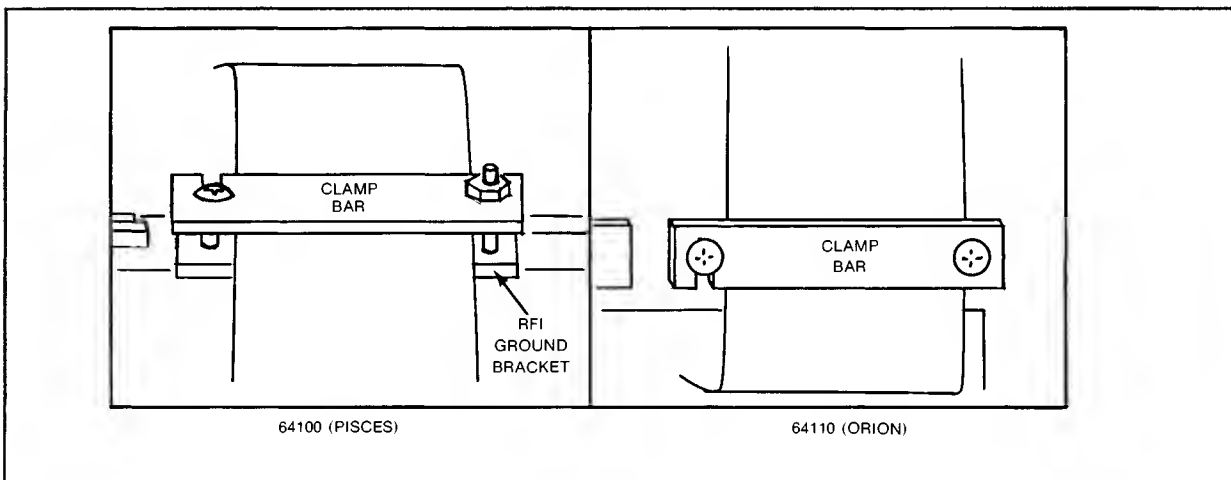


Figure 2-3. RFI Ground Bracket/Clamp Bar

2-9. REMOVAL.

2-10. To remove the controller and pod proceed as follows:

- a. Remove the card cage cover. Position the development station so there is clear access to the card cage.
- b. If a logic analyzer option card is connected to the controller, disconnect it.
- c. Loosen the RFI ground bracket clamp bar and slip the emulator pod cable from beneath it.
- d. Next, Remove the controller from the card cage slot.
- e. Replace the card cage cover.

2-11. RFI GROUND BRACKET INSTALLATION.

2-12. The emulator pod is shipped with a plastic bag that contains an RFI ground bracket assembly. The assembly includes an RFI ground bracket, clamp bar and miscellaneous hardware. These parts are used in the steps shown below.

2-13. MODEL 64100A DEVELOPMENT STATION.

- a. Position the development station so there is clear access to the back.
- b. Facing the back, remove the right cable clamp; it is secured by two #6-32 screws along the top edge. Discard these screws.
- c. Replace the old cable clamp with the RFI ground bracket, and attach with two new #6-32 x .375 long pan head screws, through the back of the card cage.
- d. Locate the clamp bar and position it with the oblong hole over the threaded stud.
- e. Install the #6-32 hex nut on the threaded stud, and install the #6-32 x 1.000 long pan head screw in the threaded hole along the top edge of the card cage.

2-14. MODEL 64110A DEVELOPMENT STATION.

- a. Position the development station so there is clear access to the back.
- b. Facing the back, remove the right cable clamp bracket; it is secured by two #4-40 screws. Discard these screws.
- c. Place a number 4 washer on each #4-40 x .750 pan head screw and insert one screw with washer through the oblong hole in the clamp bar. Then mount the clamp bar with the two #4-40 x .750 long pan head screws where the old cable clamp bracket had been.

2-15. OPERATING ENVIRONMENT.

2-16. The Model 64191A 6805 Emulator Controller can be operated in environments within the limits shown below. It should be protected from temperature extremes which cause condensation within the instrument.

Temperature.....0°to +40°degrees Celsius.
Humidity.....5 to 80 % relative humidity.
Altitude.....4 600 m (15 000 ft).

Installation - Model 64191A

2-17. STORAGE AND SHIPPING ENVIRONMENT.

2-18. The Model 64191A 6805 Emulator Controller can be stored and shipped in environments within the limits given below.

Temperature.....-40° to +40° degrees Celsius.
Humidity.....5 to 80 % relative humidity.
Altitude.....15 240 m (50 000 ft).

2-19. ORIGINAL PACKAGING.

2-20. Containers and packing materials identical to those used in factory packaging are available through Hewlett-Packard sales and service offices.

2-21. OTHER PACKAGING.

2-22. The following general instructions should be used for repackaging with commercially available materials.

- a. Wrap the Model 64191A 6805 Emulator Controller in heavy paper or plastic. Use a strong shipping container. A double wall carton made of 350 pound test material is adequate.
- b. Use a layer of shock absorbing material 70 to 100 mm (3 to 4 inch) thick around all sides of the model 64191A to provide firm cushioning and prevent movement inside the container
- c. Seal shipping container securely.
- d. Mark shipping container FRAGILE to request careful handling.
- e. In any correspondence, refer to instrument by model number and full repair number.

SECTION III

OPERATION

The operation of the Model 64191A 6805 Emulator Controller is a function of the HP 64000 system software. Complete operation from the development station keyboard is beyond the scope of this service manual. Please refer to the operator's manuals for the procedures.

SECTION IV

PERFORMANCE TESTS

This service manual does not contain performance test information. To test the Model 64191A 6805 Emulator Controller, it must be connected to a Hewlett-Packard 6805 series emulator pod. Refer to the service manual for the emulator pod being used.

SECTION V

ADJUSTMENTS

There are no adjustments on the Model 64191A 6805 Emulator Controller.

SECTION VI

REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering parts for the Model 64191A 6805 Emulator Controller. Table 6-1 lists abbreviations used in the parts list and throughout the manual. Table 6-2 lists all replaceable parts in reference designator order. Table 6-3 contains the names and addresses that correspond to the manufacturers' five digit code numbers.

6-3. ABBREVIATIONS.

6-4. Table 6-1 lists abbreviations used in the parts list, the schematics and throughout the manual. In some cases, two forms of the abbreviation are used: one, all in capital letters, and one partial or no capitals. This occurs because the abbreviations in the parts list are always capitals. However, in the schematics and other parts of the manual, other abbreviation forms are used with both lowercase and uppercase letters.

6-5. REPLACEABLE PARTS.

6-6. Table 6-2, the replaceable parts list, is organized as follows:

- a. Chassis mounted parts in alphanumerical order by reference designator.
- b. Electrical assemblies and their components in alphanumerical order by reference designator.
- c. Miscellaneous parts.

6-7. The total quantity for each part is given only once, at the first appearance of the part number in the list. The information given for each part consists of the following.

- a. The Hewlett-Packard part number and the check digit.
- b. The total quantity (Qty) in the instrument.
- c. The description of the part.
- d. A five digit code that indicates the manufacturer.
- e. The manufacturer's part number.

Replaceable Parts - Model 64191A

6-8. ORDERING INFORMATION.

6-9. to order a part listed in the replaceable parts table, quote the Hewlett-Packard part number and check digit, indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

6-10. to order a part that is not listed in the replaceable parts table, include the instrument model number, instrument repair number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

6-11. DIRECT MAIL ORDER SYSTEM.

6-12. Within the USA, Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are as follows:

- a. Direct ordering and shipment from the HP parts center in Mountain View, California.
- b. No maximum or minimum on any mail order (there is a minimum order amount, for parts ordered through a local HP office when the orders require billing and invoicing).
- c. Prepaid transportation (there is a small handling charge for each order).
- d. No invoices - to provide these advantages, a check or money order must accompany each order.

6-13. Mail order forms and specific ordering information are available through your local HP office. Addresses and phone numbers are located at the back of this manual.

Table 6-1. Reference Designators and Abbreviations

REFERENCE DESIGNATORS

A	= assembly	F	= fuse	MP	= mechanical part	U	= integrated circuit
B	= motor	FL	= filter	P	= plug	V	= vacuum, tube, neon bulb, photocell, etc
BT	= battery	IC	= integrated circuit	O	= transistor	VR	= voltage regulator
C	= capacitor	J	= jack	R	= resistor	W	= cable
CP	= coupler	K	= relay	RT	= thermistor	X	= socket
CR	= diode	L	= inductor	S	= switch	Y	= crystal
DL	= delay line	LS	= loud speaker	T	= transformer	Z	= tuned cavity network
DS	= device signaling (lamp)	M	= meter	TB	= terminal board		
E	= misc electronic part	MK	= microphone	TP	= test point		

ABBREVIATIONS

A	= amperes	H	= henries	N/O	= normally open	RMO	= rack mount only
AFC	= automatic frequency control	HDW	= hardware	NOM	= nominal	RMS	= root-mean square
AMPL	= amplifier	HEX	= hexagonal	NPO	= negative positive zero (zero temperature coefficient)	RWV	= reverse working voltage
BFO	= beat frequency oscillator	HG	= mercury	NPN	= negative-positive-negative	S-B	= slow-blow
BE CU	= beryllium copper	HR	= hour(s)	NRFR	= not recommended for field replacement	SCR	= screw
BH	= binder head	HZ	= hertz	NSR	= not separately replaceable	SE	= selenium
BP	= bandpass	IF	= intermediate freq	OB	= order by description	SECT	= section(s)
BRS	= brass	IMPG	= impregnated	OH	= oval head	SEMICON	= semiconductor
BWO	= backward wave oscillator	INCD	= incandescent	OX	= oxide	SI	= silicon
CCW	= counter-clockwise	INCL	= include(s)	PH BRZ	= phosphor bronze	SIL	= silver
CER	= ceramic	INS	= insulation(ed)	PHL	= phillips	SL	= slide
CMO	= cabinet mount only	INT	= internal	PIV	= peak inverse voltage	SPG	= spring
COEF	= coefficient	K	= kilo=1000	PNP	= positive-negative-positive	SPL	= special
COM	= common	LH	= left hand	P/O	= part of	SST	= stainless steel
COMP	= composition	LIN	= linear taper	POLY	= polystyrene	SR	= split ring
COMPL	= complete	LK WASH	= lock washer	PORC	= porcelain	STL	= steel
CONN	= connector	LOG	= logarithmic taper	POS	= position(s)	TA	= tantalum
CP	= cadmium plate	LPF	= low pass filter	POT	= potentiometer	TD	= time delay
CRT	= cathode-ray tube	M	= milli=10 ⁻³	PP	= peak-to-peak	TGL	= toggle
CW	= clockwise	MEG	= meg=10 ⁶	PT	= point	THD	= thread
DEPC	= deposited carbon	MET FLM	= metal film	PWV	= peak working voltage	TI	= titanium
DR	= drive	MET OX	= metallic oxide	RECT	= rectifier	TOL	= tolerance
ELECT	= electrolytic	MFR	= manufacturer	RH	= round head or right hand	TRIM	= trimmer
ENCAP	= encapsulated	MHZ	= mega hertz			TWT	= traveling wave tube
EXT	= external	MINAT	= miniature			U	= micro=10 ⁻⁶
F	= farads	MOM	= momentary			VAR	= variable
FH	= flat head	MOS	= metal oxide substrate			VDCW	= dc working volts
FIL H	= fillister head	MTG	= mounting			W/	= with
FXD	= fixed	MY	= "mylar"			W	= watts
G	= giga (10 ⁹)	N	= nano (10 ⁻⁹)			WIV	= working inverse voltage
GE	= germanium	N/C	= normally closed			WW	= wirewound
GL	= glass	NE	= neon			W/O	= without
GRD	= ground(ed)	NI PL	= nickel plate				

Replaceable Parts - Model 64191A

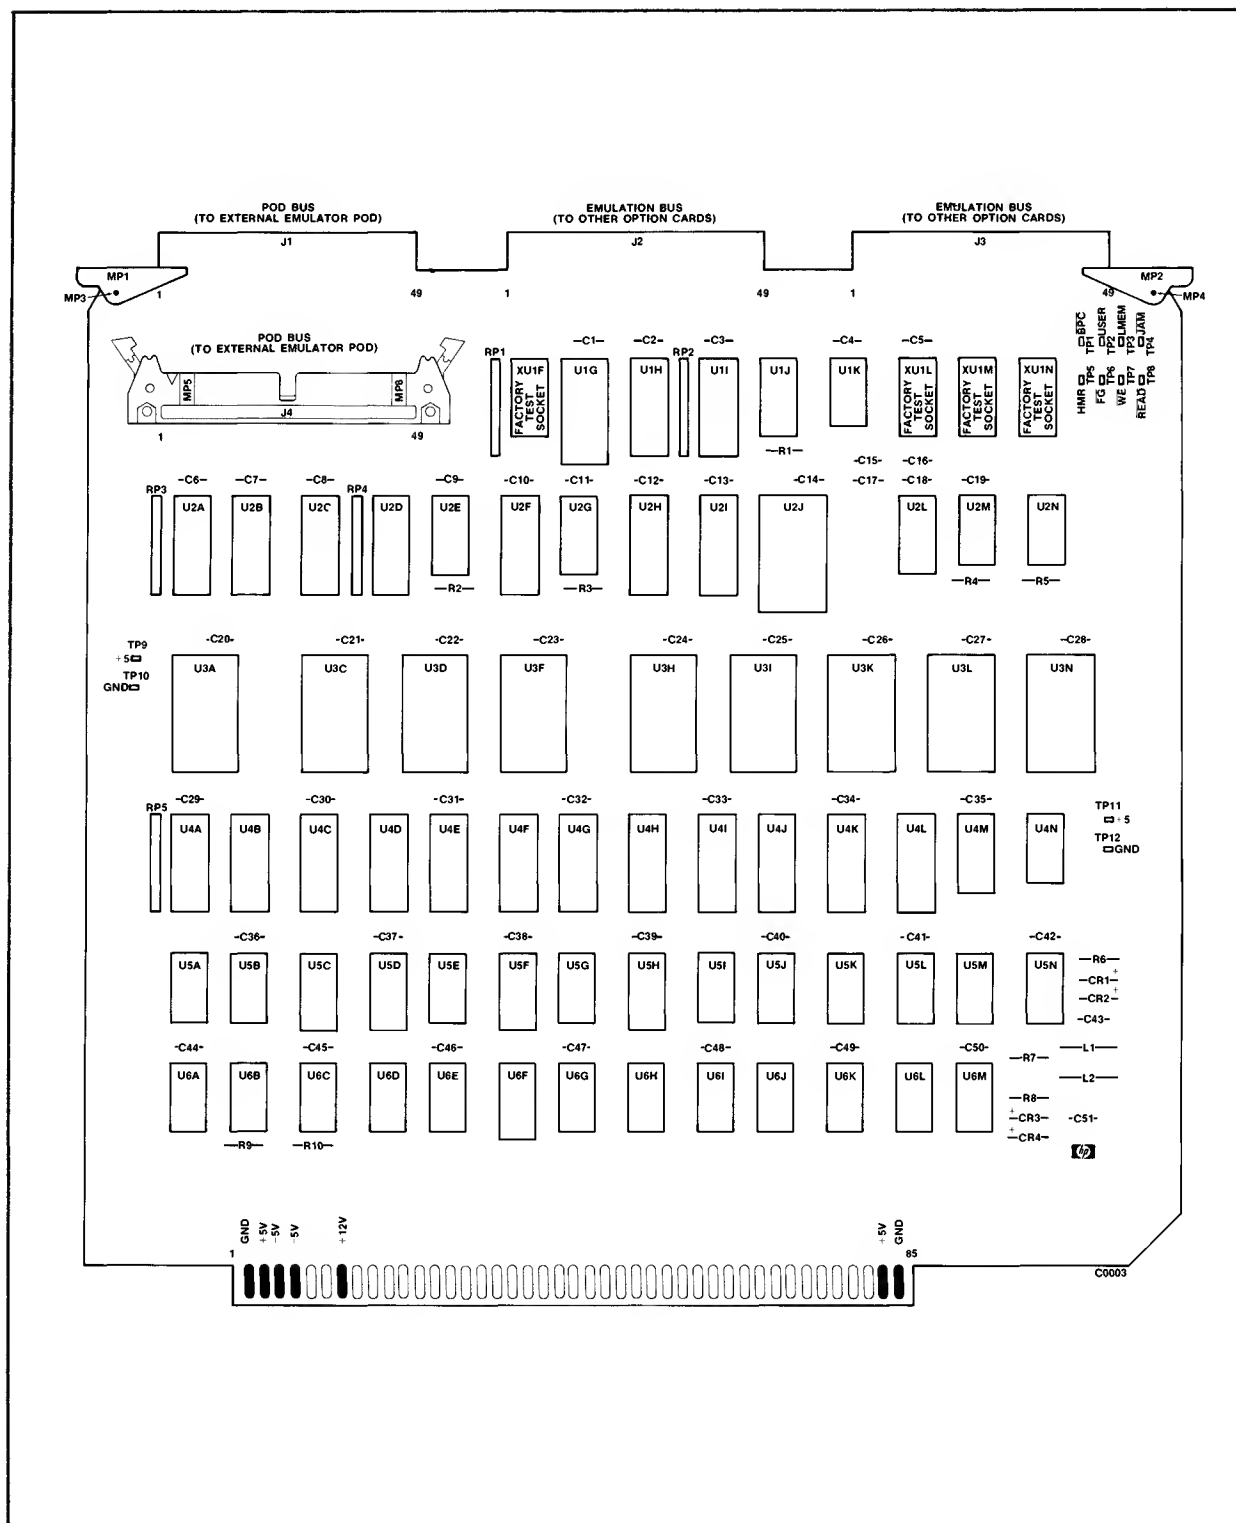


Figure 6-1. Component Locator

Table 6-2. Replaceable Parts List

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	64191A 64191-66501	2 4	1 1	6805 EMULATOR CONTROLLER PC BOARD ASSEMBLY-CONTROL	28480 28480	64191A 64191-66501
C1	0160-5321	8	48	CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C2	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C3	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C4	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C5	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C6	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C7	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C8	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C9	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C10	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C11	0160-5321	8	1	CAPACITOR-FXD CER 1000PF +/-20	28480	0160-5321
C12	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C13	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C14	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C15	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C16	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C17	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C18	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C19	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C20	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C21	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C22	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C23	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C24	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C25	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C26	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C27	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C28	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C29	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C30	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C31	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C32	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C33	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C34	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C35	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C36	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C37	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C38	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C39	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C40	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C41	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C42	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C43	0160-5507	2	1	CAPACITOR-FXD 390PF	28480	0160-5507
C44	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C45	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C46	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C47	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C48	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C49	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C50	0160-5321	8		CAPACITOR-FXD CER 0.01UF 100VDC	28480	0160-5321
C51	0160-5573	2	1	CAPACITOR-FXD 560PF	28480	0160-5573
CR1	1901-0040	1	4	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
J4	1251-5653	3	1	CONNECTOR-- 50 POSITION MREJT	28480	1251-5653
L1	9140-0179	1	2	INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
L2	9140-0179	1		INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
MP1	64191-85001	9	1	BOARD EXTRACTOR -- 64191A	28480	64191-85001
MP2	64191-85002	8	1	BOARD EXTRACTOR-- FM 6805	28480	64191-85002
MP3	1480-0116	8	2	PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
MP4	1480-0116	8		PIN-GRV .062-IN-DIA .25-IN-LG STL	28480	1480-0116
MP5	1251-5595	2	2	POLARIZING KEY	28480	1251-5595
MP6	1251-5595	2		POLARIZING KEY	28480	1251-5595
R1	0757-0280	3	7	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
R2	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
R3	0757-0470	3	1	RESISTOR 162K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1623-F
R4	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
R5	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F

See introduction to this section for ordering information

Replaceable Parts - Model 64191A

Table 6-2. Replaceable Parts List (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
R6	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
R7	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
R8	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
R9	0757-0407	6	2	RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
R10	0757-0407	6		RESISTOR 200 1% .125W F TC=0+-100	24546	C4-1/8-T0-201-F
RP1	1810-0430	0	5	NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0430
RP2	1810-0430	0		NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0430
RP3	1810-0430	0		NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0430
RP4	1810-0430	0		NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0430
RP5	1810-0430	0		NETWORK-RES 10-SIP MULTI-VALUE	28480	1810-0430
TP12	0360-0535	0	12	TERMINAL TEST POINT PCB	00000	ORDER BY DESCRIPTION
U1G	1816-1308	5	1	IC-93L422 PC	07263	93L422PC
U1H	1820-1633	8	3	IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U1I	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U1J	1820-1217	4	1	IC MUXR/DATA-SEL TTL LS 8-TO-1-LINE	01295	SN74LS151N
U1K	1820-1202	7	3	IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
U2A	1820-1624	7	1	IC BFR TTL S OCTL 1-INP	01295	SN74S241N
U2B	1820-1633	8		IC BFR TTL S INV OCTL 1-INP	01295	SN74S240N
U2C	1820-1997	7	7	IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U2D	1820-1917	1	4	IC BFR TTL LS LINE DRVR OCTL	01295	SN74LS240N
U2E	1820-1130	0	1	IC GATE TTL S NAND 13-INP	01295	SN74S133N
U2F	1820-1917	1		IC BFR TTL LS LINE DRVR OCTL	01295	SN74LS240N
U2G	1820-1423	4	1	IC MV TTL LS MONOSTBL RETRIG DUAL	01295	SN74LS123N
U2H	1820-1917	1		IC BFR TTL LS LINE DRVR OCTL	01295	SN74LS240N
U2I	1820-2102	8	2	IC LCH TTL LS D-TYPE OCTL	01295	SN74LS373N
U2J	64191-80000	8	1	OPCODE MONITOR ROM	28480	64191-80000
U2L	1820-1430	3	2	IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG	01295	SN74LS161AN
U2M	1820-0686	9	1	IC GATE TTL S AND TPL 3-INP	01295	SN74S11N
U2N	1820-1205	0	1	IC GATE TTL LS AND DUAL 4-INP	01295	SN74LS21N
U3A	1818-1611	7	9	IC-HM6116P-3	54013	HM6116P-3
U3C	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3D	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3F	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3H	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3I	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3K	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3L	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U3N	1818-1611	7		IC-HM6116P-3	54013	HM6116P-3
U4A	1820-1997	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U4B	1820-1997	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U4C	1820-1997	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U4D	1820-2024	3	4	IC DRVR TTL LS LINE DRVR OCTL	01295	SN74LS244N
U4E	1820-2024	3		IC DRVR TTL LS LINE DRVR OCTL	01295	SN74LS244N
U4F	1820-1997	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U4G	1820-1997	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U4H	1820-2102	8		IC LCH TTL LS D-TYPE OCTL	01295	SN74LS373N
U4I	1820-1917	1		IC BFR TTL LS LINE DRVR OCTL	01295	SN74LS240N
U4J	1820-2024	3		IC DRVR TTL LS LINE DRVR OCTL	01295	SN74LS244N
U4K	1820-2024	3		IC DRVR TTL LS LINE DRVR OCTL	01295	SN74LS244N
U4L	1820-1997	7		IC FF TTL LS D-TYPE POS-EDGE-TRIG PRI-IN	01295	SN74LS374N
U4M	1820-1430	3		IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG	01295	SN74LS161AN
U4N	1820-1144	6	5	IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
U5A	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
U5B	1820-1206	1	1	IC GATE TTL LS NOR TPL 3-INP	01295	SN74LS27N
U5C	1820-1216	3	2	IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
U5D	1820-1282	3	3	IC FF TTL LS J-K BAR POS-EDGE-TRIG	01295	SN74LS109AN
U5E	1820-1112	8	5	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
U5F	1820-1216	3		IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
U5G	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
U5H	1820-1282	3		IC FF TTL LS J-K BAR POS-EDGE-TRIG	01295	SN74LS109AN
U5I	1820-1210	7	1	IC GATE TTL LS AND-OR-INV DUAL 2-INP	01295	SN74LS51N
U5J	1820-1202	7		IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
U5K	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
U5L	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
U5M	1820-1199	1	2	IC INV TTL LS HEX 1-INP	01295	SN74LS04N
U5N	1820-1307	3	1	IC SCHMITT-TRIG TTL S NAND QUAD 2-INP	01295	SN74S132N
U6A	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
U6B	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
U6C	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
U6D	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
U6E	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
U6F	1820-1282	3		IC FF TTL LS J-K BAR POS-EDGE-TRIG	01295	SN74LS109AN
U6G	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
U6H	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
U6I	1820-1202	7		IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
U6J	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
U6K	1820-1274	3	1	IC GATE TTL LS NAND DUAL 4-INP	01295	SN74LS20N
U6L	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
U6M	1820-1285	6	1	IC GATE TTL LS AND-OR-INV 4-INP	01295	SN74LS54N
XU1F	1200-0607	0	6	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
XU1G	1200-0612	7	1	SOCKET-IC 22-CONT DIP DIP-SLDR	28480	1200-0612
XU1H	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
XU1M	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
XU1N	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607

See introduction to this section for ordering information

Table 6-2. Replaceable Parts List (Cont'd)

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
XU2G	1200-0607	0	10	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
XU2J	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3A	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3C	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3D	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3F	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3H	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3I	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3K	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3L	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU3N	1200-0541	1	1	SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
XU5C	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607

See introduction to this section for ordering information

Replaceable Parts - Model 64191A

Table 6-3. List of Manufacturers' Codes

Mfr. No.	Manufacturer Name	Address	Zip Code
94013	HITACHI	TOKYO JP	
00000	ANY SATISFACTORY SUPPLIER		
01295	TEXAS INSTR INC SEMICONDUCTOR DIV	DALLAS TX	75222
07263	FAIRCHILD SEMICONDUCTOR DIV	MOUNTAIN VIEW CA	94042
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304

SECTION VII

MANUAL CHANGES

This section normally contains backdating information for models with repair numbers prior to the one shown on the title page. Because this edition includes only the first repair number, there is no backdating material.

SECTION VIII

SERVICE

8-1. INTRODUCTION.

8-2. This section contains reference information for servicing the Model 64191A 6805 Emulator Controller. For convenience, the schematics, component locator, and other service information are provided on foldout sheets.

8-3. The purpose of the emulator controller is to act as an interface between the development station, emulator pod, and other option cards. To do this, the controller coordinates status and control bits, manages emulation memory, monitors emulator opcodes, and places emulator address, data, and status on the emulation bus within the development station. The following functional blocks implement these operations.

	Schematic
Development Station Interface.....	1
Control.....	2
Foreground/Background Memory.....	3
Pod Interface and Memory Monitor.....	4
Last Address and Break Logic.....	5
Foreground/Background Logic.....	6
Pod Interface and Opcode Monitor.....	7

8-4. GENERAL THEORY.

8-5. Perhaps the most important task of the controller hardware is to manage memory. Therefore, a good way to understand the emulator controller is to examine the functions of foreground and background memory.

8-6. Foreground memory is provided on the controller as a substitute for the on-chip memory of the 6805 microcomputer. When the user selects a version of the 6805 to emulate, software automatically maps foreground memory into 64 byte blocks that correspond to the on-chip memory of the 6805. That is, it is mapped as RAM or ROM. This memory space is available to the user to load programs or store data.

8-7. Each 6805 also has internal registers in the address space between 0 and 15. These addresses cannot be mapped in the foreground memory, but must remain as on-chip addresses. These 16 addresses are called user memory and typically are used for port data and direction control, and on-chip timer functions.

8-8. Background memory is not available to the user. It is loaded with utility routines by the emulator software. Typically, the routines instruct the emulator processor to read its own internal registers and store the information in background so the development station can read it. The emulator processor is forced to run these routines when the opcode for a software interrupt (SWI) is jammed onto its data bus.

8-9. Thus, the emulator processor is either running user programs in foreground memory, or it is running service routines in background memory.

8-10. When the user performs such tasks as loading programs into memory, or modifying a memory location, the development station issues a break to the emulator processor and forces it into background memory. In background, the emulator processor performs a wait loop while the development station processor accesses foreground memory. In this manner, the development station processor has complete access to the memory being used by the emulator.

8-11. It is the function of the emulator hardware to coordinate all the memory related operations described above. In addition, the controller hardware monitors all opcodes used by the emulator processor to see if they are valid. The controller also places all emulator processor address, data, and status information on the emulation bus inside the development station. This bus can be monitored by an attached internal logic analyzer option card. The following paragraphs describe in detail the functional blocks and operation of the controller.

8-12. DEVELOPMENT STATION INTERFACE, SCHEMATIC 1.

8-13. This circuitry includes break, pod option, and pod status registers, plus data and address bus buffering. The circuitry allows the development station to communicate with the controller.

8-14. BREAK, OPTION & STATUS REGISTERS, SCHEMATIC 1.

8-15. Break register U4L latches six bits that control the emulator operation. These bits are written to the controller by the development station. Five of the bits control breaks in operation and one, LEXT, selects a signal source. The bits are,

- LDEFIB...initialize operation, set to known state.
- LBPCBRK...stop operation at development station request.
- LOPCBRK...stop when an illegal opcode is detected.
- LMEMBRK...stop when an illegal address is detected.
- LROMBRK...stop when an a write to 'ROM' is attempted.
- LEXT.....select external crystal clock source

8-16. Option register U2C is a latch/driver that receives data from the development station via the LD0-7 data bus. These bits are used to drive the pod option bus LPOPT0-7. The attached emulator pod reads these bits and uses the information to configure pod operation. These bits implement the choices of emulator configuration selected by the user; for example, type of 6805 being emulated, clock source, timer clock source, and timer prescaler value.

8-17. The emulator status register consists of U4K, a buffer/driver, and U4A, a latch/driver. The status bits are,

LNCLK.....slow, or no processor clock.
 HFG.....emulator is executing in foreground memory.
 LILLOPC....illegal opcode detected.
 LILLMEM....illegal memory operation detected.
 LRESET.....target system has requested processor reset.
 LIRQ.....target system has requested processor interrupt.
 HTIMER.....target system has enabled processor timer to count.
 LICE.....emulator plug is in target system, and receiving +5v.

8-18. DEVELOPMENT STATION DATA BUS BUFFER, SCHEMATIC 1.

8-19. Data transfer from the controller to the development station is controlled by chips U4H and U4I. The data-out latch U4H drives the LD0-7 data bus when the development station reads emulation memory. The emulator board identification is placed on the LD0-7 bus by U4I when the development station requests the board ID. Four bits of ID come from the controller and four come from the attached emulator pod.

8-20. Data transfer to the controller from the development station is controlled by chip U4J. Data is received from the development station via the LD0-7 data bus and is buffered onto the LED0-7 data bus.

8-21. DEVELOPMENT STATION ADDRESS BUS BUFFER, SCHEMATIC 1.

8-22. The development station address bus LA0-15 is received by the controller at buffer/drivers U4D and U4E. These chips then drive the controller LEA0-15 address bus.

8-23. CONTROL LOGIC, SCHEMATIC 2.

8-24. The main elements of the control circuitry are the board select, memory access control, register address decoder, and write enable logic. These circuits control access to foreground memory, background memory, and various registers located on the controller. Three main tasks performed by the circuitry are as follows.

8-25. One, the logic arbitrates requests between the attached pod, and the development station. Second, the logic decides if the access is to foreground memory, background memory, or to various registers. Third, the controller implements the read, or write, as requested. The majority of this circuitry is shown on schematic 2. Foreground/background memory circuitry is shown on schematic 3.

8-26. BOARD SELECT LOGIC, SCHEMATIC 2.

8-27. The board select logic determines when the development station wants to access memory. This is done by decoding the LSTM, LSEL, LID, LA12 and LA13 to produce HMR (high memory request). The logic looks at BLMEM (buffered low memory) to determine when the pod is requesting a memory access.

8-28. MEMORY ACCESS CONTROL LOGIC, SCHEMATIC 2.

8-29. The memory access control logic arbitrates between development station and pod access. Queuing flip-flop U5K places competing requests into a queue, so only one request is serviced at a time. When the development station requests a memory access, the read/write logic decodes LA12 and LA13 at NOR gate U6L. When both lines are high, the access is to the various registers, and the register address decoder U5F is enabled. When LA12 is low, the access is to foreground or background memory (see schematic 3). In this case, signal LA13 is decoded by foreground memory gate U5I and background memory gate U4N.

8-30. When the attached emulator pod requests a memory access, the monostable multivibrator U2G generates LMSYN (low memory synch). This signal to the development station causes the station processor to hold off its memory operation until the line goes high, indicating the pod access is complete.

8-31. REGISTER ADDRESS DECODER, SCHEMATIC 2.

8-32. Decoder U5F controls development station access to the registers shown below.

- Pod Option Register
- Status Register
- Break Register
- Last Address Register
- Last Opcode (address) Register

8-33. WRITE ENABLE LOGIC, SCHEMATIC 2.

8-34. The write enable logic consists of AND-OR gate U6M and discrete linear components in an LRC network. The read enable logic is shown on schematic 3, and consists of AND-OR gate U5I for foreground memory and OR gate U4N for the background memory. The foreground memory RAM chips are selected by decoder U5C which decodes address lines LEA10-13.

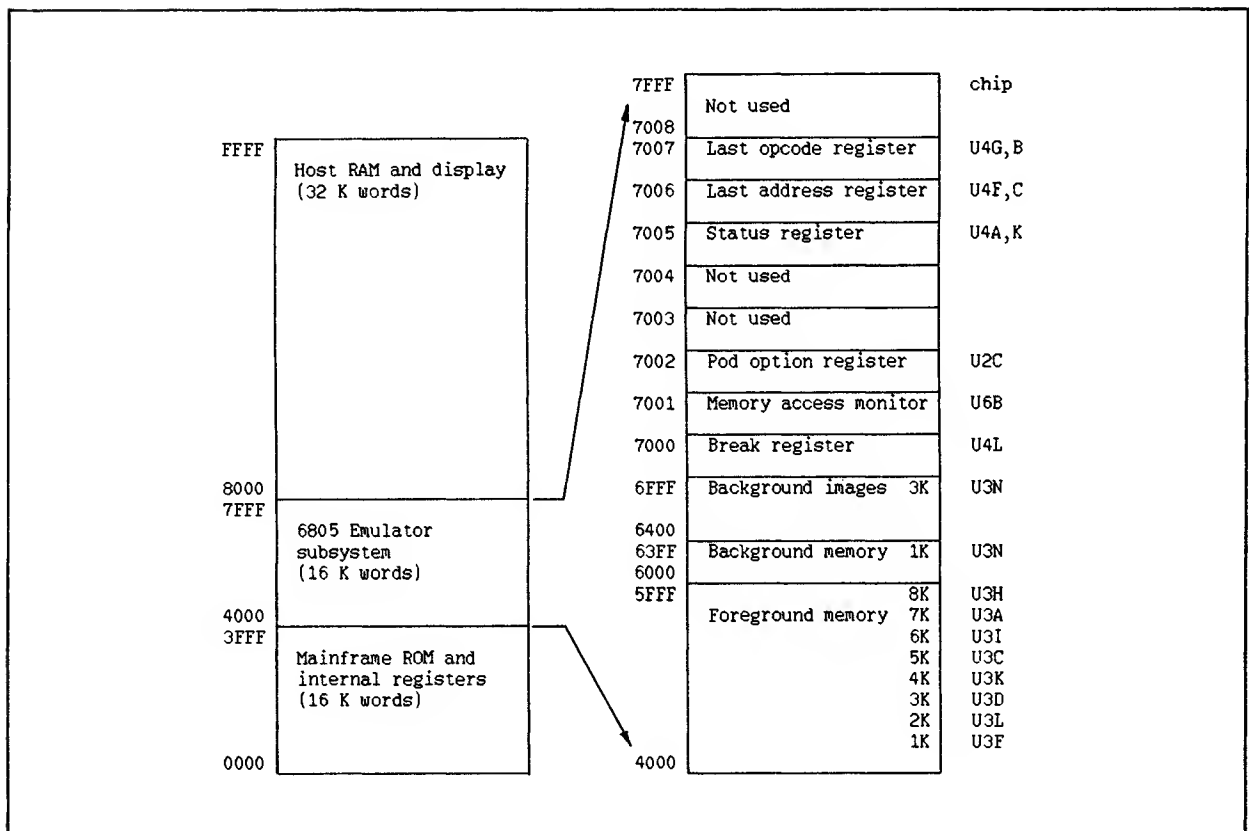


Figure 8-1. Emulator Memory Map

8-35. FOREGROUND/BACKGROUND MEMORY, SCHEMATIC 3.

8-36. The foreground memory consists of eight RAM chips. Each chip is a 2K x 8 bit RAM; however, pin 19 is grounded causing only the lower 1K of memory to be directly accessible. The background memory consists of a single RAM chip configured the same way as foreground memory.

8-37. Gates U5I and U4C decode foreground/background choices. Signal LA13 is decoded by foreground memory gate U5I and background memory gate U4N. Lines LEA10-12 are decoded by U5C to select the appropriate foreground RAM chip.

8-38. POD INTERFACE AND MEMORY MONITOR, SCHEMATIC 4.

8-39. This circuitry includes the pod data bus buffer, data bus jam buffer, pod address bus buffer, memory access monitor RAM, and port address detector. The circuitry allows the controller to transfer data to the attached pod and to monitor the addresses accessed by the pod.

8-40. POD DATA BUS BUFFER, SCHEMATIC 4.

8-41. Data transfers between the controller and attached emulator pod occur over the HD0-7 data bus. The data-in buffer/driver U2H receives the data from the pod and then drives it onto the LED0-7 data bus. Data is output from the controller to the attached pod by buffer/driver U1I.

8-42. DATA BUS JAM BUFFER, SCHEMATIC 4.

8-43. To force the emulator into background memory, buffer/driver U1H 'jams' the SWI opcode (software interrupt) onto the HD0-7 data bus.

8-44. POD ADDRESS BUS BUFFER, SCHEMATIC 4.

8-45. The controller receives addresses from the attached emulator pod. These addresses appear on the HEA0-15 address bus and are received by buffer/drivers U2D and U2E. These chips then drive the LEA0-15 address bus.

8-46. MEMORY ACCESS MONITOR RAM, SCHEMATIC 4.

8-47. RAM U1G monitors the foreground memory addresses accessed by the pod. Its data output lines indicate the type of memory being accessed; see below.

HGUARD.....when high, memory is outside range of 6805 being emulated.

HINT.....when high, memory is above address 63, ie. internal to the controller. When low, address is on-chip, ie. user memory.

HRAM.....when high, memory is mapped as RAM; when low, memory is mapped as ROM.

8-48. The memory access monitor is loaded by a development station write to address 7001H, which clears flip-flop U6B and allows the emulator pod write signal HPODWRT to be gated through U6A to the RAM. The final write to an address less than 0010H sets U6B and disables emulator processor writes to the memory access monitor.

8-49. PORT ADDRESS DETECTOR, SCHEMATIC 4.

8-50. Chip U2E is a NAND gate that monitors the address bus. Whenever an address in the range 0-15 is detected, its output LPORTS goes low. The addresses 0 - 15 are generally port or timer addresses, and are not mapped on the controller foreground memory.

8-51. LAST ADDRESS AND BREAK LOGIC, SCHEMATIC 5.

8-52. This circuitry consists of the last address registers and the break logic. It allows the controller to force breaks in emulator operation and record the last memory address accessed.

8-53. LAST ADDRESS REGISTERS, SCHEMATIC 5.

8-54. There are two registers on the controller that latch the address of a memory access. The last opcode register latches the memory address every time the pod processor reads in an opcode. This is accomplished by using the LOPCREG signal to clock the latches.

8-55. The last address register is clocked every time there is a foreground memory access. Whenever a break occurs, the break logic generates LBREAK which disables the clock inputs to the latches so that the registers cannot be written over. Later, the development station can read these registers to see what the last opcode address and the absolute last address were when the break occurred.

8-56. BREAK LOGIC, SCHEMATIC 5.

8-57. The break logic responds to breaks from the development station, from an attached internal analysis card on the emulation bus, and to breaks caused by illegal operations. The illegal opcode flip-flop U6C sets LBREAK whenever the user has chosen to break when an invalid opcode is detected. The illegal memory flip-flop U6B sets LBREAK when an illegal memory operation is detected. This occurs whenever an access is made to guarded memory. The user cannot override this action. When the user chooses to break on a write to memory mapped as ROM there is a break.

8-58. FOREGROUND/BACKGROUND LOGIC, SCHEMATIC 6.

8-59. Flip-flop U5H is the foreground/background controller, and when set, forces the emulator to execute in background memory. It is set by either the LDEFIB signal or the presence of a break. This causes jam flip-flop U6E and gate U6D to produce LJAM, which forces the emulation processor into a software interrupt (SWI opcode). The processor status is pushed onto its stack as the processor enters the background state.

8-60. The emulator is released from the background state by flip-flop U6F when the lastcycle of the opcode occurs and LEA10 goes low, indicating execution of an opcode at an address greater than 0400H. Background memory above 0400H is loaded with the RTI opcode (return to interrupt) and causes the processor to continue operation from the SWI point.

8-61. There are times when the emulator is executing in background that a memory access must be made to the user memory; such as when memory display is requested by the user. To do this, the background routine issues a write to a background address greater than 0400H. Gate U5G detects this by looking at the HREAD (pod), and LEA10 lines. When detected, user memory operation flip-flop U6F is set and the lower four data bits of the write are loaded into user memory operation counter U4M. When the counter reaches terminal count, the HFGMEM signal is enabled for one cycle, allowing the access to user memory. The emulator immediately returns to background after the operation.

8-62. POD INTERFACE AND OPCODE MONITOR, SCHEMATIC 7.

8-63. This circuitry includes control bit buffer/drivers, pod option bus, status bus, pod identification bus, and the opcode monitor logic. It allows operating information to be passed between the pod and controller, for the controller to monitor the opcodes being executed by the emulator processor.

8-64. CONTROL BIT BUFFER/DRIVERS, SCHEMATIC 7.

8-65. Chips U2A and U2B drive and receive several control bits that are transferred between the controller and the attached pod. Each of the signals is explained in the table of mnemonics, table 8-2.


8-66. OPCODE MONITOR LOGIC, SCHEMATIC 7.

8-67. Latch U2I latches each opcode read by the emulator pod. The outputs of the latch directly drive the address lines the 2K x 8 bit opcode monitor ROM U2J. The ROM data lines are always enabled and feed the opcode cycle counter U2L and the opcode status bit selector U1J.

8-68. The ROM data bits indicate if the opcode is a valid or not. This includes checking whether the opcode is valid for the 6805 microcomputer being emulated. Not all opcodes are valid for all versions of the 6805. When the opcode is valid, the ROM data bits also load the cycle counter with the number of machine cycles in the opcode. The counter then counts to terminal count which is the HLASTCYCLE line, which tells the controller the opcode is about to be finished.

8-69. The opcode status bit selector gates the opcode status bit from the opcode ROM through to the emulation bus, where it can be read by an attached software analyzer. The bit, LES2, indicates whether the opcode is a read or write, etc.

8-70. Flip-flop U5E detects when the emulator is in foreground memory and drives an input to AND gate U2M. The gate then generates the LANAL signal when the pod is accessing memory. Signal LANAL tells an attached analyzer that the emulation bus has valid information on it.

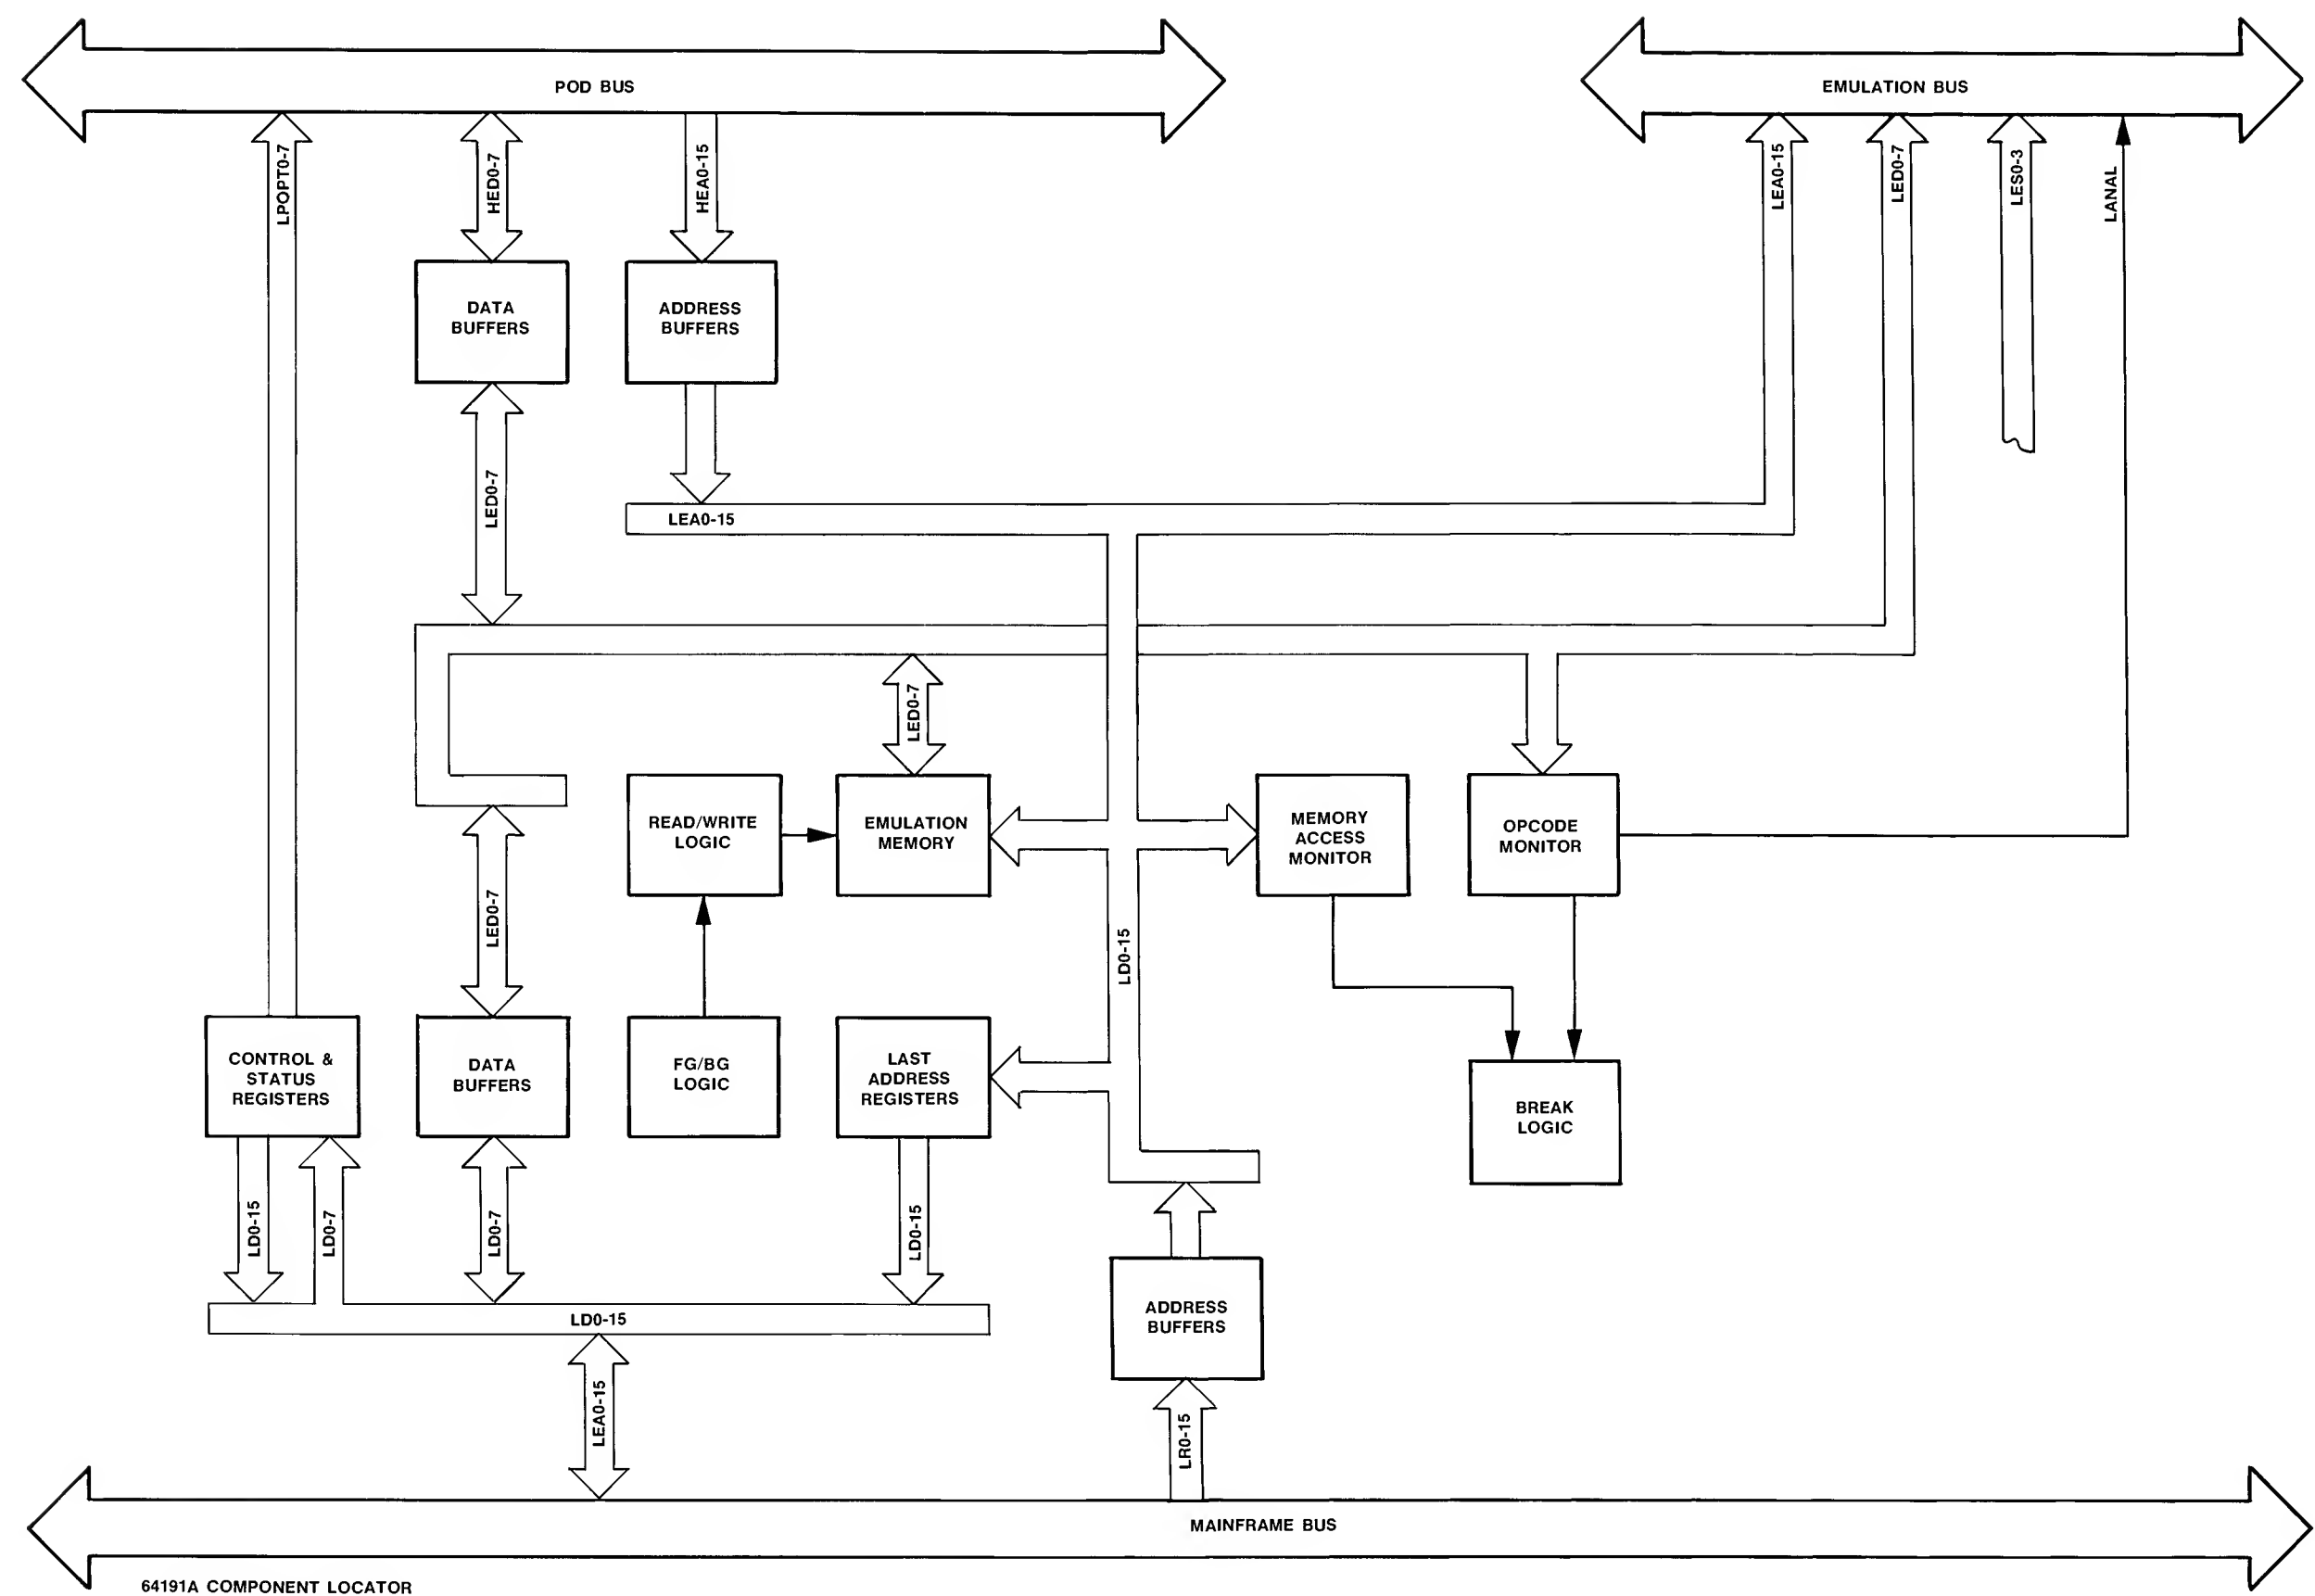

64191A COMPONENT LOCATOR

Figure 8-2. Emulator Controller Block Diagram
8-9

Table 8-1. Connector Signals

Connector P1			Connector J1	Connector J2	Connector J3	Connector J4
Schematic 1			Schematic 4	Schematic 7	Schematic 4	Schematic 7
Pin			Pin	Pin	Pin	Pin
1 gnd	53 SGND		1 HEA15	1 LBRK	1 LEA0	1 LMEM
2 gnd	54 SGND		2 gnd	2 not used	2 gnd	2 gnd
3 +5 v	55 LHSYN		3 HEA14	3 gnd	3 LEA1	3 LREAD
4 +5 v	56 LVSYN		4 gnd	4 gnd	4 gnd	4 gnd
5 -5.2 v	57 LVID		5 HEA13	5 LED0	5 LEA2	5 HOPFETCH
6 -5.2 v	58 LIVIDT		6 gnd	6 LED1	6 gnd	6 gnd
7 -5.2 v	59 SGND		7 HEA12	7 LED2	7 LEA3	7 LEXT
8 -5.2 v	60 SGND		8 gnd	8 LED3	8 gnd	8 +5 v
9 -3.2 v	61 LBYTE		9 HEA11	9 LED4	9 LEA4	9 BLRESET
10 -3.2 v	62 LUPB		10 gnd	10 LED5	10 gnd	10 gnd
11 -12 v	63 LSTB		11 HEA10	11 LED6	11 LEA5	11 LFG
12 -12 v	64 LSTB		12 gnd	12 LED7	12 gnd	12 +5 v
13 +12 v	65 LWRT		13 HEA9	13 gnd	13 LEA6	13 LPORTS
14 +12 v	66 LMSYN		14 gnd	14 gnd	14 gnd	14 gnd
15 +17 v-ret	67 LID		15 HEA8	15 LED8	15 LEA7	15 HUSER
16 +17 v	68 LMAP1		16 gnd	16 LED9	16 gnd	16 +5 v
17 +40 v	69 LMAP2		17 HEA7	17 LED10	17 LEA8	17 HFGMEM
18 not used	70 LMAP3		18 gnd	18 LED11	18 gnd	18 gnd
19 LA0	71 LIR1		19 HEA6	19 LED12	19 LEA9	19 HDEFIB
20 LA1	72 LSEL		20 gnd	20 LED13	20 gnd	20 +5 v
21 LA2	73 BNC4		21 HEA5	21 LED14	21 LEA10	21 LIR0
22 LA3	74 LOPC		22 gnd	22 LED 15	22 gnd	22 gnd
23 LA4	75 BNC3		23 HEA4	23 gnd	23 LEA11	23 HTIMER
24 LA5	76 LPOP		24 gnd	24 gnd	24 gnd	24 +5 v
25 LA6	77 BNC2		25 HEA3	25 LEBYT	25 LEA12	25 LPSTAT3
26 LA7	78 BNC1		26 gnd	26 gnd	26 gnd	26 gnd
27 LA8	79 SGND		27 HEA2	27 LEBUP	27 LEA13	27 LPSTAT4
28 LA9	80 SGND		28 gnd	28 gnd	28 gnd	28 +5 v
29 LA10	81 25MHz		29 HEA1	29 LREFREQ	29 LEA14	29 LPSTAT5
30 LA11	82 not used		30 gnd	30 gnd	30 gnd	30 gnd
31 LA12	83 +5 v		31 HEA0	31 HREFAK	31 LEA15	31 LPSTAT6
32 LA13	84 +5 v		32 gnd	32 gnd	32 gnd	32 gnd
33 LA14	85 gnd		33 HED7	33 LMBRKS	33 LEA16	33 LICE
34 LA15	86 gnd		34 gnd	34 gnd	34 LEA20	34 gnd
35 SGND			35 HED6	35 LBKG	35 LEA17	35 LPOPT0
36 SGND	To Development Station		36 gnd	36 gnd	36 LEA21	36 gnd
37 LD0			37 HED5	37 not used	37 LEA18	37 LPOPT1
38 LD1			38 gnd	38 gnd	38 LEA22	38 gnd
39 LD2			39 HED4	39 LANAL	39 LEA19	39 LPOPT2
40 LD3			40 gnd	40 gnd	40 LEA23	40 PID0
41 LD4			41 HED3	41 LES0	41 HMAV	41 LPOPT3
42 LD5			42 gnd	42 LES1	42 gnd	42 PID1
43 LD6			43 HED2	43 LES2	43 HREADY	43 LPOPT4
44 LD7			44 gnd	44 LES3	44 gnd	44 PID2
45 LD8			45 HED1	45 LES4	45 LEWRT	45 LPOPT5
46 LD9			46 gnd	46 LES5	46 gnd	46 PID3
47 LD10			47 HED0	47 LES6	47 LWDV	47 LPOPT6
48 LD11			48 gnd	48 LES7	48 gnd	48 +12 v
49 LD12			49 not used	49 gnd	49 HUSER	49 LPOPT7
50 LD13			50 -5.2 v	50 gnd	50 gnd	50 +12 v
51 LD14						
52 LD15			To Emulator Pod	To Internal Analyzer	To Emulator Pod	To Internal Analyzer

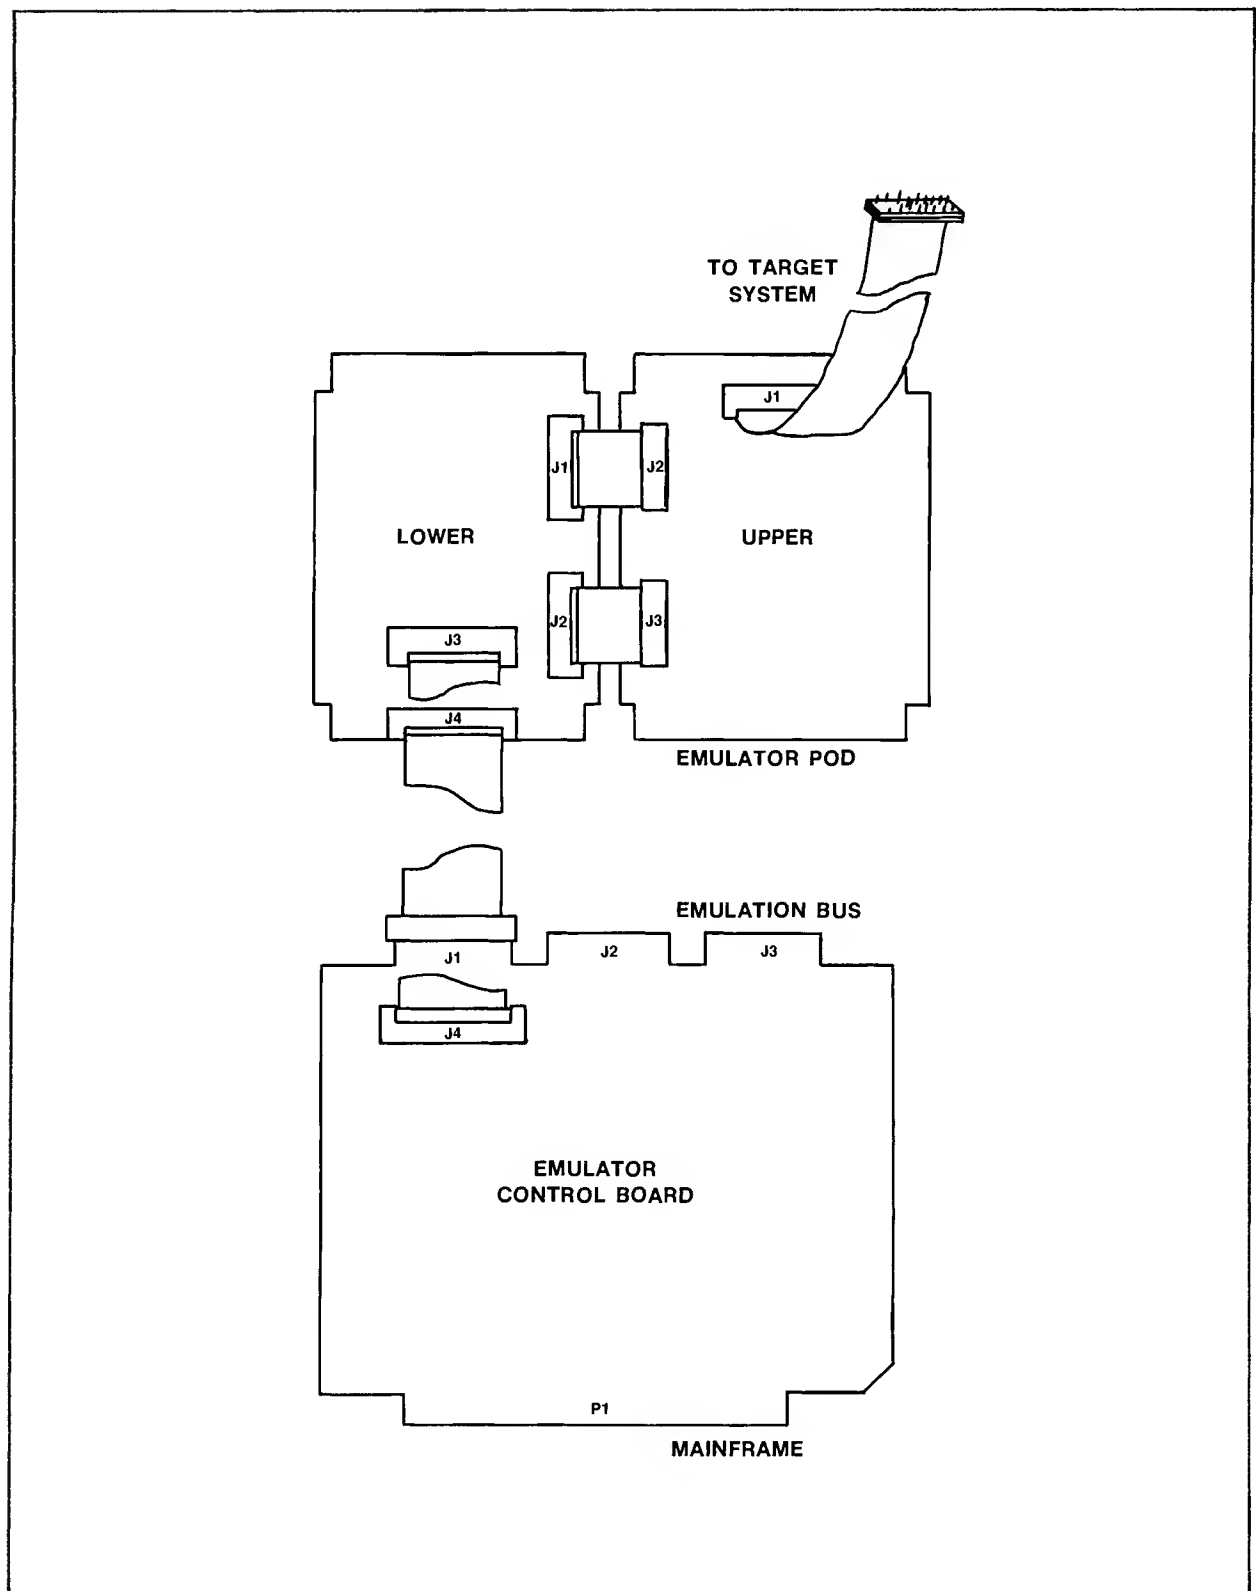


Figure 8-3. Connector Diagram

Table 8-2. Mnemonics

Mnemonic	Description
BLMEM	Buffered Low Memory (pod). Clock from pod processor. When low, address lines contain valid address. When high, data lines contain valid data. See also LMEM and HMEM. Schematics 2, 5, 6, 7*.
HBG	High Background. Indicates the emulator is executing in background memory. It is the complementary signal of HFG. Schematics 5, 6*.
HBGMEM	High Background Memory. Indicates the memory access is to background memory. It is inverted LBGMEM. Schematics 2, 6*.
HBPC	High BPC. Indicates the development station is accessing controller memory. It is inverted LBPC. Schematics 1, 2*, 3, 4.
HBRKREG	High Break Register. On rising edge, clocks the break register; latches break option bits sent by the development station. Schematics 1, 2*.
HDEFIB	High Defibrillate. Inverted LDEFIB; passed to attached pod to initialize it to a known state. Schematic 7.
HFG	High Foreground. Indicates the emulator is executing in foreground memory. It is inverted LFG. Schematics 1, 6*, 7.
HFGMEM	High Foreground Memory. Indicates the memory access is to foreground memory. Schematics 3, 5, 6*, 7.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonic	Description
HGUARD	High Guarded Memory. Indicates an attempt by the emulator processor to access memory beyond limits of the microcomputer being emulated. When low, the access is within valid memory range. Schematics 4*, 5.
HINT	High Internal Memory. Indicates the emulator processor is accessing the foreground memory above address 63, ie., memory internal to the controller. When low, indicates an access to foreground memory below 64, ie, on-chip user memory. Schematics 3, 4*, 5.
HLASTCYCLE	High Last Cycle. Indicates the emulator processor is executing the last machine cycle of an opcode. Complementary signal to LLASTCYCLE. Schematics 2, 6, 7*.
HMEM	High Memory (pod). Clock from pod processor. When high, address lines contain valid address. When high, data lines contain valid data. it is inverted LMEM. See also BLMEM. Schematics 5, 6, 7*.
HMEMBRK	High Memory Break. Control bit from development station; initializes break logic to stop the emulator when an illegal memory operation occurs. Schematics 1*, 5.
HMR	High Memory Request. Indicates the development station wants to access controller memory. It can be tested on TP 5, HMR. Schematic 2.
HOPFETCH	High Opcode Fetch. Indicates the emulator processor is fetching an opcode from memory. Schematics 5, 6, 7*.
HOPTREG	High Pod Option Register. On rising edge, clocks the pod option register; latches pod option bits sent by the development station. Schematics 1, 2*.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonic	Description
HPORTWRT	High Port Write. Indicates the emulator processor is writing to an address less than 16, ie., port/timer on-chip addresses. Schematics 2*, 6.
HPWRT	High Pod Write. Indicates the emulator processor is writing to memory. Schematic 2.
HRAM	High RAM. Indicates the emulator processor is accessing memory that is mapped as RAM. When low, indicates the access is that is mapped as ROM. Schematics 2, 4*, 5.
HREAD	High Read (pod). Indicates the emulator processor is reading data. It is derived from the LREAD line. Schematics 2, 3, 5, 6, 7*.
HSTATCLK	High Status Register Clock. On rising edge, clocks the emulator status register; latches status bits to be read by the development station. Schematics 1, 6*.
HTIMER	High Timer. Signal directly from user target system plug. Enables timer circuitry on the pod to count. It is used on the controller as a bit to indicate timer status. Schematics 1, 7*.
HUSER	High User. Indicates an emulator processor access to memory below 16. It is inverted LUSER. Can be tested on TP2, USER. Schematic 7.
LA0-15	Low Address Bus 0-15. Address bus from the development station processor. Uses negative logic; high = 0, low = 1. Schematic 1.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonics	Description
LA0	<p>Low Address Line 0. Address line from development station. It is decoded to determine the controller memory register being accessed. Uses negative logic; high = 0, low = 1. Schematics 1*, 2.</p>
LA1	<p>Low Address Line 1. Address line from development station. It is decoded to determine the controller register being accessed. Uses negative logic; high = 0, low = 1. Schematics 1*, 2.</p>
LA12	<p>Low Address Line 12. Address line from development station. It is decoded to determine if foreground or background memory is being accessed. Uses negative logic; high = 0, low = 1. Schematics 1*, 2.</p>
LA13	<p>Low Address Line 13. Address line from development station. It is decoded to determine if the controller registers are being accessed. Schematics 1*, 2, 3.</p>
LADDREG	<p>Low Address Register. Enables last-address register to drive LD0-15 data bus. Schematics 2*, 5.</p>
LANAL	<p>Low Analysis. Indicates to an attached internal analyzer option card that the emulation bus contains valid emulation information. Schematic 7.</p>
LBADOPC	<p>Low Bad Opcode. Indicates an invalid opcode has been detected. Schematics 5, 7*.</p>
LBGMEM	<p>Low Background Memory. Indicates the memory access is to background memory. See also HBGMEM. Schematics 3, 6*.</p>
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonics	Description
LBPC	Low BPC. Indicates the development station is accessing controller memory. When inverted, produces HBPC. It can be tested on TP1, BPC. Schematics 1, 2*, 3, 5.
LBPCBRK	Low BPC break. Signal from development station that forces the emulator processor into background memory. Schematics 1*, 5.
LBREAK	Low Break. Indicates an emulation break has occurred. Schematics 5*, 6.
LD0-15	Low Data Bus 0-15. Bidirectional data bus between the controller and the development station. Uses negative logic; high = 0, low = 1. Schematics 1*, 5*.
LDATAIN	Low Data In. Enables the development station to drive the LED0-7 data bus, ie., data comes into the controller. Schematics 1, 2*.
LDATAOUT	Low Data Out. Enables the emulator controller to drive the LED0-7 data bus, ie., data goes out of the controller. Schematics 1, 2*.
LDEFIB	Low Defibrillate. Signal from the development station that initializes the controller to a known state. When inverted, becomes HDEFIB. Schematics 1*, 2, 6, 7.
LEA0-12	Low Emulator Address Bus 0-12. Thirteen low order bits of LEA0-15. Determines address within 1K blocks of foreground and background memory. Uses negative logic; high = 0, low = 1. Schematics 3, 4*, 6.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonics	Descriptions
LEA0-15	<p>Low Emulator Address Bus 0-15. Address lines used by the emulator processor. Can be monitored by attached internal analyzer option card. These lines can also be driven by the development station to access controller memory. Uses negative logic; high = 0, low = 1. Schematics 1*, 4*, 5.</p>
LEBRK	<p>Low Emulator Break. Indicates an internal analysis option card is requesting the emulator to stop running in foreground memory. Schematics 5, 7*.</p>
LED0-3	<p>Low Emulator Data Bus 0-3. Four low order bits of LED0-7. Used to load the user memory operation counter. Schematics 1*, 3, 4, 6, 7.</p>
LED0-7	<p>Low Emulator Data Bus 0-7. Data bus used by the emulator processor. Can be monitored by attached internal analyzer option card. These lines can also be driven by the development station. Uses negative logic; high = 0, low = 1. Schematics 1*, 3, 4*, 7.</p>
LEMID	<p>Low Emulator Identification. Enables controller to drive the LD0-7 data bus with the controller and attached pod identification codes. Schematics 1, 2*.</p>
LES0-3	<p>Low Emulator Status Bus 0-3. Status bits made available to an attached internal analyzer option card; bit 0 = OPFETCH, 1 = LREAD, 2 = opcode status, 3 = opcode status. Schematic 7.</p>
LES2	<p>Low Emulator Status Line 2. Indicates opcode status. Schematics 5, 7*.</p>
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonic	Description
LEXT	Low External. Signal from development station; when low, selects external clock source on the users target system. When high, selects 4 MHz crystal located on the pod. Schematics 1*, 7.
LFG	Low Foreground. Indicates the emulator is executing in foreground memory. When inverted produces HFG. It is available on TP6, FG. Schematic 7.
LICE	Low In-circuit Emulation. Status bit from attached pod. Indicates target system plug is receiving +5v from user hardware. Schematics 1, 7*.
LID	Low Identification Request. Signal from development station; requests emulator identification be placed on the LDO-7 data bus. Also, see LEMID. Schematics 1*, 2.
LILLMEM	Low Illegal Memory. Indicates an error in addressing controller memory, such as a write to ROM-mapped memory or address out of range. Schematics 1, 5*.
LILLOPC	Low Illegal Opcode. Indicates the emulator processor has attempted to execute an illegal opcode. Schematics 1, 5*, 6.
LIRQ	Low Interrupt Request. Signal directly from target system plug; indicates the user hardware has issued an interrupt request. It is used by the controller as a bit to show processor status. Schematics 1, 7*
LJAM	Low Jam. Enables the controller to jam the software interrupt opcode SWI onto the data bus to the attached pod. It can be tested on TP4, JAM. Schematics 4, 5, 6*.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonics	Description
LLASTCYCLE	Low Last Cycle. Indicates the emulator processor is executing the last machine cycle of an opcode. Complementary signal to HLASTCYCLE. Schematics 6, 7*.
LMEM	Low Memory (pod). Clock from pod processor. When low, address lines contain valid address. When high, data lines contain valid data. See also BLMEM and HMEM. It can be tested on TP3, LMEM. Schematics 5, 7*.
LMEMMON	Low Memory Monitor. Enables memory access monitor RAM to be loaded with data. Schematics 2*, 4.
LMSYN	Low Memory Synchronization. Signal to development station; forces station to delay access to controller memory, until emulator processor has completed its memory access. Schematics 1, 2*.
LNCLK	Low No-clock. Indicates slow, or no clock, in the emulator pod. Schematics 1, 2*.
LOPCBRK	Low Opcode Break. Signal from development station that initializes controller break logic. Causes emulation break whenever an illegal opcode is found. Schematics 1*, 5.
LOPCREG	Low Opcode Register. Enables last-opcode register to drive the LD0-15 data bus; places the address of the last executed opcode on the bus. Schematics 2*, 5.
LPODIN	Low Pod Data In. Gates data from the attached pod onto the controller LED0-7 data bus. Schematics 4, 5*.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonics	Description
LPODOUT	Low Pod Data Out. Gates data from the controller out to the attached pod. Schematics 4, 5*.
LPOPT0-7	Low Pod Option Bus 0-7. Option control bits from the development station. The controller passes the bits to the attached pod. Schematics 1*, 7.
LPORTS	Low Ports. Indicates the emulator processor is accessing memory in the range 0-15. These addresses are primarily for ports/timer. Schematics 2, 4*, 7.
LPSTAT0-7	Low Pod Status Bus 0-7. Indicate status of attached pod. The following bits have specific assigned names: 0 = LRESET, 1 = LIRQ, 2 = HTIMER, 7 = LICE. Some bits function depend upon the attached emulator. Uses negative logic; high = 0, low = 1. Schematics 1, 7*.
LPSTAT3-6	Low Pod Status Bus 3-6. Variable function bits showing pod status. See LPSTAT0-7. Uses negative logic; high = 0, low = 1. Schematics 1, 7*.
LREAD	Low Read. Indicates the emulator processor is reading data. When inverted, becomes HREAD. Schematic 7.
LRESET	Low Reset. Status bit from attached pod; indicates the emulator processor is reset. Schematics 1, 7*.
LRESET1	Low Reset 1. Derived from LRESET; resets user memory operation cycle counter, and illegal memory flip-flop. Schematics 5, 7*.
* indicates signal source.	

Table 8-2. Mnemonics (Cont'd)

Mnemonics	Description
LROMBRK	Low ROM Break. Signal from development station that initializes break logic. Whenever the emulator processor attempts to write to memory mapped as ROM, the emulator stops. Schematics 1*, 5.
LSEL	Low Select. Signal from development station; indicates the controller is selected. Schematics 1*, 2.
LSTATREG	Low Status Register. Enables emulator status buffer to drive the LD0-7 data bus, ie., the controller writes the status to the development station. Schematics 1, 2*, 6.
LSTB	Low Strobe. Signal from development station; when low and in the write mode, indicates station is driving LD0-15 data bus. When low and in the read mode, it indicates that the controller can drive the data bus. Schematics 1*, 2.
LSTM	Low Start Memory. Signal from the development station; indicates the station is driving the LD0-15 data bus. Schematics 1*, 2.
LUSER	Low User. Indicates an emulator processor access to memory below 63. When inverted it produces HUSER. Schematics 5*, 7.
LWE	Low Write Enable. Enables foreground and background memory to be written to. Can be tested on TP 7, WE. Schematics 2*, 3.
LWRT	Low Write. Signal from development station; indicates the station is attempting to write to controller memory.
* indicates signal source.	

Table 8-3. Logic Symbols

GENERAL

All signals flow from left to right, relative to the symbol's orientation with inputs on the left side of the symbol, and outputs on the right side of the symbol (the symbol may be reversed if the dependency notation is a single term.)


All dependency notation is read from left to right (relative to the symbol's orientation).

An external state is the state of an input or output outside the logic symbol.


An internal state is the state of an input or output inside the logic symbol. All internal states are True = High.

SYMBOL CONSTRUCTION

Some symbols consist of an outline or combination of outlines together with one or more qualifying symbols, and the representation of input and output lines.

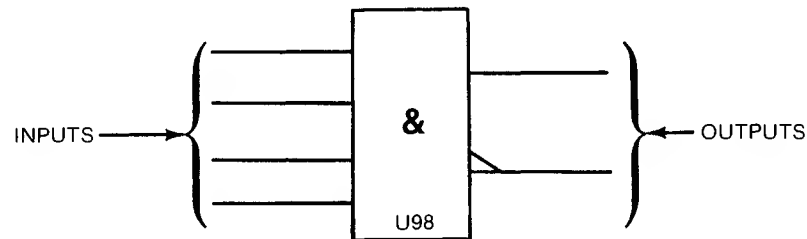

Some have a common Control Block with an array of elements:

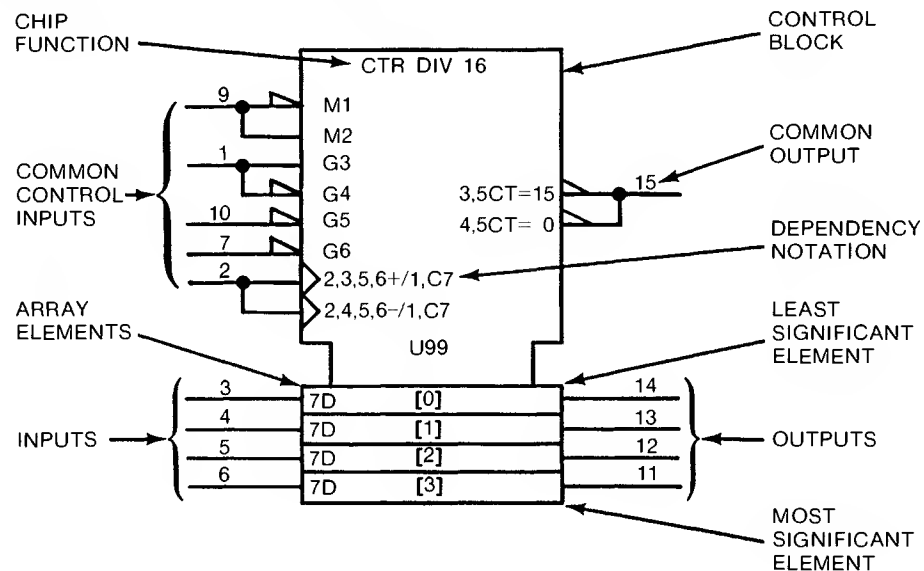

CONTROL BLOCK - All inputs and dependency notation affect the array elements directly. Common outputs are located in the control block. (Control blocks may be above or below the array elements.)

ARRAY ELEMENTS -All array elements are controlled by the control block as a function of the dependency notation. Any array element is independent of all other array elements. Unless indicated, the least significant element is always closest to the control block. The array elements are arranged by binary weight. The weights are indicated by powers of 2 (shown in []).

Table 8-3. Logic Symbols (Cont'd)

INPUTS - Inputs are located on the left side of the symbol and are affected by their dependency notation.

Common control inputs are located in the control block and control the inputs/outputs to the array elements according to the dependency notation.

Inputs to the array elements are located with the corresponding array element with the least significant element closest to the control block.

OUTPUTS - Outputs are located on the right side of the symbol and are effected by their dependency notation.

Common control outputs are located in the control block.

Outputs of array elements are located in the corresponding array element with the least significant bit closest to the control block.

CHIP FUNCTION - The labels for chip functions are defined, i.e., CTR - counter, MUX - multiplexer.

DEPENDENCY NOTATION

Dependency notation is always read from left to right relative to the symbol's orientation.

Dependency notation indicates the relationship between inputs, outputs, or inputs and outputs. Signals having a common relationship will have a common number, i.e., C7 and 7D....C7 controls D. Dependency notation 2,3,5,6+/1,C7 is read as when 2 and 3 and 5 and 6 are true, the input will cause the counter to increment by one count....or (/) the input (C7) will control the loading of the input value (7D) into the D flip-flops.

The following types of dependencies are defined:







 
 



 
 

 




 
 



 
- a. AND (G), OR (V), and Negate (N) denote Boolean relationship between inputs and outputs in any combination.
- b. Interconnection (Z) indicates connections inside the symbol.
- c. Control (C) identifies a timing input or a clock input of a sequential element and indicates which inputs are controlled by it.
- d. Set (S) and Reset (R) specify the internal logic states (outputs) of an RS bistable element when the R or S input stands at its internal 1 state.
- e. Enable (EN) identifies an enable input and indicates which inputs and outputs are controlled by it (which outputs can be in their high impedance state).
- f. Mode (M) identifies an input that selects the mode of operation of an element and indicates the inputs and outputs depending on that mode.
- g. Address (A) identifies the address inputs.
- h. Transmission (X) identifies bi-directional inputs and outputs that are connected together when the transmission input is true.

DEPENDENCY NOTATION SYMBOLS

A	Address (selects inputs/outputs) (indicates binary range)	N	Negate (complements state)
C	Control (permits action)	R	Reset Input
EN	Enable (permits action)	S	Set Input
G	AND (permits action)	V	OR (permits action)
M	Mode (selects action)	Z	Interconnection
		X	Transmission

Table 8-3. Logic Symbols (Cont'd)

OTHER SYMBOLS

	Analog Signal		Inversion		Shift Right (or down)
	AND		Negation		Solidus (allows an input or output to have more than one function)
	Bit Grouping		Nonlogic Input/Output		Tri-State
	Buffer		Open Circuit (external resistor)		Causes notation and symbols to effect inputs/outputs in an AND relationship, and to occur in the order read from left to right.
	Compare		Open Circuit (external resistor)		Used for factoring terms using algebraic techniques.
	Dynamic	≥ 1	OR		Information not defined.
\neq	Exclusive OR		Passive Pull Down (internal resistor)		Logic symbol not defined due to complexity.
	Hysteresis		Passive Pull Up (internal resistor)		
	Interrogation		Postponed		
	Internal Connection		Shift Left (or up)		

LABELS

BG	Borrow Generate	CO	Carry Output	J	J Input
BI	Borrow Input	CP	Carry Propagate	K	K Input
BO	Borrow Output	CT	Content	P	Operand
BP	Borrow Propagate	D	Data Input	T	Transition
CG	Carry Generate	E	Extension (input or output)	+	Count Up
CI	Carry Input	F	Function	-	Count Down

MATH FUNCTIONS

Σ	Adder	$>$	Greater Than
ALU	Arithmetic Logic Unit	$<$	Less Than
COMP	Comparator	CPG	Look Ahead Carry Generator
DIV	Divide By	π	Multiplier
=	Equal To	P-Q	Subtractor

CHIP FUNCTIONS

BCD	Binary Coded Decimal	DIR	Directional	RAM	Random Access Memory
BIN	Binary	DMUX	Demultiplexer	RCVR	Line Receiver
BUF	Buffer	FF	Flip-Flop	ROM	Read Only Memory
CTR	Counter	MUX	Multiplexer	SEG	Segment
DEC	Decimal	OCT	Octal	SRG	Shift Register

DELAY and MULTIVIBRATORS


 
 
 
 
	Astable
	Delay
	Nonretriggerable Monostable
NV	Nonvolatile
	Retriggerable Monostable

Table 8-4. Schematic Diagram Notes



ETCHED CIRCUIT BOARD

(925)

WIRE COLORS ARE GIVEN BY NUMBERS IN PARENTHESES USING THE RESISTOR COLOR CODE



FRONT PANEL MARKING



REAR-PANEL MARKING

[(925) IS WHT-RED-GRN]
0 - BLACK 5 - GREEN
1 - BROWN 6 - BLUE
2 - RED 7 - VIOLET
3 - ORANGE 8 - GRAY
4 - YELLOW 9 - WHITE



MANUAL CONTROL

* OPTIMUM VALUE SELECTED AT FACTORY, TYPICAL VALUE SHOWN; PART MAY HAVE BEEN OMITTED.



SCREWDRIVER ADJUSTMENT



TP1

ELECTRICAL TEST POINT TP (WITH NUMBER)

UNLESS OTHERWISE INDICATED:
RESISTANCE IN OHMS
CAPACITANCE IN PICO FARADS
INDUCTANCE IN MICROHENRIES



NUMBERED WAVEFORM NUMBER CORRESPONDS TO ELECTRICAL TEST POINT NO.

μP = MICROPROCESSOR
P/O = PART OF
NC = NO CONNECTION
CW = CLOCKWISE END OF VARIABLE RESISTOR



LETTERED TEST POINT NO MEASUREMENT AID PROVIDED



COMMON CONNECTIONS. ALL LIKE-DESIGNATED POINTS ARE CONNECTED.



NUMBER ON WHITE BACKGROUND = OFF-PAGE CONNECTION.
LARGE NUMBER ADJACENT = SERVICE SHEET NUMBER FOR OFF-PAGE CONNECTION.



CIRCLED LETTER = OFF-PAGE CONNECTION BETWEEN PAGES OF SAME SERVICE SHEET.



INDICATES SINGLE SIGNAL LINE

NUMBER OF LINES ON A BUS


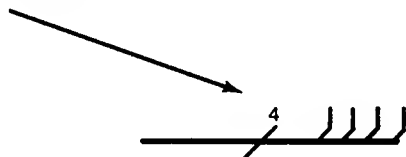


Table 8-5. IC To Schematic Cross-Reference

IC	Schematic	IC	Schematic
U1G	4	U5A	7
U1H	4	U5B	5
U1I	4	U5C	3
U1J	7	U5D	7
U1K	5	U5E	7
		U5F	2
U2A	7	U5G	6
U2B	4, 7	U5H	6
U2C	1	U5I	3
U2D	4	U5J	2
U2E	4	U5K	2
U2F	4	U5L	2
U2G	2	U5M	2, 5, 6
U2H	4	U5N	2
U2I	7		
U2J	7	U6A	2, 5
U2L	7	U6B	2, 5
U2M	5, 7	U6C	5
U2N	5	U6D	6, 7
		U6E	6, 7
U3A	3	U6F	6
U3C	3	U6G	6
U3D	3	U6H	2, 6
U3F	3	U6I	2, 6
U3H	3	U6J	2, 7
U3I	3	U6K	2
U3K	3	U6L	2
U3L	3	U6M	2
U3N	3		
U4A	1		
U4B	5		
U4C	5		
U4D	1		
U4E	1		
U4F	5		
U4G	5		
U4H	1		
U4I	1		
U4J	1		
U4K	1		
U4L	1		
U4M	6		
U4N	2, 3		



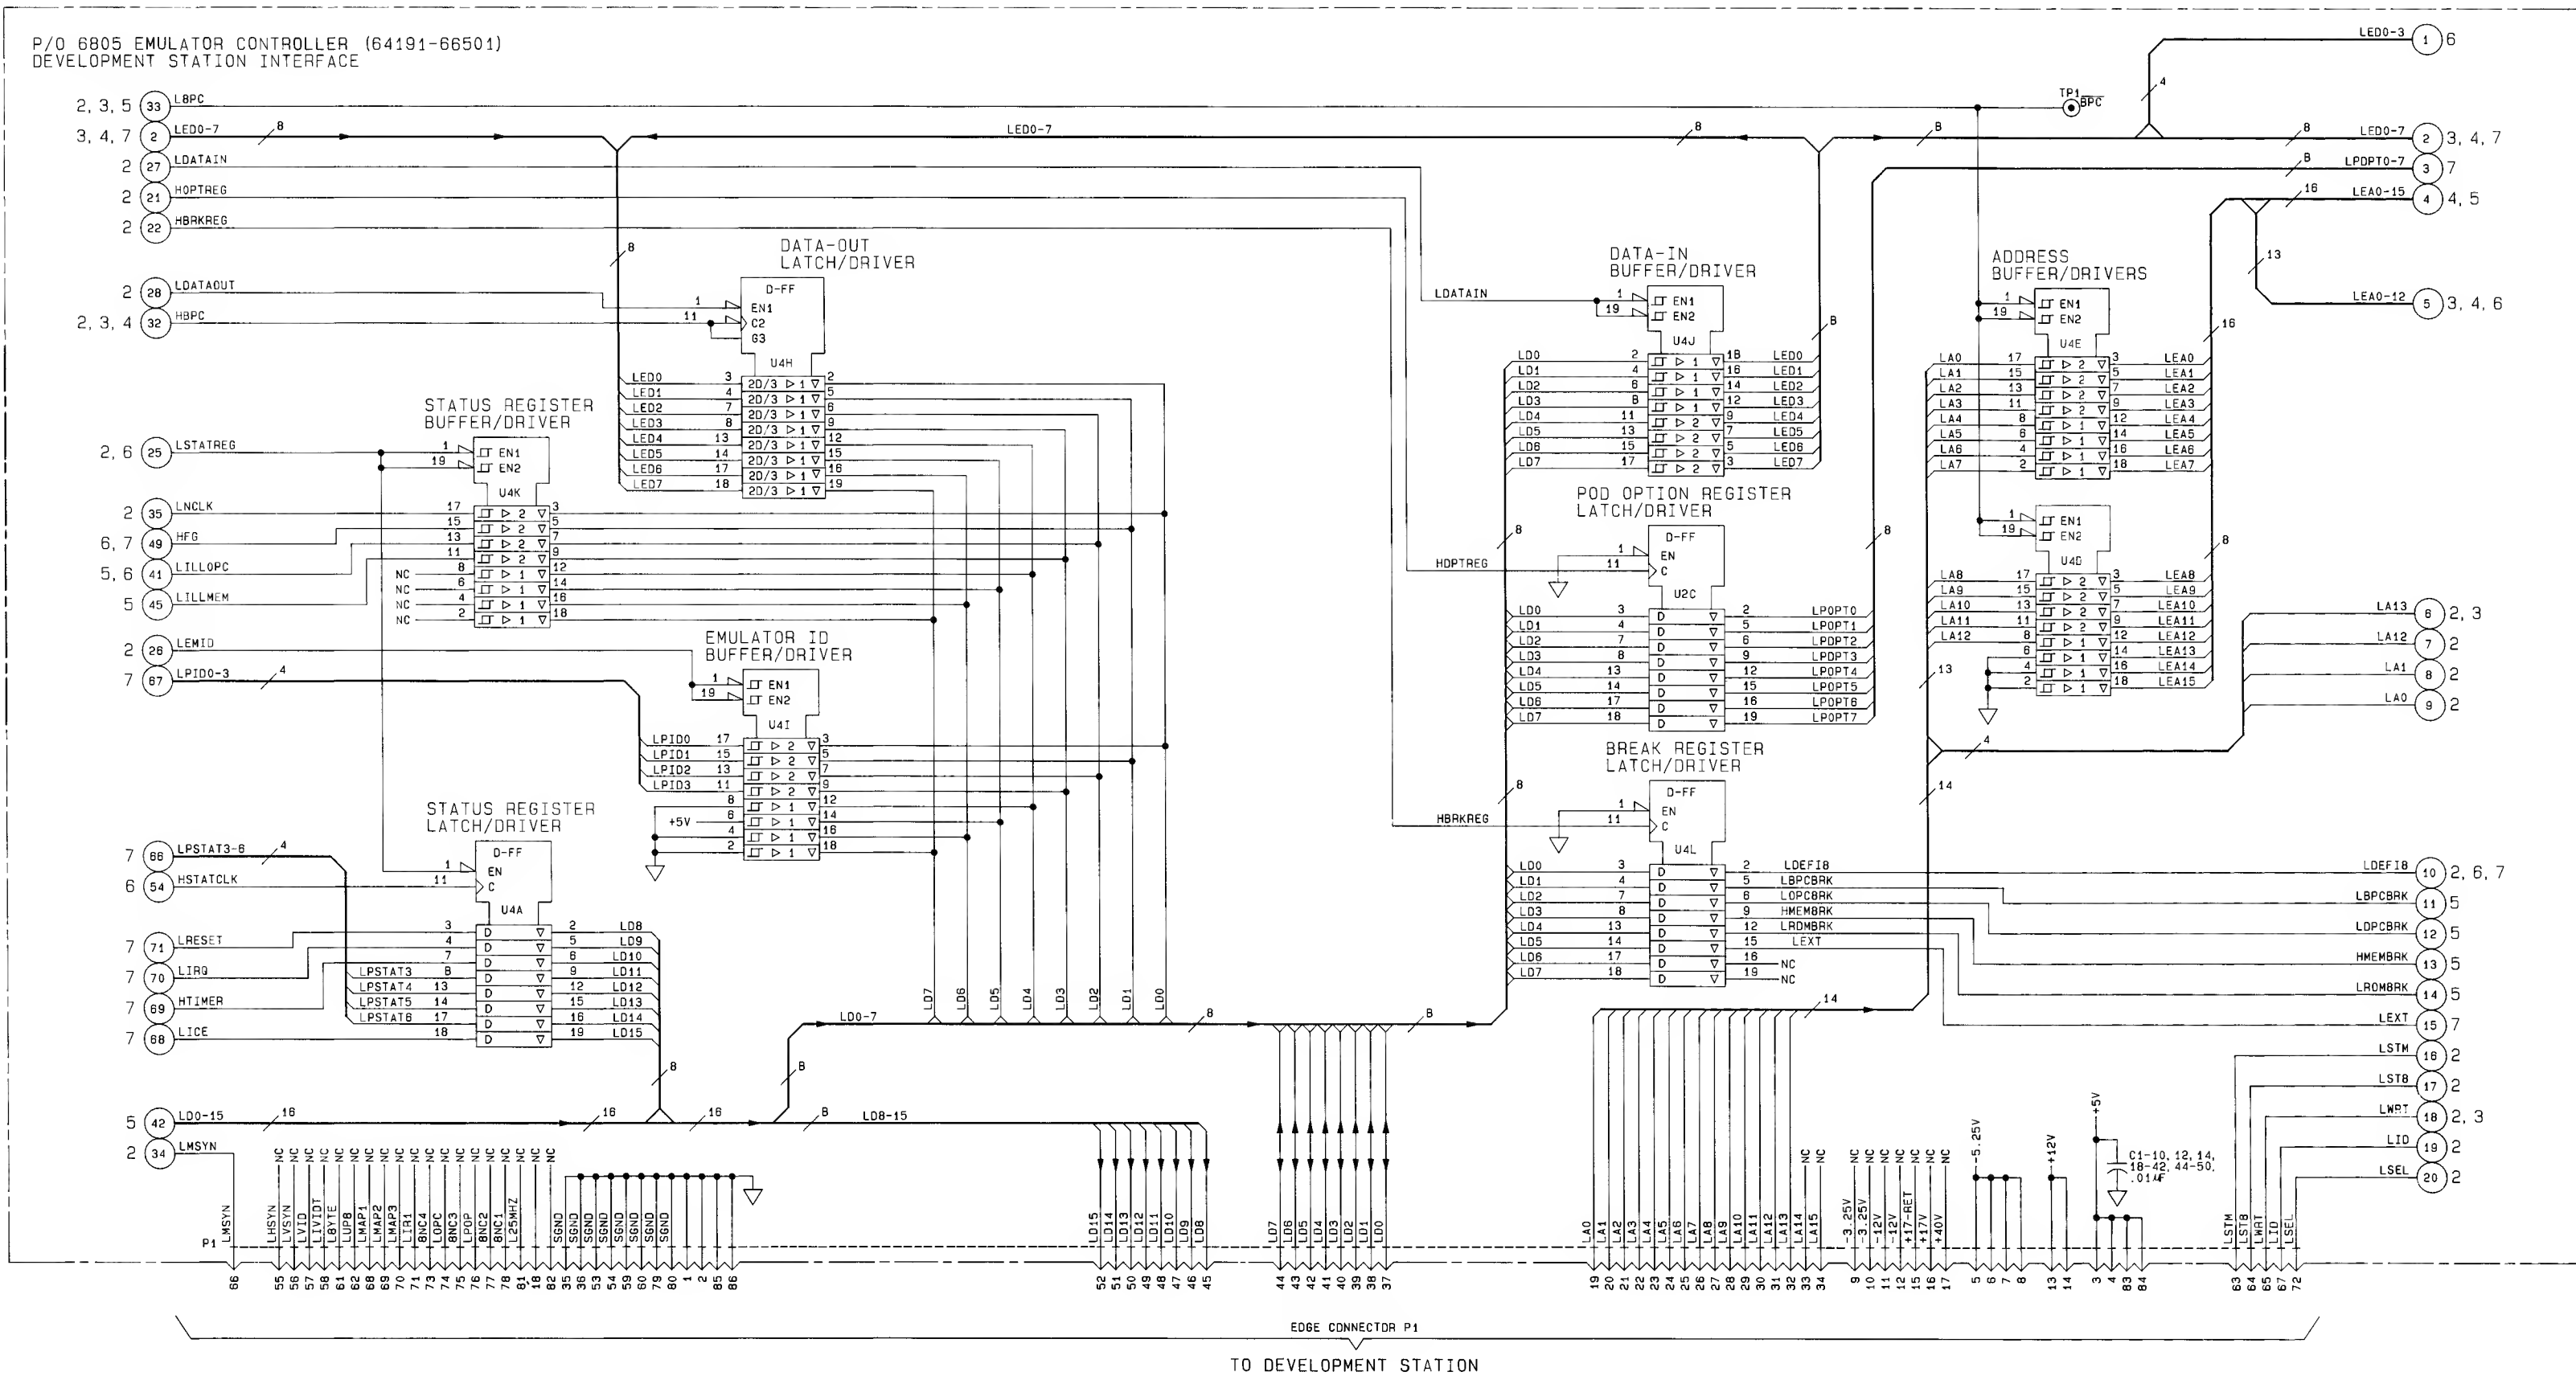

ICs On This Schematic

REF DES	HP PART NUMBER	MFG. PART NUMBER	+5V PIN	GND PIN
U2C	1820-1997	SN74LS374N	20	10
U4A	1820-1997	SN74LS374N	20	10
U4D	1820-2024	SN74LS244N	20	10
U4E	1820-2024	SN74LS244N	20	10
U4H	1820-2102	SN74LS373N	20	10
U4I	1820-1917	SN74LS240N	20	10
U4J	1820-2024	SN74LS244N	20	10
U4K	1820-2024	SN74LS244N	20	10
U4L	1820-1997	SN74LS374N	20	10

Parts On This Schematic

C1-10,12,14,15,18-42,44-50.

Figure 8-4. Schematic 1
Development Station Interface
8-29

8-30

ICs On This Schematic

REF. DES	HP PART NUMBER	MFG. PART NUMBER	+5V PIN	GND PIN
U2G	1820-1423	SN74LS123N	16	8
U4N	1820-1144	SN74LS02N	14	7
U5F	1820-1216	SN74LS138N	16	8
U5J	1820-1202	SN74LS10N	14	7
U5K	1820-1112	SN74LS74AN	14	7
U5L	1820-1197	SN74LS00N	14	7
U5M	1820-1199	SN74LS04N	14	7
U5N	1820-1307	SN74S132N	14	7
U6A	1820-1197	SN74LS00N	14	7
U6B	1820-1112	SN74LS74AN	14	7
U6H	1820-1144	SN74LS02N	14	7
U6I	1820-1202	SN74LS10N	14	7
U6J	1820-1199	SN74LS04N	14	7
U6K	1820-1274	SN74LS22N	14	7
U6L	1820-1144	SN74LS02N	14	7
U6M	1820-1285	SN74LS54N	14	7

Parts On This Schematic

C1,51,43.	L1,2.
CR1,2,3,4.	R3,6,7,8.


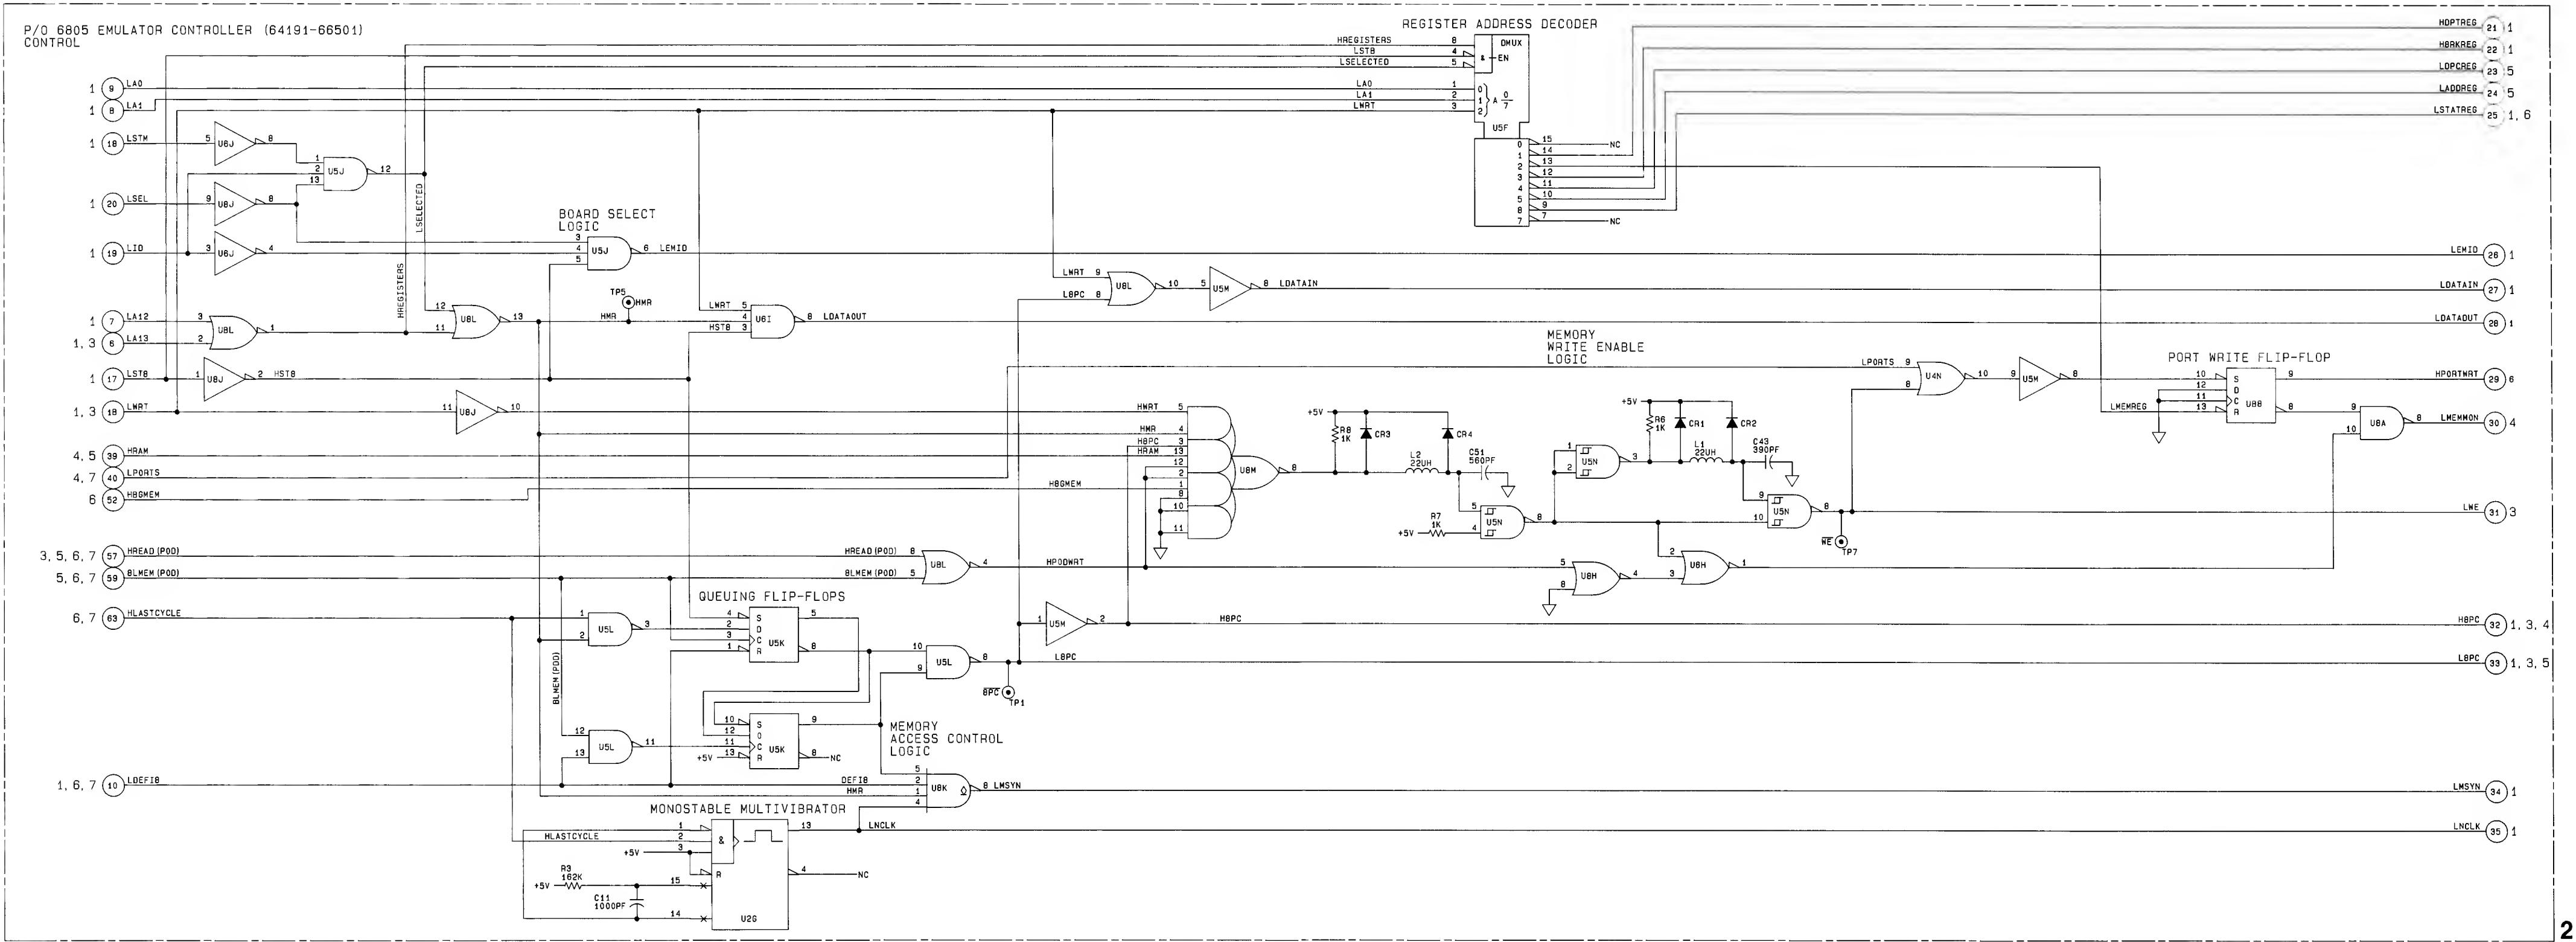


Figure 8-5. Schematic 2
Control
8-31

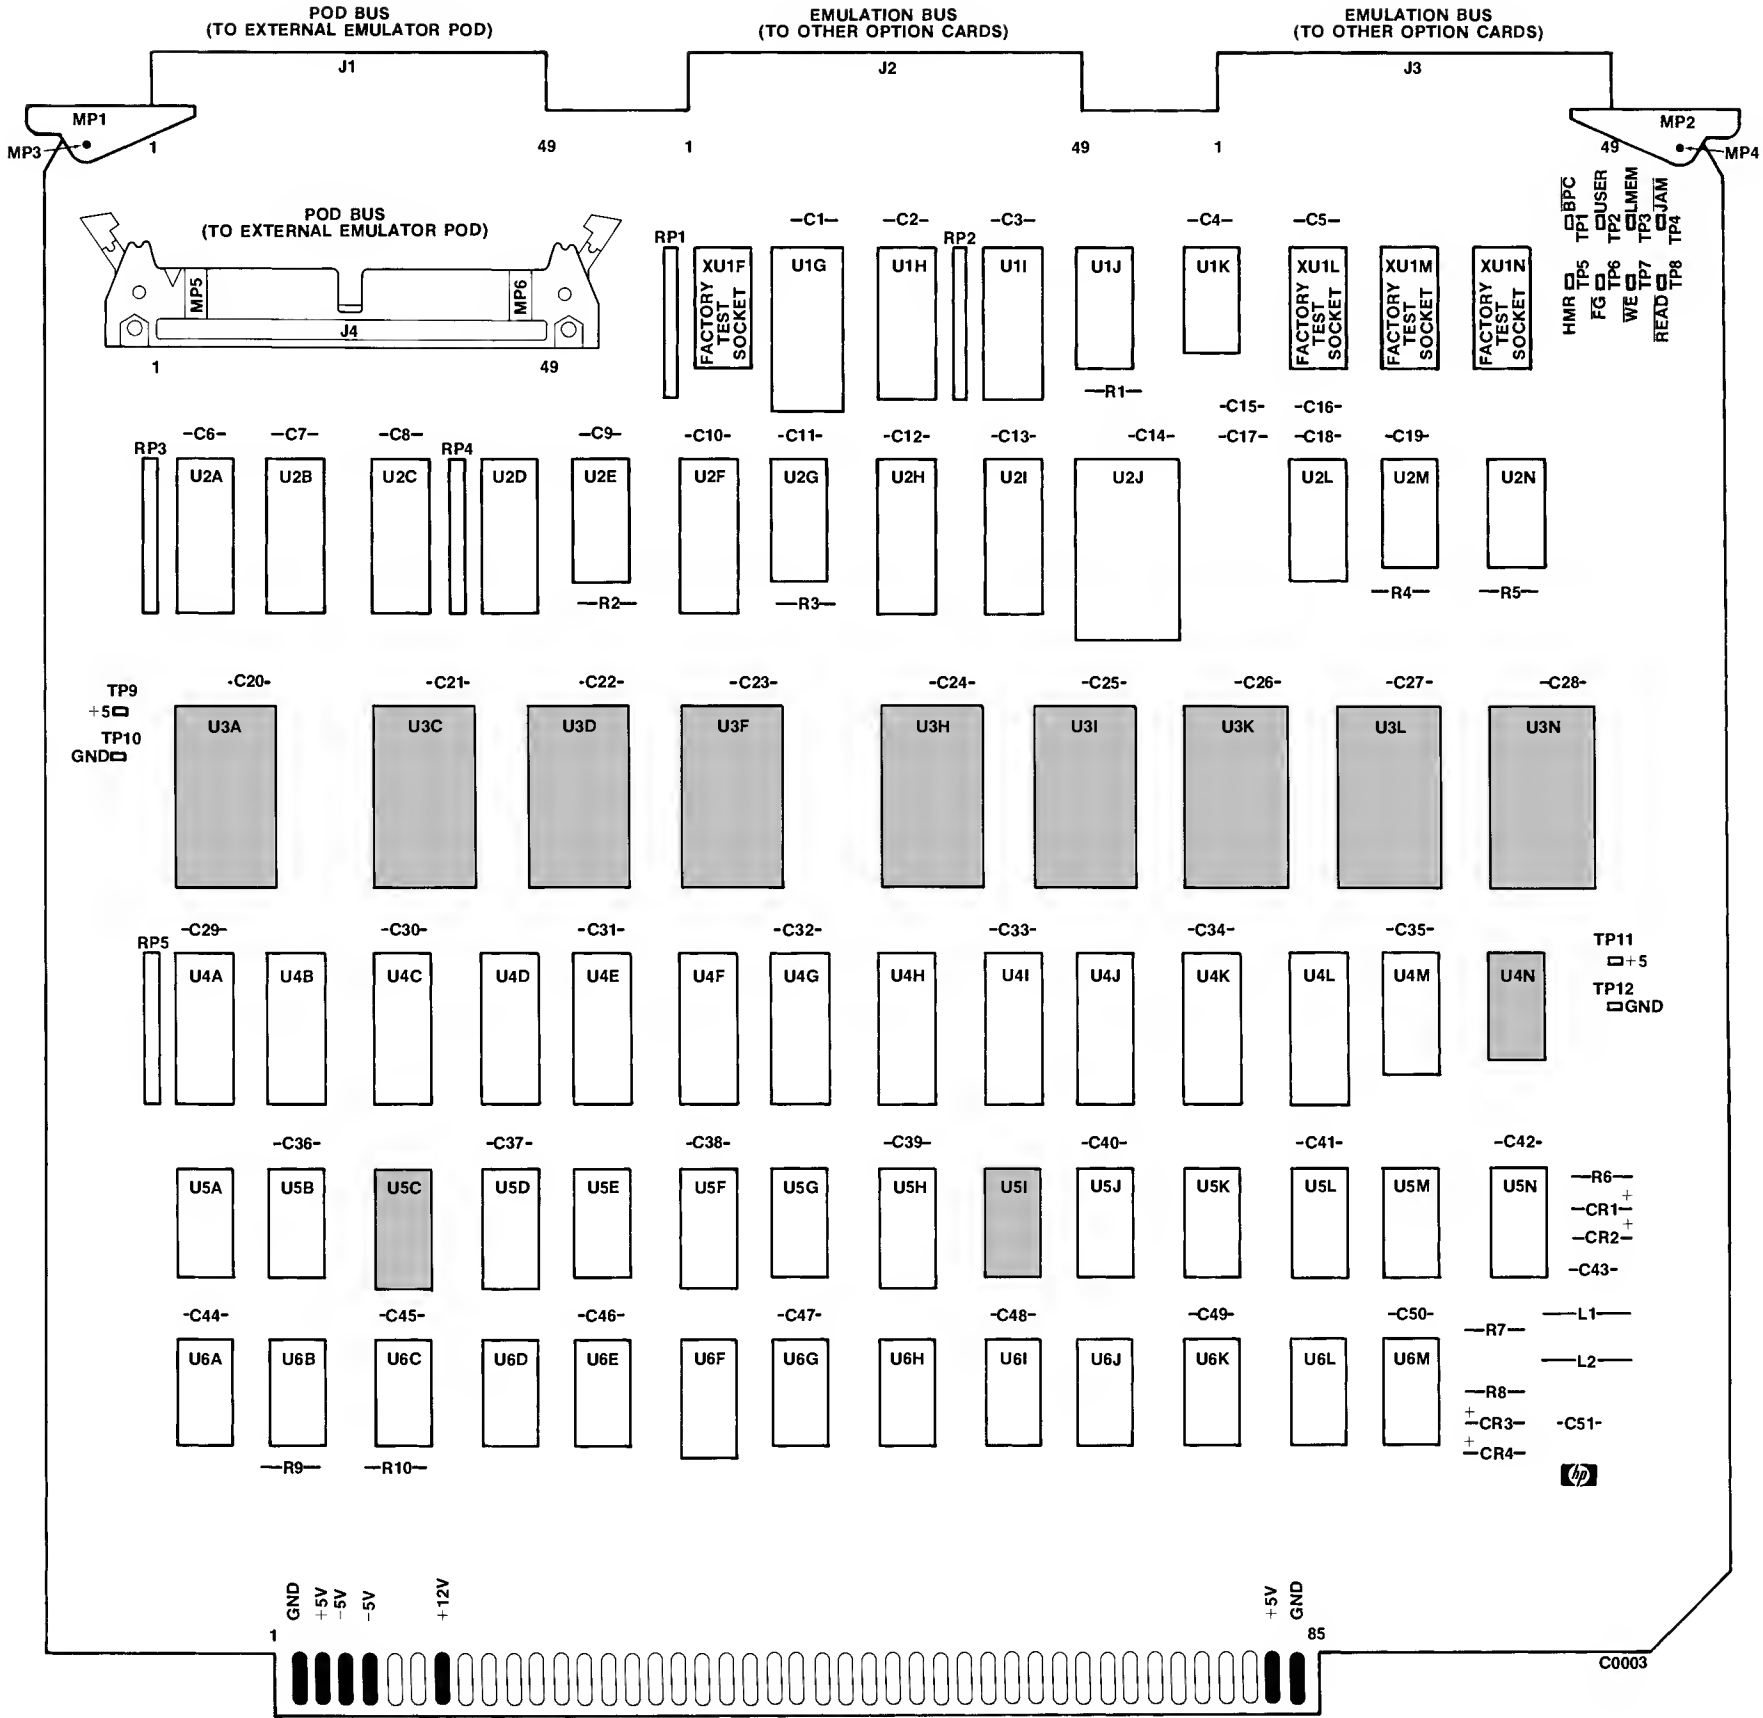

Component Locator

ICs On This Schematic

REF. DES	HP PART NUMBER	MFG. PART NUMBER	+5V PIN	GND PIN
U3A	1818-1611	HM6116P-3	24	12
U3C	1818-1611	HM6116P-3	24	12
U3D	1818-1611	HM6116P-3	24	12
U3F	1818-1611	HM6116P-3	24	12
U3H	1818-1611	HM6116P-3	24	12
U3I	1818-1611	HM6116P-3	24	12
U3K	1818-1611	HM6116P-3	24	12
U3L	1818-1611	HM6116P-3	24	12
U3N	1818-1611	HM6116P-3	24	12
U4N	1820-1144	SN74LS02N	14	7
U5C	1820-1216	SN74LS138N	16	8
U5I	1820-1210	SN74LS51N	14	7


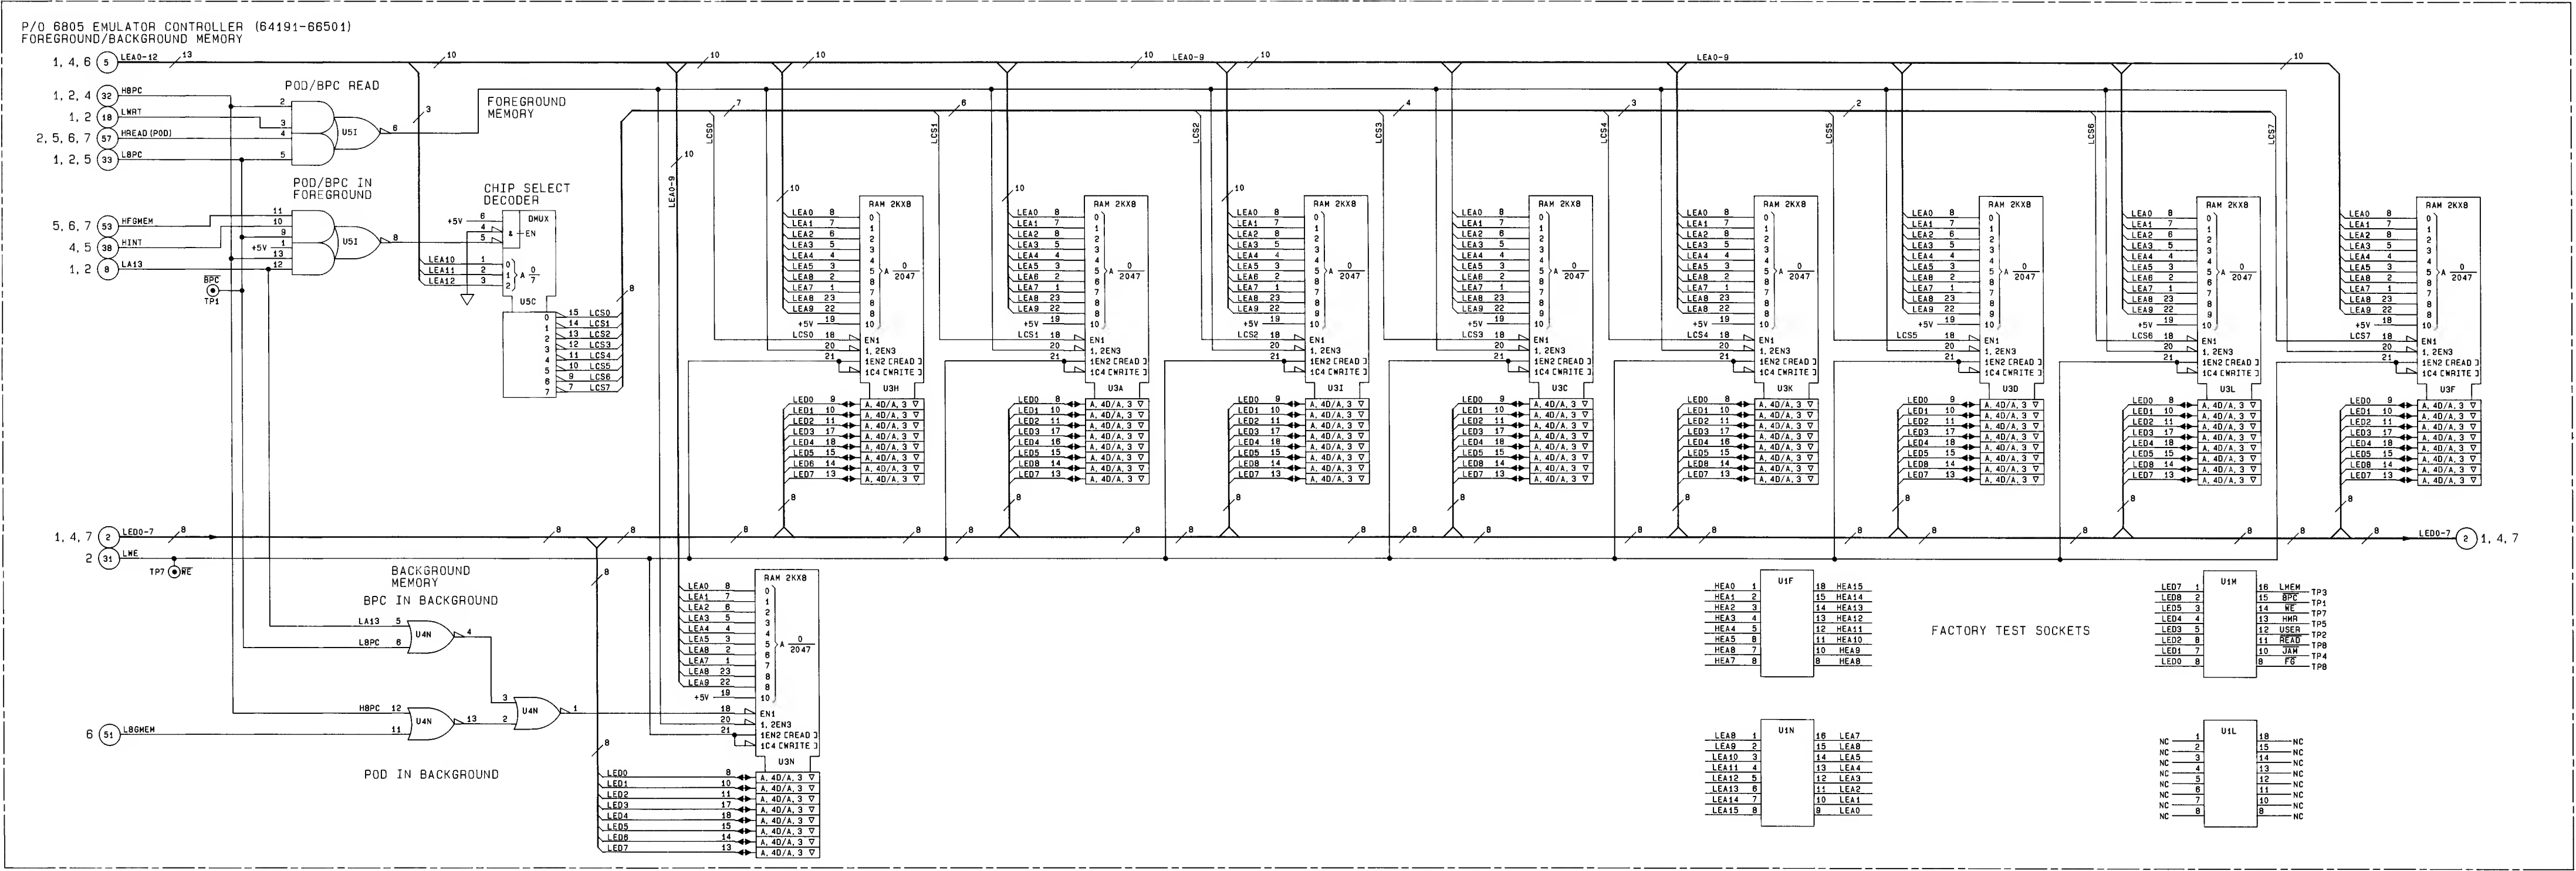


Figure 8-6. Schematic 3
Foreground/Background Memory
8-33

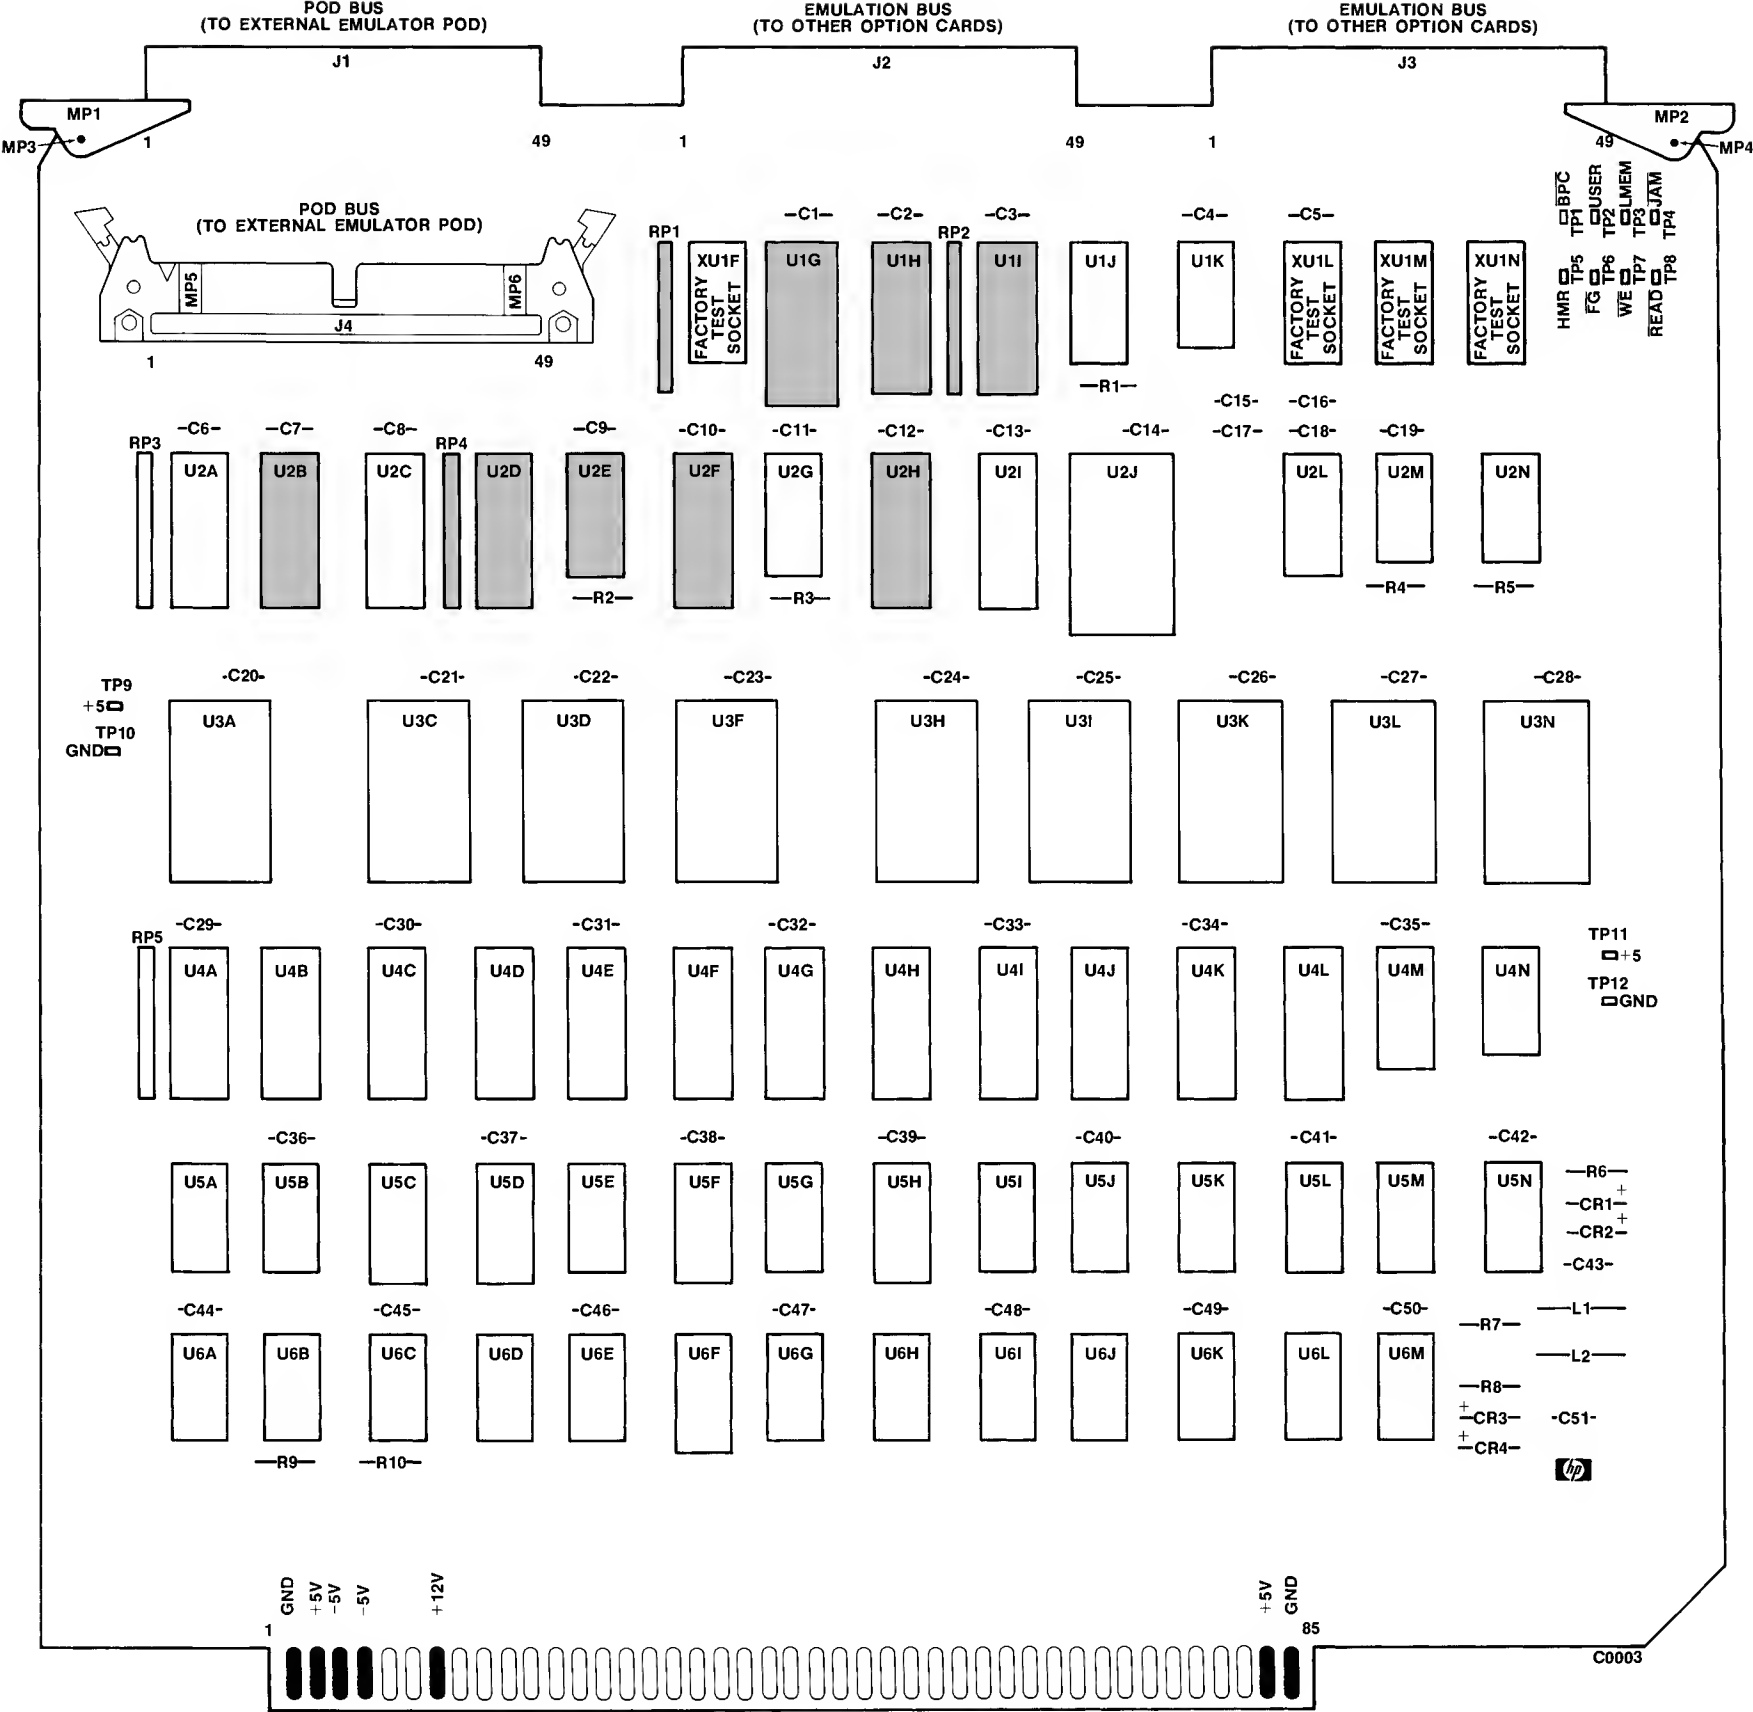

ICs On This Schematic

REF. DES	HP PART NUMBER	MFG. PART NUMBER	+5V PIN	GND PIN
U1G	1816-1308	93L422PC	22	8
U1H	1820-1633	SN74S240N	20	10
U1I	1820-1633	SN74S240N	20	10
U2B	1820-1633	SN74S240N	20	10
U2D	1820-1917	SN74LS240N	20	10
U2E	1820-1130	SN74S133N	16	8
U2F	1820-1917	SN74LS240N	20	10
U2H	1820-1917	SN74LS240N	20	10

Parts On This Schematic

R1,2.

RP1, 2, 4.

NOTE A





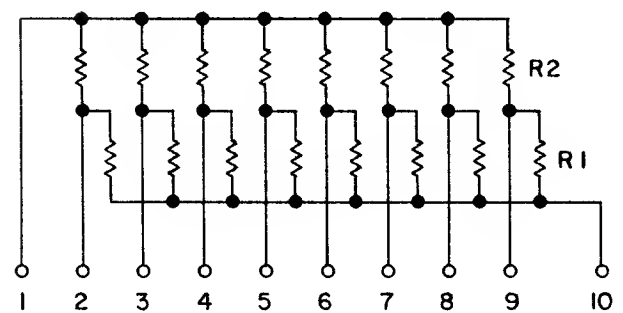


Figure 8-7. Service Sheet 4
Pod Interface and Memory Monitor
8-35

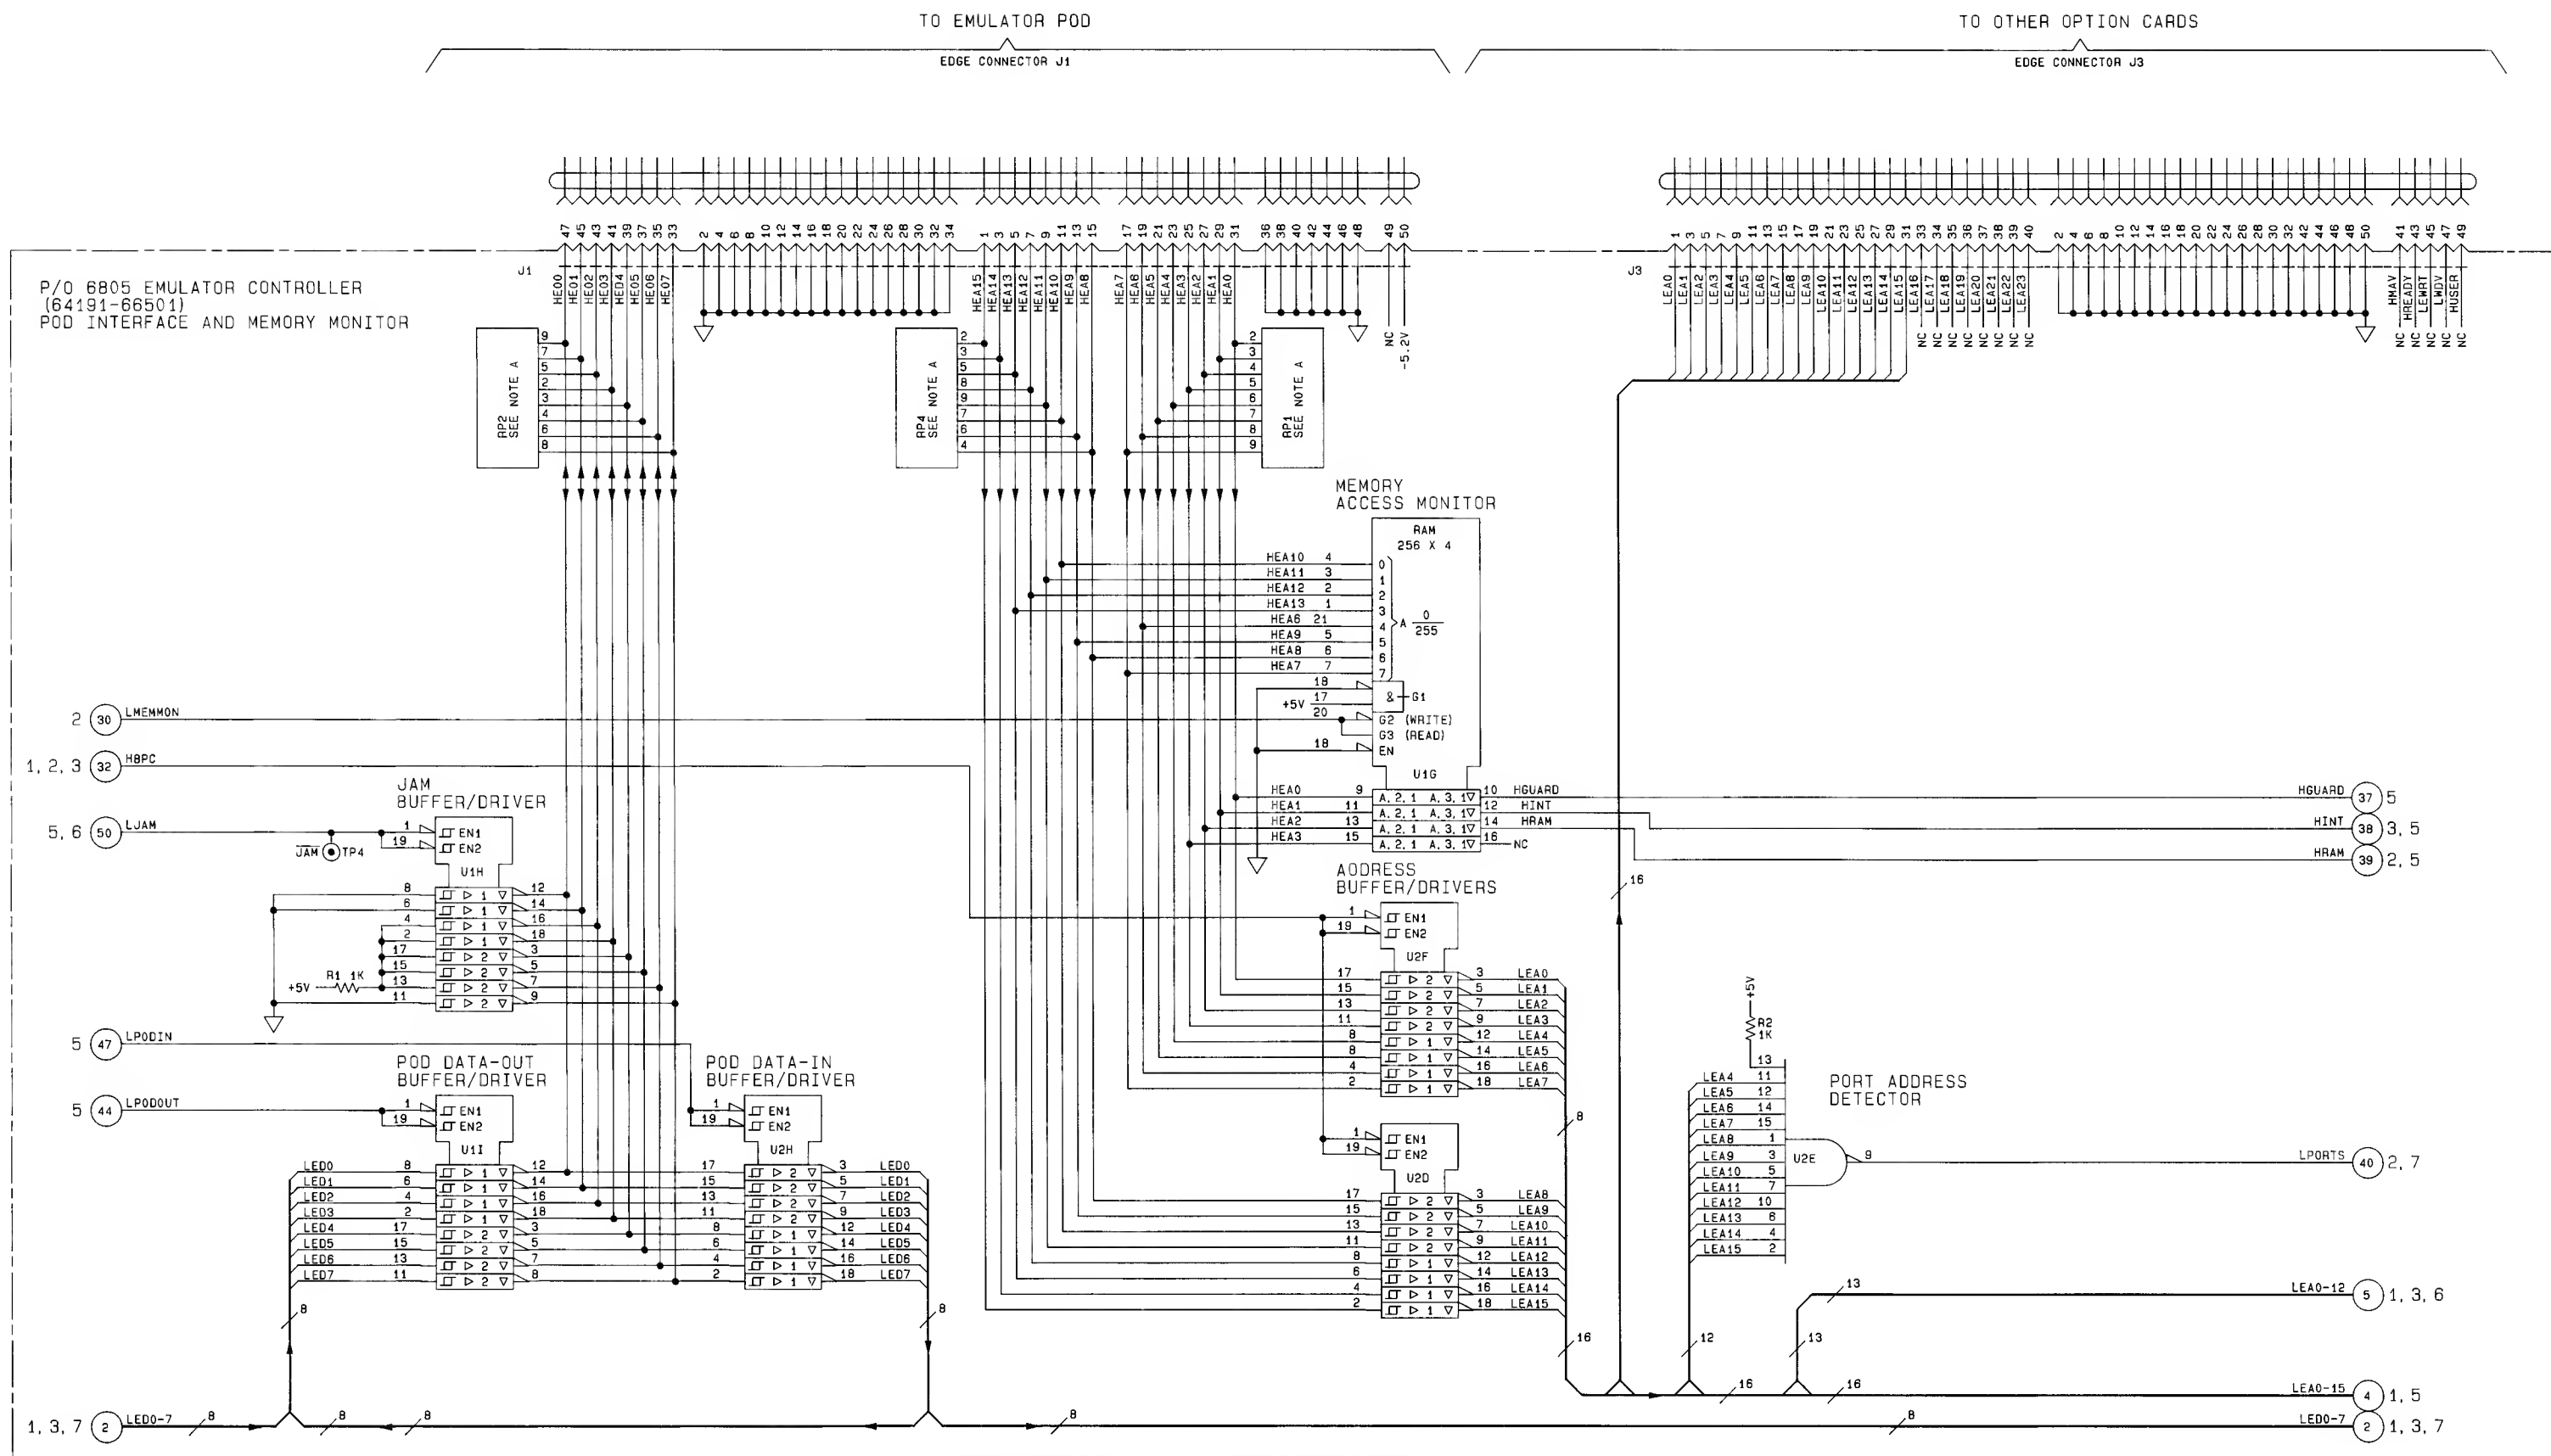

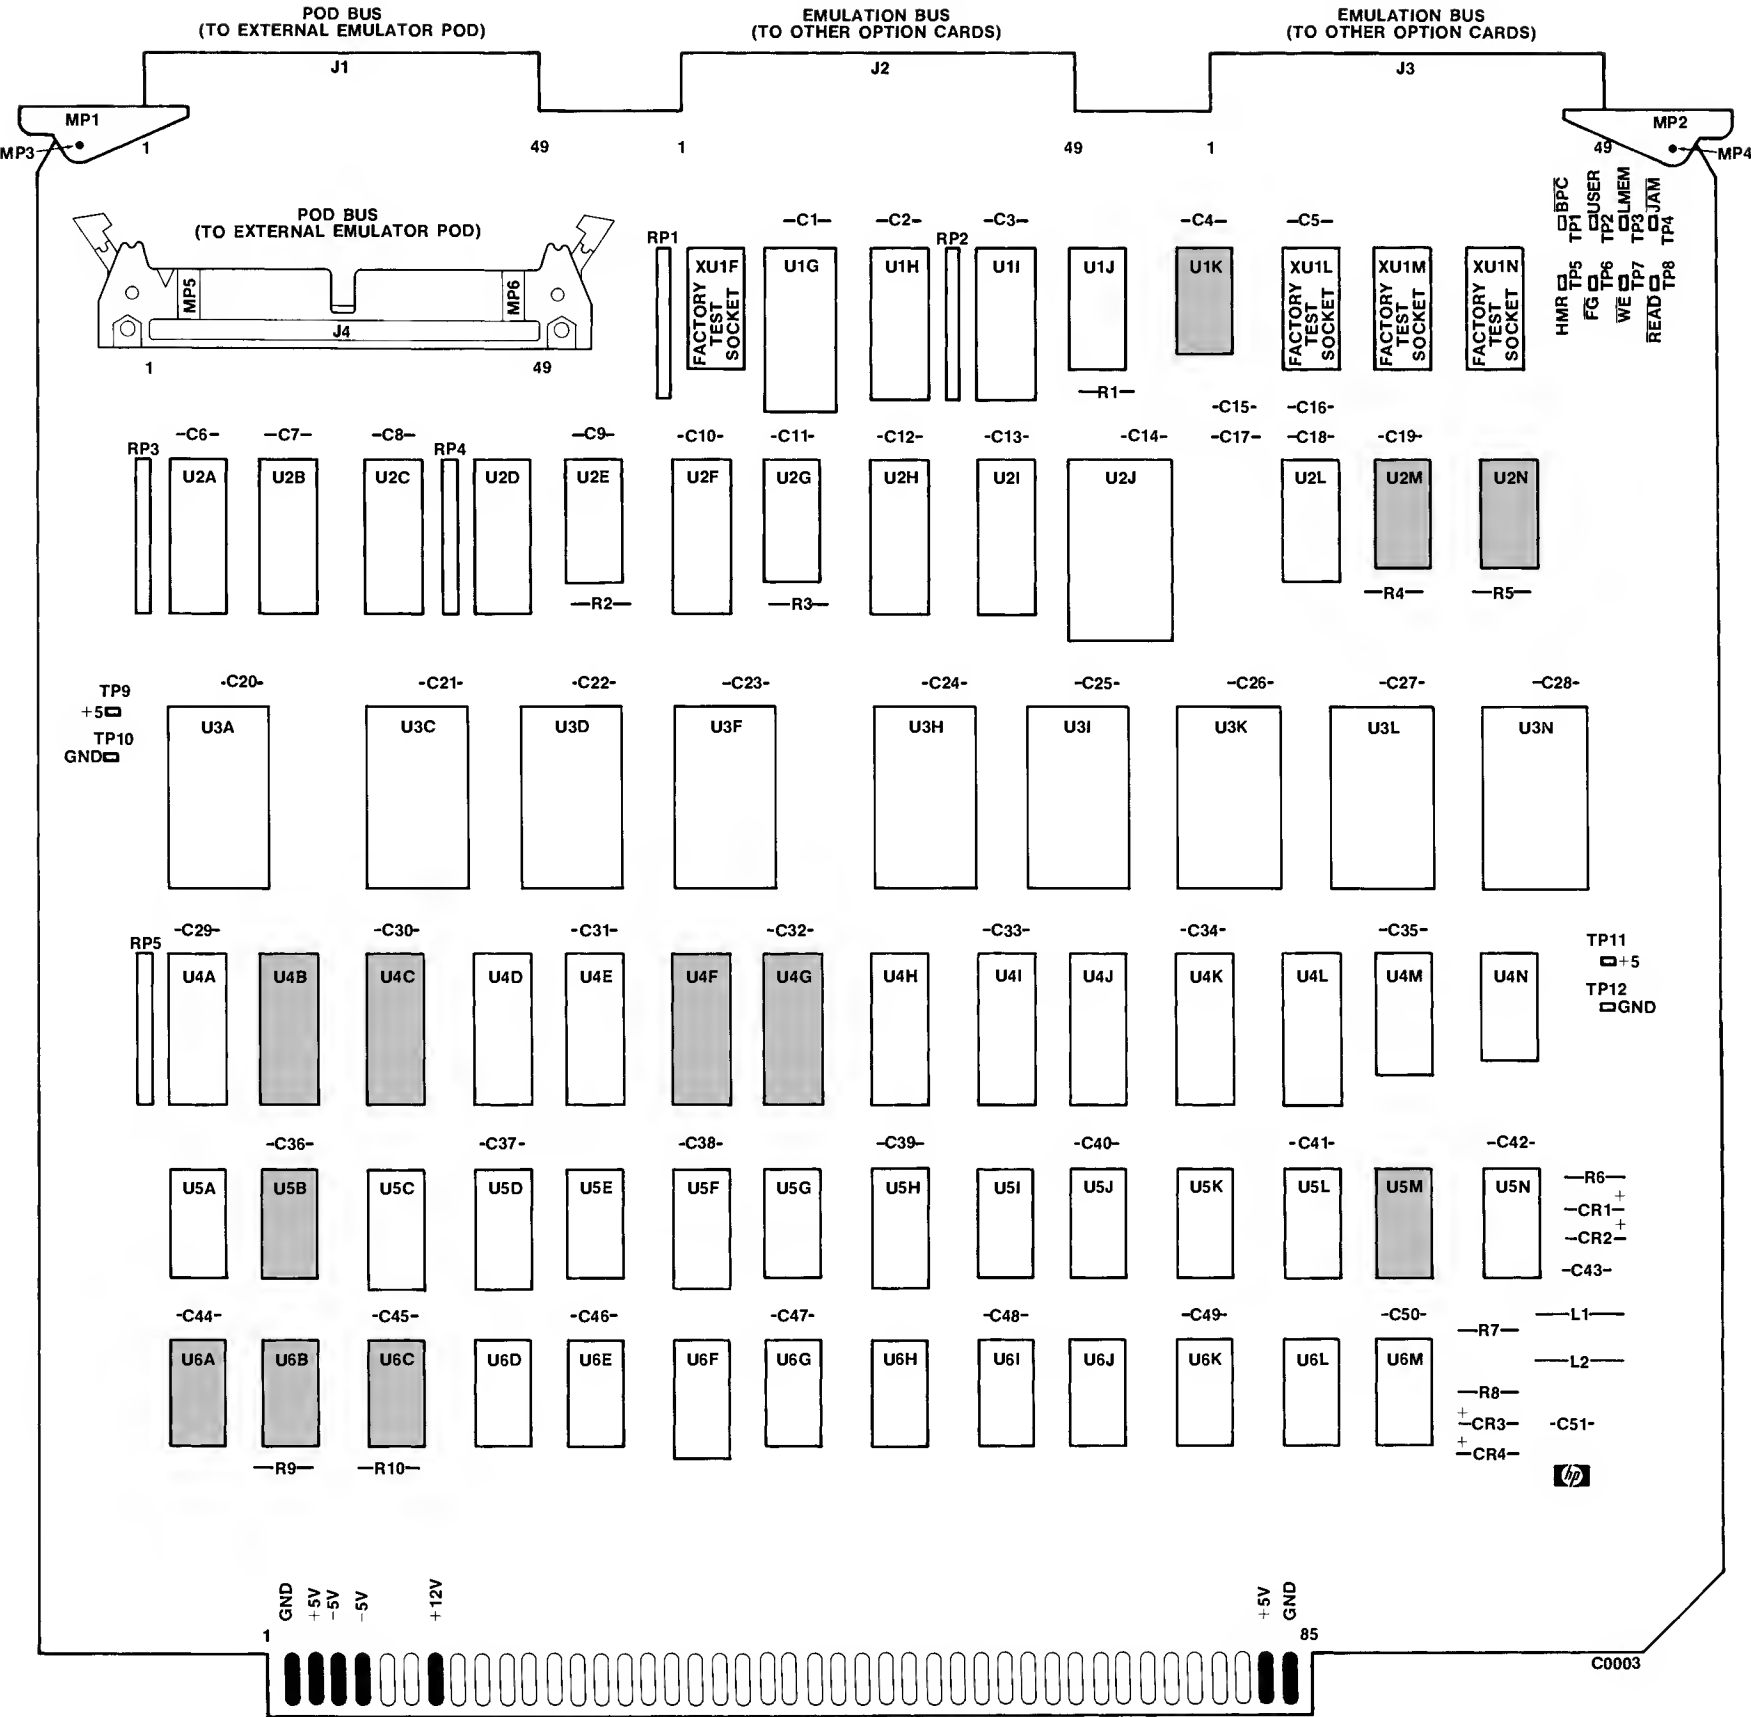

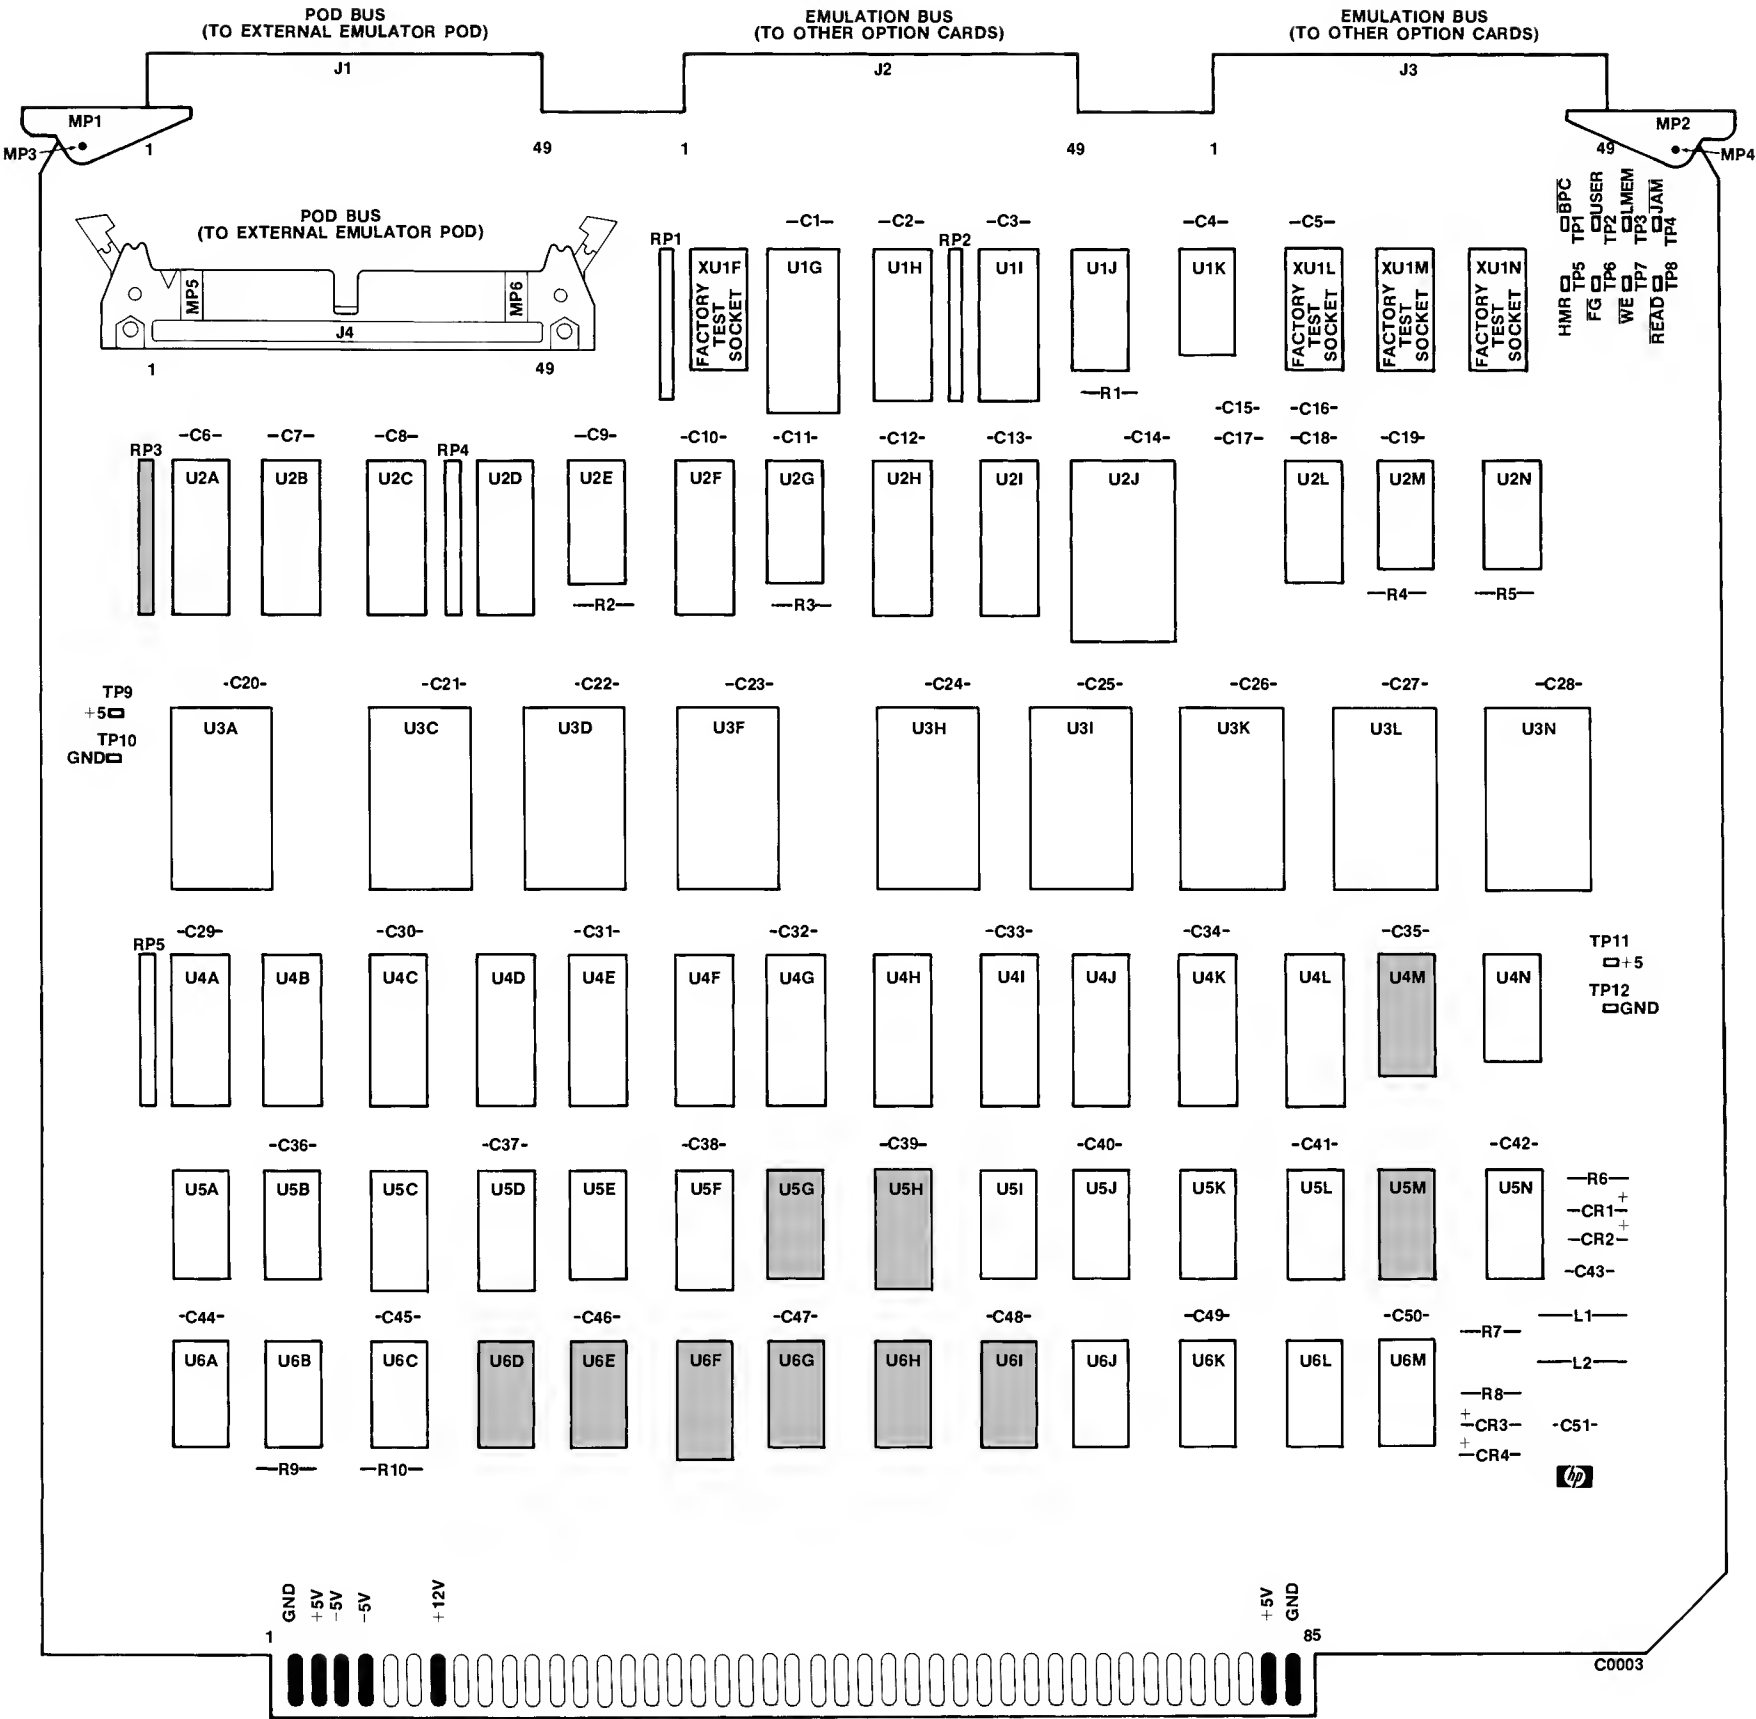

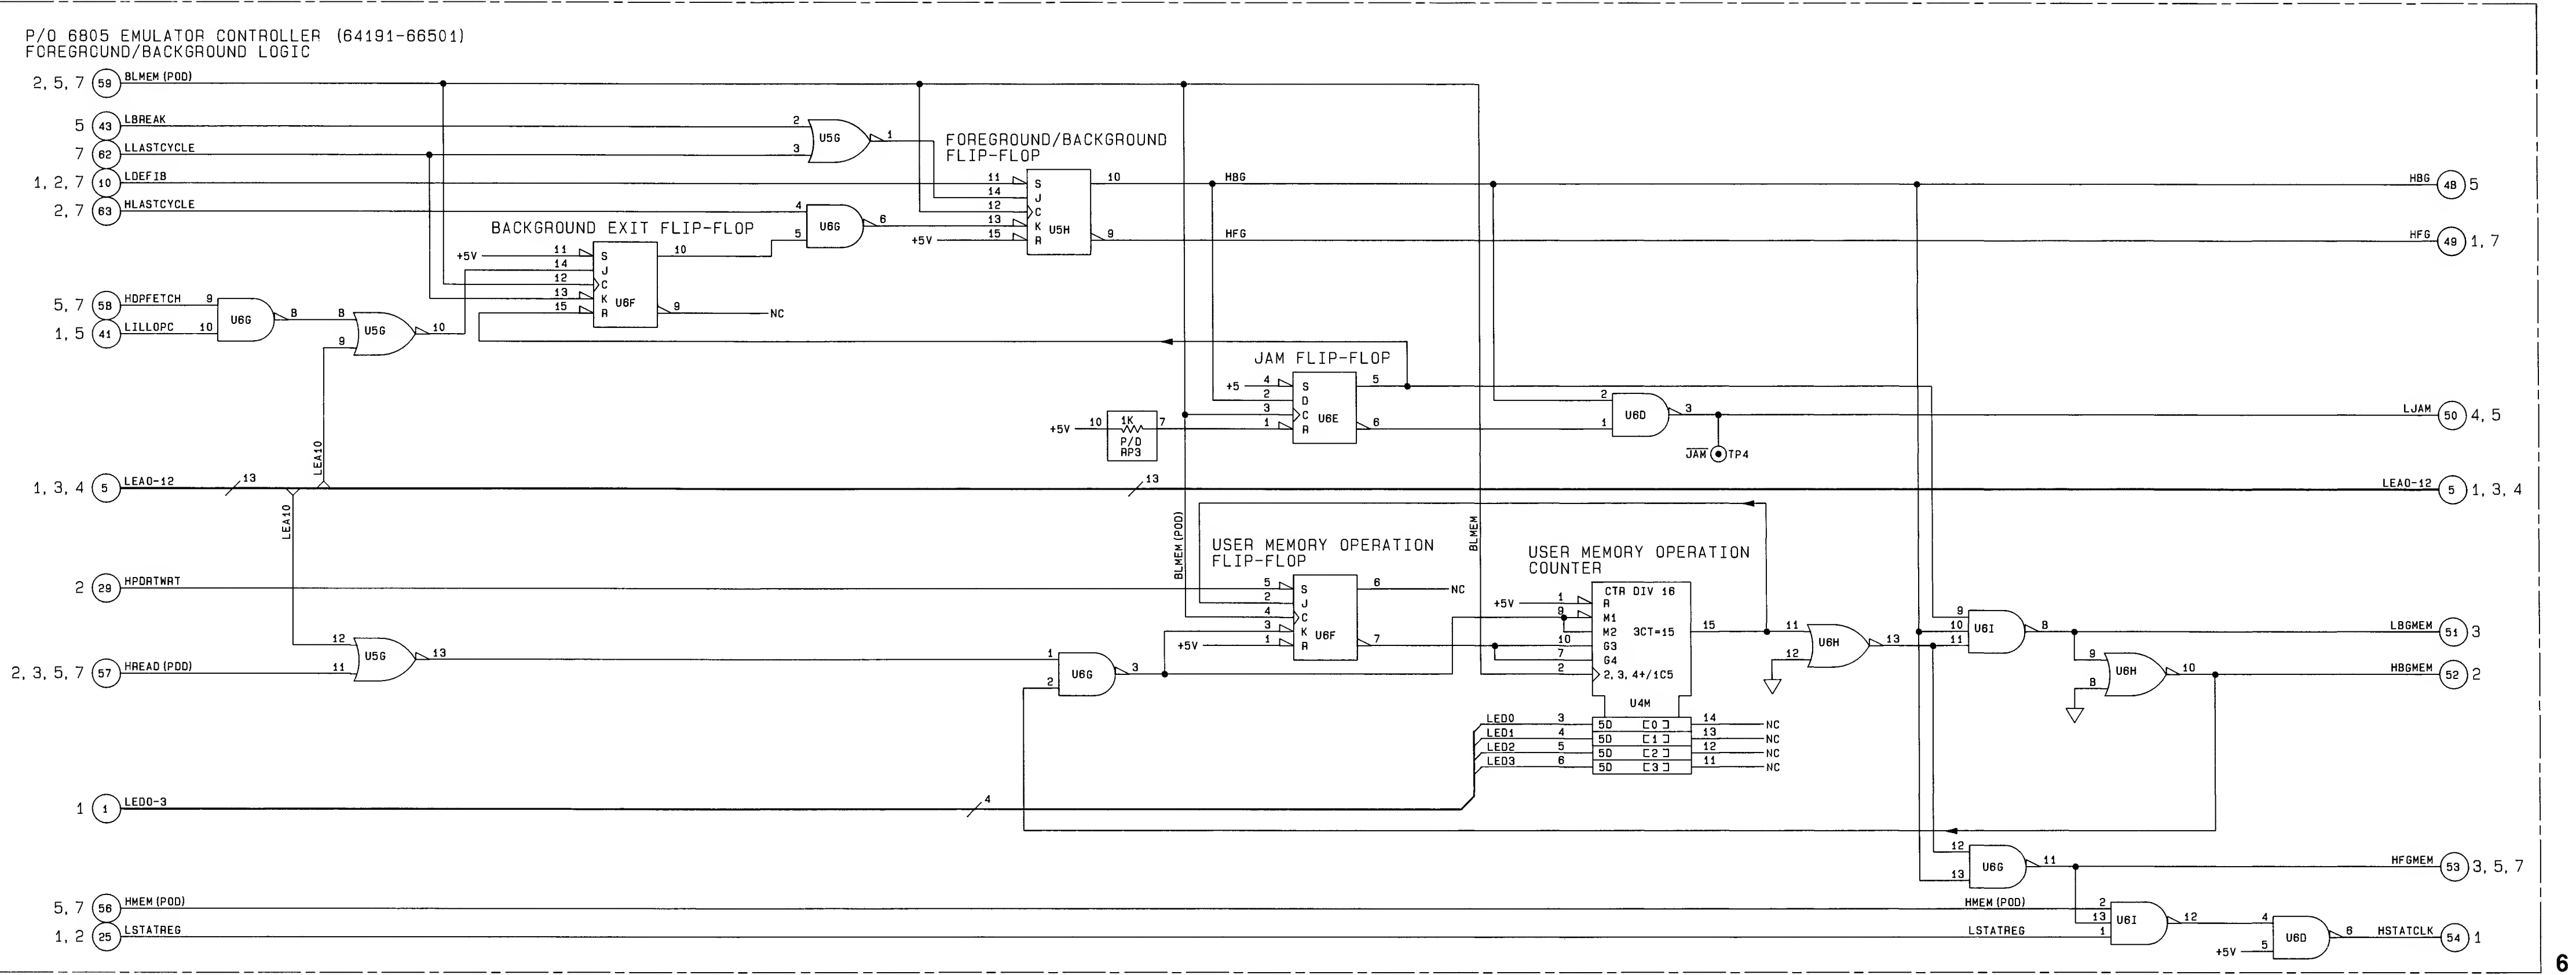


ICs On This Schematic

REF. DES	HP PART NUMBER	MFG. PART NUMBER	+5V PIN	GND PIN
U4M	1820-1430	SN74LS161AN	16	8
U5G	1820-1144	SN74LS02N	14	7
U5H	1820-1282	SN74LS109AN	16	8
U5M	1820-1199	SN74LS04N	14	7
U6D	1820-1197	SN74LS00N	14	7
U6E	1820-1112	SN74LS74AN	14	7
U6F	1820-1282	SN74LS109AN	16	8
U6G	1820-1197	SN74LS00N	14	7
U6H	1820-1144	SN74LS02N	14	7
U6I	1820-1202	SN74LS10N	14	7

Parts On This Schematic

RP3.

Figure 8-9. Schematic 6
Foreground/Background Logic
8-39

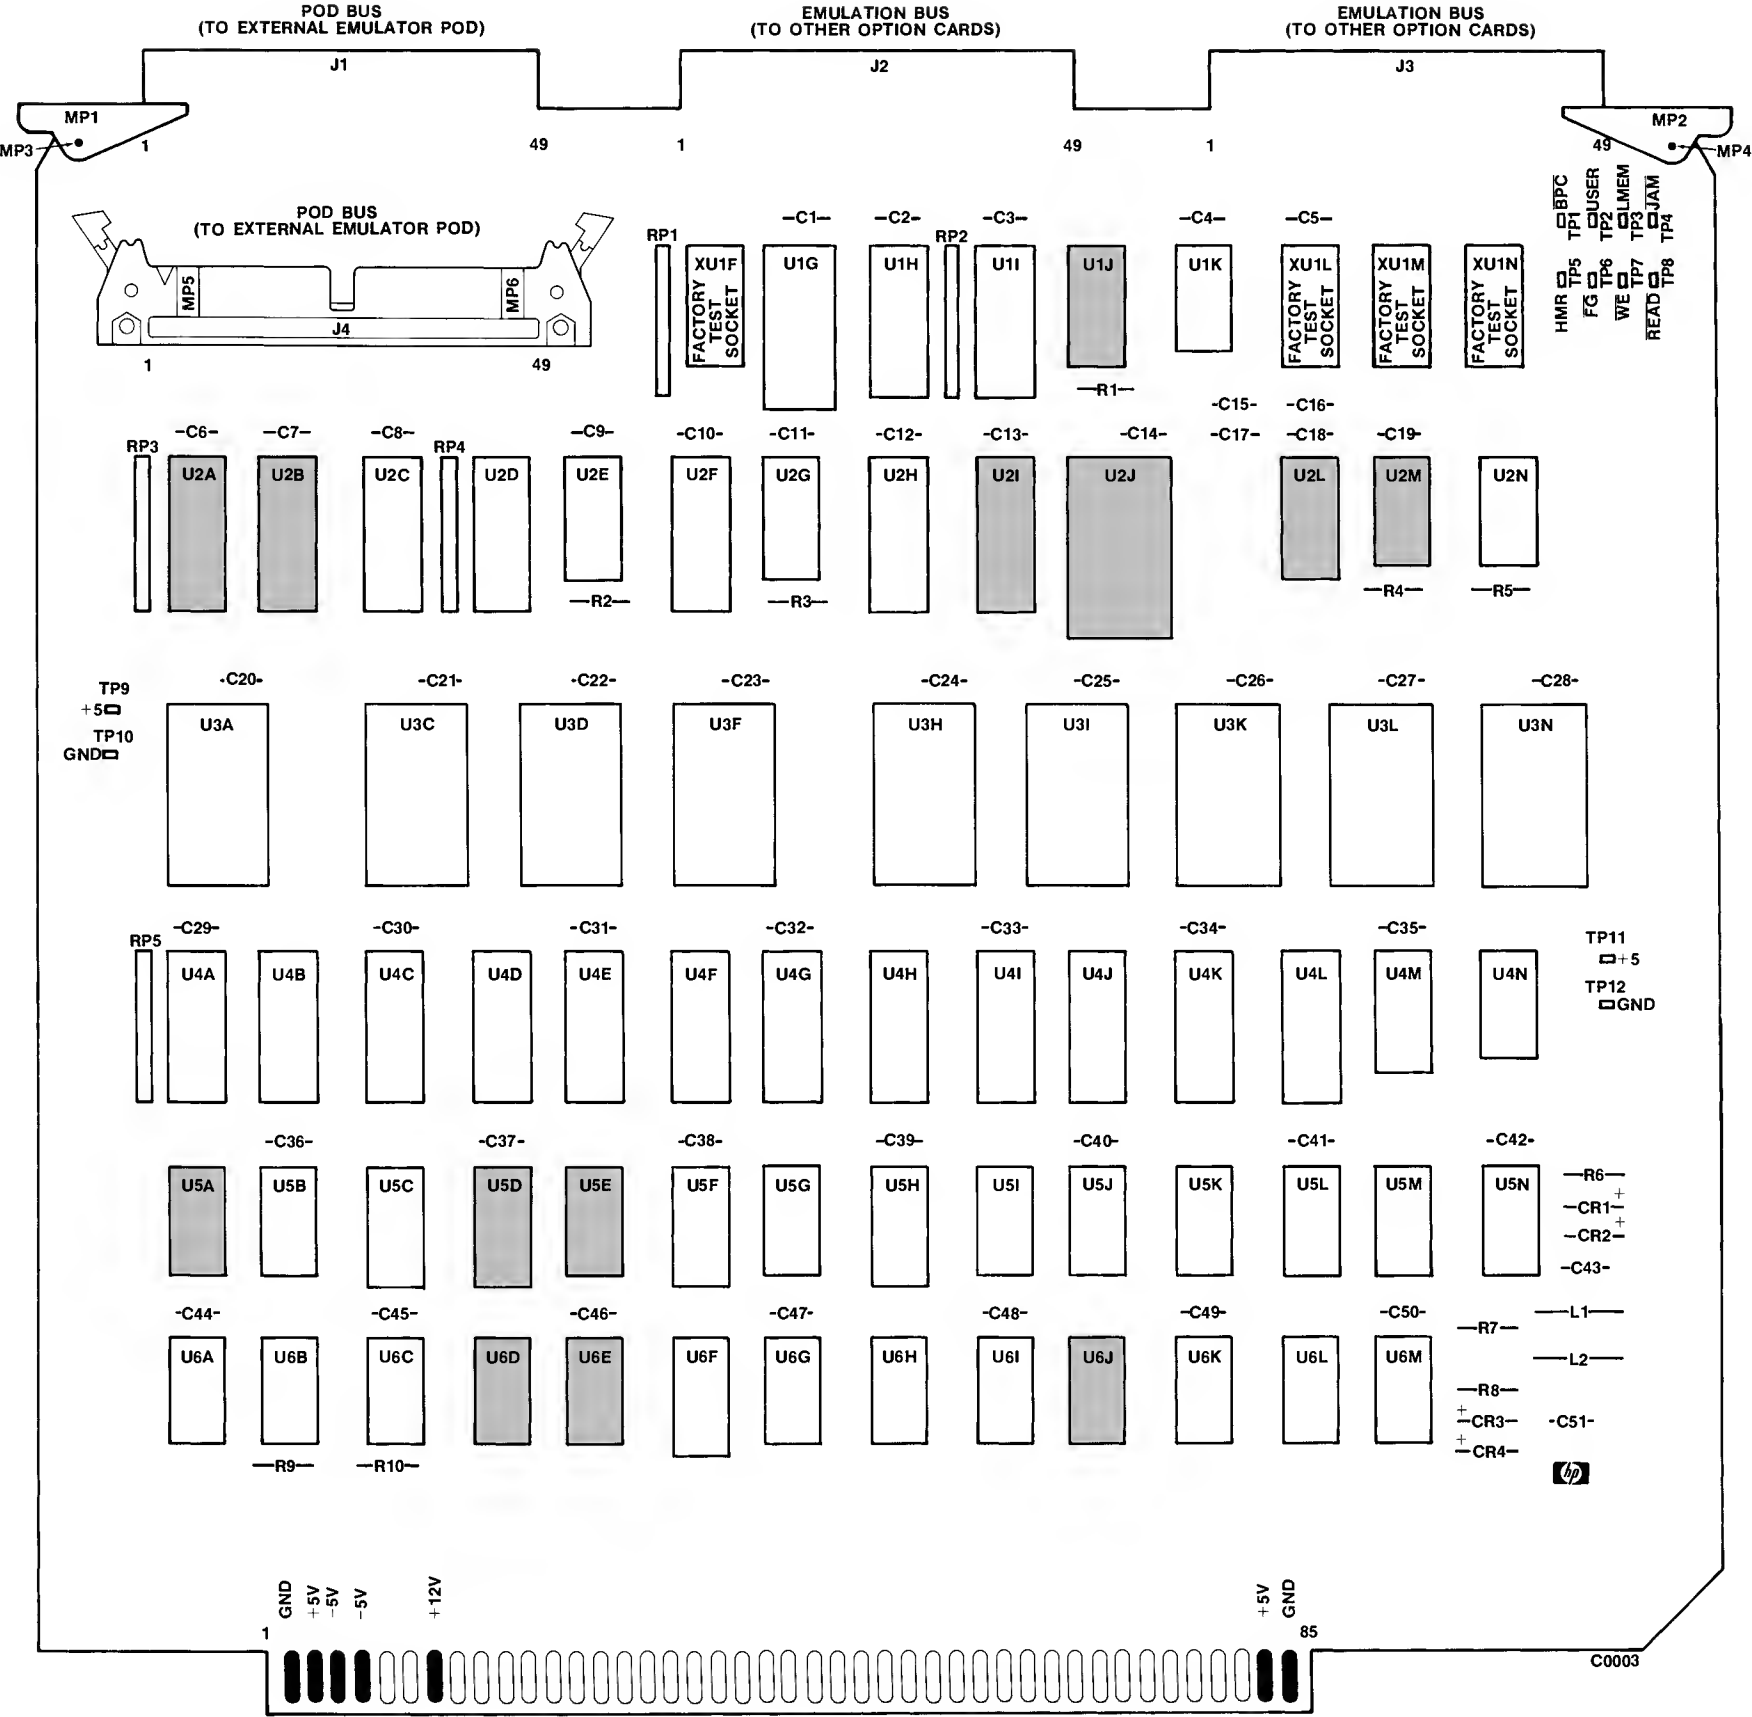

Component Locator



ICs On This Schematic

REF. DES	HP PART NUMBER	MFG. PART NUMBER	+5V PIN	GND PIN
U1J	1820-1217	SN74LS151N	16	8
U2A	1820-1624	SN74S241N	20	10
U2B	1820-1633	SN74S240N	20	10
U2I	1820-2102	SN74LS373N	20	10
U2J	64191-80000	64191-80000	24	12
U2L	1820-1430	SN74LS161AN	16	8
U2M	1820-0686	SN74S11N	14	7
U5A	1820-1144	SN74LS02N	14	7
U5D	1820-1282	SN74LS109AN	16	8
U5E	1820-1112	SN74LS74AN	14	7
U6D	1820-1197	SN74LS00N	14	7
U6E	1820-1112	SN74LS74AN	14	7
U6J	1820-1199	SN74LS04N	14	7

Parts On This Schematic

C13,15,16,17. R4. RP3,4,5.

NOTE A

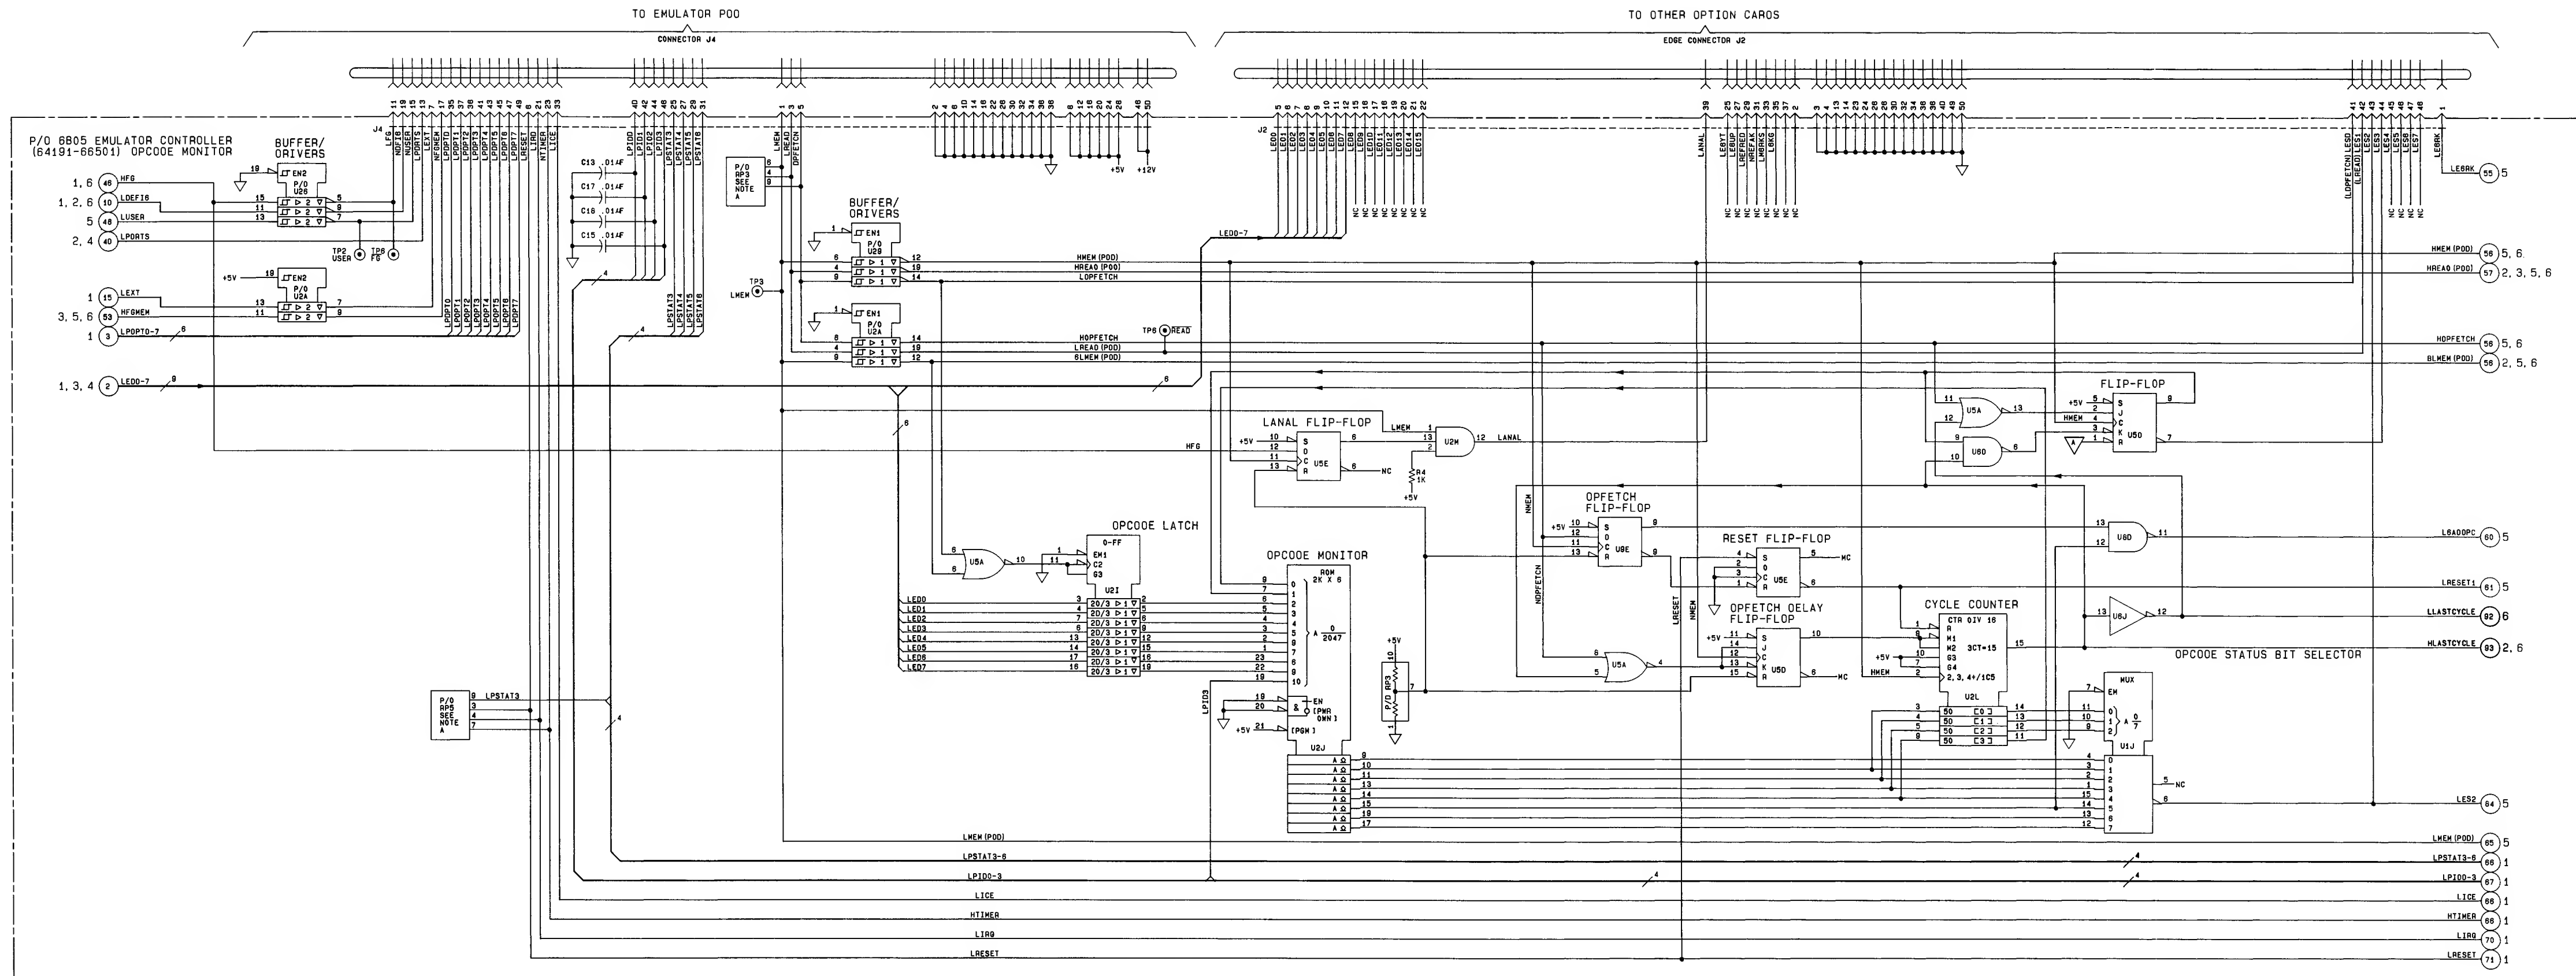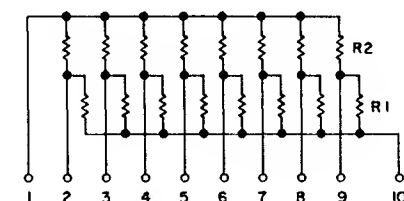Figure 8-10. Schematic 7
Pod Interface and Opcode Monitor
8-41

SALES & SUPPORT OFFICES

Arranged alphabetically by country

1



Product Line Sales/Support Key

Key Product Line

- A Analytical
- CM Components
- C Computer Systems Sales only
- CH Computer Systems Hardware Sales and Service
- CS Computer Systems Software Sales and Service
- E Electronic Instruments & Measurement Systems
- M Medical Products
- MP Medical Products Primary SRO
- MS Medical Products Secondary SRO
- P Personal Computer Products
- * Sales only for specific product line
- ** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

ANGOLA

Telectra
Empresa Técnica de Equipamentos
R. Barbosa Rodrigues, 41-1 DT.
Caixa Postal 6487
LUANDA
Tel: 355 15,355 16
E,M,P

ARGENTINA

Hewlett-Packard Argentina S.A.
 Avenida Santa Fe 2035
 Martinez 1640 BUENOS AIRES
 Tel: 798-5735, 792-1293
 Telex: 17595 BIONAR
 Cable: HEWPAKARG
 A,E,CH,CS,P
Biotron S.A.C.I.M. e I.
Av Paseo Colon 221, Piso 9
1399 BUENOS AIRES
Tel: 30-4846, 30-1851
Telex: 17595 BIONAR
M

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
 153 Greenhill Road
 PARKSIDE, S.A. 5063
 Tel: 272-5911
 Telex: B2536
 Cable: HEWPARO Adelaide
 A*,CH,CM,,E,MS,P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
 10 Payne Road
 THE GAP, Queensland 4061
 Tel: 30-4133
 Telex: 42133
 Cable: HEWPARO Brisbane
 A,CH,CM,E,M,P

Canberra, Australia Capital Territory Office

Hewlett-Packard Australia Ltd.
 121 Wollongong Street
 Fyshwick, A.C.T. 2609
 Tel: 80 4244
 Telex: 62650
 Cable: HEWPARO Canberra
 CH,CM,E,P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
 31-41 Joseph Street
 BLACKBURN, Victoria 3130
 Tel: B90 6351
 Telex: 31-024
 Cable: HEWPARO Melbourne
 A,CH,CM,CS,E,MS,P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
 261 Stirling Highway
 CLAREMONT, W.A. 6010
 Tel: 383-2188
 Telex: 93859
 Cable: HEWPARO Perth
 A,CH,CM,,E,MS,P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
 17-23 Talavera Road
 P.O. Box 308
 NORTH RYDE, N.S.W. 2113
 Tel: B87-1611
 Telex: 21581
 Cable: HEWPARO Sydney
 A,CH,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
 Grottenhofstrasse 94
 Verkaufsburo Graz
 A-8052 GRAZ
 Tel: 291-5-66
 Telex: 32375
 CH,E*
 Hewlett-Packard Ges.m.b.h.
 Liebigasse 1
 P.O. Box 72
 A-1222 VIENNA
 Tel: (0222) 23-65-11-0
 Telex: 134425 HEPA A
 A,CH,CM,CS,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
BAHRAIN
Tel: 255503-255950
Telex: 84419
P
Wael Pharmacy
P.O. Box 648
BAHRAIN
Tel: 256123
Telex: 8550 WAEI BN
E,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
 Blvd de la Woluwe, 100
 Woluwedal
 B-1200 BRUSSELS
 Tel: (02) 762-32-00
 Telex: 23-494 paloben bru
 A,CH,CM,CS,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
 Alameda Rio Negro, 750
 Alphaville
 06400 BARUERI SP
 Tel: (011) 421.1311
 Telex: (011) 33872 HPBR-BR
 Cable: HEWPAK Sao Paulo
 A,CH,CM,CS,E,M,P
 Hewlett-Packard do Brasil I.e.C. Ltda.
 Avenida Epitacio Pessoa, 4664
 22471 RIO DE JANEIRO-RJ
 Tel: (021) 286.0237
 Telex: 021-21905 HPBR-BR
 Cable: HEWPAK Rio de Janeiro
 A,CH,CM,E,MS,P*

CANADA

Alberta
 Hewlett-Packard (Canada) Ltd.
 210, 7220 Fisher Street S.E.
 CALGARY, Alberta T2H 2H8
 Tel: (403) 253-2713
 A,CH,CM,E*,MS,P*
 Hewlett-Packard (Canada) Ltd.
 11620A-16Bth Street
 EDMONTON, Alberta T5M 3T9
 Tel: (403) 452-3670
 A,CH,CM,CS,E,MS,P*

British Columbia

Hewlett-Packard (Canada) Ltd.
 10691 Shellbridge Way
 RICHMOND,
 British Columbia V6X 2W7
 Tel: (604) 270-2277
 Telex: 610-922-5059
 A,CH,CM,CS,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
 380-550 Century Street
 WINNIPEG, Manitoba R3H 0Y1
 Tel: (204) 786-6701
 A,CH,CM,E,MS,P*

New Brunswick

Hewlett-Packard (Canada) Ltd.
 37 Sheppard Road
 MONCTON, New Brunswick E2B 2V0
 Tel: (506) 855-2841
 CH**

Nova Scotia

Hewlett-Packard (Canada) Ltd.
 P.O. Box 931
 900 Windmill Road
 DARTMOUTH, Nova Scotia B2Y 3Z6
 Tel: (902) 469-7820
 CH,CM,CS,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
 552 Newbold Street
 LONDON, Ontario N6E 2S5
 Tel: (519) 686-9181
 A,CH,CM,E*,MS,P*
 Hewlett-Packard (Canada) Ltd.
 6877 Goreway Drive
 MISSISSAUGA, Ontario L4V 1M8
 Tel: (416) 678-9430
 A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
 2670 Queensview Dr.
 OTTAWA, Ontario K2B BK1
 Tel: (613) B20-6483
 A,CH,CM,CS,E*,MS,P*
 Hewlett-Packard (Canada) Ltd.
 220 Yorkland Blvd., Unit #11
 WILLOWDALE, Ontario M2J 1R5
 Tel: (416) 499-9333
 CH

Quebec

Hewlett-Packard (Canada) Ltd.
 17500 South Service Road
 Trans-Canada Highway
 KIRKLAND, Quebec H9J 2M5
 Tel: (514) 697-4232
 A,CH,CM,CS,E,MP,P*
 Hewlett-Packard (Canada) Ltd.
 Les Galeries du Vallon
 2323 Du Verson Nord
 STE. FOY, Quebec G1N 4C2
 Tel: (418) 687-4570
 CH

CHILE

Jorge Calcagni y Cia. Ltda.
Arturo Buhrie 065
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: Public Booth 440001
A,CM,E,M
Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: (02) 22 55 044
Telex: 240-565 OLYMP CL
Cable: Olympiachile Santiagochile
CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Rep. Office
 P.O. Box 418
 1A Lane 2, Luchang St.
 Beiwei Rd., Xuanwu District
BEIJING

Tel: 33-1947, 33-7426

Telex: 22601 CTSHP CN

Cable: 1920

A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS

Telerexa Ltd.
P.O. Box 4809
14C Stassinos Avenue
NICOSIA
Tel: 62698
Telex: 2894 LEVIDO CY
E,M,P

DENMARK

Hewlett-Packard A/S
 Oatavej 52
 OK-3460 BIRKEROD
 Tel: (02) 81-66-40
 Telex: 37409 hpas dk
 A,CH,CM,CS,E,MS,P
 Hewlett-Packard A/S
 Rolighedsvvej 32
 OK-8240 RISSKOV
 Tel: (06) 17-60-00
 Telex: 37409 hpas dk
CH,E

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA)
P

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
CM,E,P
Hospitalar S.A.
Robles 625
Casilla 3590
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTEL ED
Cable: HOSPITALAR-Quito
M

EGYPT

International Engineering Associates
 24 Hussein Hegazi Street
 Kasr-el-Aini
CAIRO
Tel: 23829, 21641
Telex: IEA UN 93830
CH,CS,E,M
Informatic For Systems
 22 Talaat Harb Street
CAIRO
Tel: 759006
Telex: 93938 FRANK UN
CH,CS,P
Egyptian International Office
for Foreign Trade
 P.O.Box 2558
CAIRO
Tel: 650021
Telex: 93337 EGPOR
P

EL SALVADOR

IPESA de El Salvador S.A.
 29 Avenida Norte 1216
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 EPISA
A,CH,CM,CS,E,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

FINLAND

Hewlett-Packard Oy
Revontulentie 7
SF-02100 ESPOO 10
Tel: 00358-0-4550211
Telex: 9100
A,CH,CM,CS,E,MS,P
Hewlett-Packard Oy
Aatoksenkatu 10-C
SF-40720-72 JYVASKYLÄ
Tel: (941) 216318
CH
Hewlett-Packard Oy
Kainuntie 1-C
SF-90140-14 OULU
Tel: (981) 338785
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 16 (42) 59-41-02
Telex: 410770F
A,CH,E,MS,P*
Hewlett-Packard France
64, rue Marchand Saillant
F-61000 ALENÇON
Tel: 16 (33) 29 04 42
Hewlett-Packard France
Boite Postale 503
F-25026 BESANCON
2B rue de la Republique
F-25000 BESANCON
Tel: 16 (81) 83-16-22
CH,M
Hewlett-Packard France
13, Place Napoleon III
F-29000 BREST
Tel: 16 (98) 03-38-35
Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
F-69130 ECULLY Cedex
Tel: 16 (78) 833-81-25
Telex: 310617F
A,CH,CS,E,MP
Hewlett-Packard France
Tour Lorraine
Boulevard de France
F-91035 EVRY Cedex
Tel: 16 6 077-96-60
Telex: 692315F
E
Hewlett-Packard France
5, avenue Raymond Chanas
F-38320 EYBENS
Tel: 16 (76) 25-81-41
Telex: 980124 HP GRENOB EYBE
CH
Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 300
F-93153 LE BLANC MESNIL
Tel: 16 (1) 865-44-52
Telex: 211032F
CH,CS,E,MS
Hewlett-Packard France
Parc d'Activités Cadere
Quartier Jean Mermoz
Avenue du Président JF Kennedy
F-33700 MERIGNAC
Tel: 16 (56) 34-00-84
Telex: 550105F
CH,E,MS

Hewlett-Packard France
Immeuble "Les 3 B"
Nouveau Chemin de la Garde
ZAC de Bois Briand
F-44085 NANTES Cedex
Tel: 16 (40) 50-32-22
CH**
Hewlett-Packard France
125, rue du Faubourg Bannier
F-45000 ORLEANS
Tel: 16 (38) 68 01 63
Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (B) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P
Hewlett-Packard France
Paris Porte-Maillot
15, Avenue de L'Amiral Bruix
F-75782 PARIS CEDEX 16
Tel: 16 (1) 502-12-20
Telex: 613663F
CH,MS,P
Hewlett-Packard France
124, Boulevard Tourasse
F-64000 PAU
Tel: 16 (59) 80 38 02
Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 RENNES
Tel: 16 (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*
Hewlett-Packard France
9B Avenue de Bretagne
F-76100 ROUEN
Tel: 16 (35) 63-57-66
CH***,CS
Hewlett-Packard France
Boite Postale 56
F-67033 STRASBOURG Cedex
4 Rue Thomas Mann
F-67200 STRASBOURG Cedex
Tel: 16 (88) 28-56-46
Telex: B90141F
CH,E,MS,P*
Hewlett-Packard France
Le Péripole
3, Chemin du Pigeonnier de la
Cépière
F-31083 TOULOUSE Cedex
Tel: 16 (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*
Hewlett-Packard France
9, rue Baudin
F-26000 VALENCE
Tel: 16 (75) 42 76 16
Hewlett-Packard France
Garolor
ZAC de Bois Briand
F-57640 VIGY
Tel: 16 (8) 771 20 22
CH
Hewlett-Packard France
Immeuble Péricentre
F-59658 VILLENEUVE D'ASCQ Cedex
Tel: 16 (20) 91-41-25
Telex: 160124F
CH,E,MS,P*
**GERMAN FEDERAL
REPUBLIC**
Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
0-1000 BERLIN 30
Tel: (030) 24-90-BB
Telex: 018 3405 hpbln d
A,CH,E,MP

Hewlett-Packard GmbH
Geschäftsstelle
Herrenberger Strasse 110
0-7030 BOBLINGEN
Tel: (7031) 667-750
Telex: bbn or
A,CH,CM,CS,E,MP,P
Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Leutze-Strasse 1
0-4000 DUSSELDORF
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d
A,CH,CS,E,MS,P
Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
0-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpftm d
A,CH,CM,CS,E,MP,P
Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
0-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hpplh d
A,CH,CS,E,MS,P
Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
0-3000 HANNOVER 91
Tel: (0511) 5706-0
Telex: 092 3259
A,CH,CM,E,MS,P
Hewlett-Packard GmbH
Geschäftsstelle
Rossauer Weg 2-4
0-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E
Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
0-7910 NEU ULM
Tel: 0731-70241
Telex: 0712618 HP ULM-0
A,C,E*
Hewlett-Packard GmbH
Geschäftsstelle
Neumeyerstrasse 90
0-8500 NÜRNBERG
Tel: (0911) 52 20 B3-87
Telex: 0623 860
CH,CM,E,MS,P
Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
0-8028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

See United Kingdom

GREECE

Kostas Karayannis S.A.
8 Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,CH,CM,CS,E,MP
PLAISIO S.A.
G. Gerardos
24 Stournara Street
ATHENS
Tel: 36-11-160
Telex: 221871
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 4192 TELTRO GU
A,CH,CM,CS,E,MP
HONG KONG
Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 6667B HEWPA HX
Cable: HEWPACK HONG KONG
E,CH,CS,P
CET Ltd.
1402 Tung Way Mansion
199-203 Hennessy Rd.
Wanchia, HONG KONG
Tel: 5-729376
Telex: 85148 CET HX
CM
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Elding Trading Company Inc.
Hafnarvölli-Tryggvagötu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs
and maintenance service is done
through Computer Maintenance
Corp.
Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660
Telex: 0845-430
Cable: BLUESTAR
A,CH*,CM,CS*,E
Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
A,M
Blue Star Ltd.
Sahas
41/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTBLUE
A,CH*,CM,CS*,E,M
Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Akrapuri, BORODA, 390 005
Tel: 65235
Cable: BLUE STAR
A
Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M
Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH*,CM,CS*,E,M
Blue Star Ltd.
15/16-C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A
Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E
Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E
Computer Maintenance Corporation
Ltd.
115, Sarojini Devi Road
SECUNDERABAD 500 003
Tel: 310-184, 345-774
Telex: 031-2960
CH**
INDONESIA
BERCA Indonesia P.T.
P.O.Box 496/JKT.
Jl. Abdul Muis 62
JAKARTA
Tel: 373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA
P
BERCA Indonesia P.T.
P.O.Box 2497/Jkt Antara Bldg.,
17th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-344-181
Telex: BERSAL IA
A,CS,E,M
BERCA Indonesia P.T.
P.O. Box 174/SBY.
Jl. Kutej No. 11
SURABAYA
Tel: 68172
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P
IRAQ
Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPAIRAQ IK
CH,CS

SALES & SUPPORT OFFICES

Arranged alphabetically by country

3



IRELAND

Hewlett-Packard Ireland Ltd.
82/83 Lower Leeson Street
DUBLIN 2
Tel: (1) 60 88 00
Telex: 30439
A,CH,CM,CS,E,M,P

Cardiac Services Ltd.
Kilmore Road
Artane
DUBLIN 5
Tel: (01) 351820
Telex: 30439
M

ISRAEL

Eidan Electronic Instrument Ltd.
P.O. Box 1270
JERUSALEM 91000
16, Ohallav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL
A

Electronics Engineering Division
Motorola Israel Ltd.
16 Kremenetski Street
P.O. Box 25016
TEL-AVIV 67899
Tel: 3-338973
Telex: 33569 Motil IL
Cable: BASTEL Tel-Aviv
CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A.
Traversa 99C
Via Giulio Petroni, 19
I-70124 BARI
Tel: (080) 41-07-44
M

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/111
I-40132 BOLOGNA
Tel: (051) 402394
Telex: 511630
CH,E,MS

Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95128 CATANIA
Tel: (095) 37-10-87
Telex: 970291
C,P

Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 CERNUSCO SUL NAVIGLIO
Tel: (2) 903691
Telex: 334632
A,CH,CM,CS,E,M,P,P

Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco a
Capodimonte, 62/A
I-80131 NAPLES
Tel: (081) 7413544
Telex: 710698
A,CH,E

Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 GENOVA PEGLI
Tel: (010) 68-37-07
Telex: 215238
E,C

Hewlett-Packard Italiana S.p.A.
Via Turazza 14
I-35100 PADOVA
Tel: (049) 664888
Telex: 430315
A,CH,E,MS

Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 ROMA
Tel: (06) 54831
Telex: 610514
A,CH,CM,CS,E,MS,P*

Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 184
I-10149 TORINO
Tel: (011) 74 4044
Telex: 221079
CH,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
000 ATSUGI, Kanagawa, 243
Tel: (0462) 28-0451
CM,C*,E

Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E

Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Daiichi Seimei Bldg.
4-7, Hanabata-cho
KUMAMOTO, 860
Tel: (0963) 54-7311
CH,E

Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614, Higashi-Shiokoji-cho
Karasuma-Nishiiru
Shiokoji-dori, Shimogyo-ku
KYOTO, 600
Tel: 075-343-0921
CH,E

Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg
4-73, Sannomaru, 1 Chome
MITO, Ibaragi 310
Tel: (0292) 25-7470
CH,CM,E

Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei 14-9 Bldg.
Meiki-Minami, 2 Chome
Nakamura-ku
NAGOYA, 450
Tel: (052) 571-5171
CH,CM,CS,E,MS

Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
27-15, Yabe, 1 Chome
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.
Daiichi Seimei Bldg.
7-1, Nishi Shinjuku, 2 Chome
Shinjuku-ku, TOKYO 160
Tel: 03-348-4611-5
CH,E

Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku TOKYO 168
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,MP,P*

Yokogawa-Hewlett-Packard Ltd.
Daichi Asano Building
2-8, Odori, 5 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 25-7155
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
YOKOHAMA 221
Tel: (045) 312-1252
CH,CM,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
CH,E,M,P

KENYA

ADCOM Ltd., Inc., Kenya
P.O. Box 30070
NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Electronics Computer
Division
76-561 Yeoksam-Dong
Kwangnam-Ku
C.P.O. Box 2775
SEOUL
Tel: 555-7555, 555-5447
Telex: K27364 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830 Safat
KUWAIT
Tel: 42-4910, 41-1726
Telex: 22481 Areeg kt
CH,E,M
Photo & Cine Equipment
P.O. Box 270 Safat
KUWAIT
Tel: 42-2846, 42-3801
Telex: 22247 Matin kt
P

LEBANON

G.M. Dolmadian
Achrafieh
P.O. Box 165, 167
BEIRUT
Tel: 290293
MP**

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwe
8-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan British
American
Jalan Semantan, Damansara Heights
KUALA LUMPUR 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*
Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROTEL
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd.
Notabile Rd.
MRIEHEL
Tel: 447 47, 455 66
Telex: Media MW 649
P

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
MEXICO D.F. 16020
Tel: 676-4600
Telex: 17-74-507 HEWPACK MEX
A,CH,CS,E,MS,P
Hewlett-Packard Mexicana, S.A.
de C.V.
Ave. Colonia del Valle #409
Col. del Valle
Municipio de Garza Garcia
MONTERREY, N.L.
Tel: 78 42 41
Telex: 038 410
CH
ECISA
José Vasconcelos No. 218
Col. Condesa Oeleg. Cuauhtémoc
MEXICO D.F. 06140
Tel: 553-1206
Telex: 17-72755 ECE ME
M

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E
Gerep
2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KK AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 47-20-21
Telex: 13 216 HEPA NL
A,CH,CM,CS,E,MP,P
Hewlett-Packard Nederland B.V.
8onger 2
NL 2906VK CAPELLE, A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE, A/D IJSSEL
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A,CH,CS,E

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
169 Manukau Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPACK Auckland
CH,CM,E,P*
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 9443
Courtenay Place, WELLINGTON 3
Tel: 877-199
Cable: HEWPACK Wellington
CH,CM,E,P

Northrop Instruments & Systems
Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems
Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-928
Telex: 4203
A,M

Northrop Instruments & Systems
Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 FYLLINGSDALEN (Bergen)
Tel: (05) 16-55-40
Telex: 16621 hpnas n
CH,CS,E,MS
Hewlett-Packard Norge A/S
Østerdalen 18
P.O. Box 34
N-1345 ØSTERÅS
Tel: (02) 17-11-80
Telex: 16621 hpnas n
A,CH,CM,CS,E,M,P

OMAN

Khiniil Ramdas
P.O. Box 19
MUSCAT
Tel: 722225, 745601
Telex: 3289 BROKER MB MUSCAT
P
Suhail & Saud Bahwan
P.O. Box 169
MUSCAT
Tel: 734 201-3
Telex: 3274 BAHWAN MB

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 26875
Cable: FEMUS Rawalpindi
A,E,M
Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P*

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 64-2700
Telex: 3483 ELECTRON PG
A,CM,E,M,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

PERU

Cla Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
CME,M,P

PHILIPPINES

The Online Advanced Systems
Corporation
Rico House, Amorsolo Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,CH,CS,E,M
Electronic Specialists and
Proponents Inc.
690-8 Epilario de los Santos
Avenue
Cubao, QUEZON CITY
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY 800TH
P

PORTUGAL

Mundinter
Intercambio Mundial de Comércio
S.A.R.L.
P.O. Box 2761
Avenida Antonio Augusto de Aguiar
138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M
Soquímica
Av. da Liberdade, 220-2
1298 LISBOA Codex
Tel: 56 21 81/2/3
Telex: 13316 SABASA
P
Telectra-Empresa Técnica de
Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P

PUERTO RICO

Hewlett-Packard Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00628
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico
Tel: (809) 762-7255
A,CH,CS

QATAR

Computearbia
P.O. Box 2750
DOHA
Tel: 883555
Telex: 4806 CHPARB
P
Eastern Technical Services
P.O. Box 4747
DOHA
Tel: 329 993
Telex: 4156 EASTEC DH

Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 22170, 23539
Telex: 4439 NASSER OH
M

SAUDI ARABIA

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 281
Thuobah
AL-KHOBAR
Tel: 864-46 78
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
CH,CS,E,M,P
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 38 48
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
CH,CS,E,M,P
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 2728
RIYADH
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYD SJ
CH,CS,E,M,P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
P.O. Box 58 Alexandra Post Office
SINGAPORE, 9115
6th Floor, Inchcape House
450-452 Alexandra Road
SINGAPORE 0511
Tel: 631788
Telex: HPSGSO RS 34209
Cable: HEWPACK, Singapore
A,CH,CS,E,MS,P
Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS 26283
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.)
Ltd.
P.O. Box 120
Howard Place CAPE PROVINCE 7450
Pine Park Center, Forest Drive,
Pinelands
CAPE PROVINCE 7405
Tel: 53-7954
Telex: 57-20006
A,CH,CM,E,MS,P
Hewlett-Packard So Africa (Pty.)
Ltd.
P.O. Box 37099
92 Overport Drive
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
Telex: 6-22954
CH,CM

Hewlett-Packard So Africa (Pty.)
Ltd.
6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6001
Tel: 041-302148
CH
Hewlett-Packard So Africa (Pty.)
Ltd. P.O. Box 33345
Glenstantia 0010 TRANSVAAL
1st Floor East
Constantia Park Ridge Shopping
Centre
Constantia Park
PRETORIA
Tel: 982043
Telex: 32163
CH,E
Hewlett-Packard So Africa (Pty.)
Ltd.
Private 8ag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.
Calle Entenza, 321
E-BARCELONA 29
Tel: 322.24.51, 321.73.54
Telex: 52603 hpbce
A,CH,CS,E,MS,P
Hewlett-Packard Española S.A.
Calle San Vicente S/No
Edificio Albia II
E-BILBAO 1
Tel: 423.83.06
A,CH,E,MS
Hewlett-Packard Española S.A.
Crta. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
CH,CS,M
Hewlett-Packard Española S.A.
Avda. S. Francisco Javier, S/no
Planta 10. Edificio Sevilla 2,
E-SEVILLA 5
Tel: 64.44.54
Telex: 72933
A,CS,MS,P
Hewlett-Packard Española S.A.
Calle Ramon Gorrillo, 1 (Entlo.3)
E-VALENCIA 10
Tel: 361-1354
CH,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnanvagen 14K
S-22226 LUND
Tel: (046) 13-69-79
Telex: (854) 17886 (via Spånga
office)
CH
Hewlett-Packard Sverige AB
Vastra Vintergatan 9
S-70344 ÖREBRO
Tel: (19) 10-48-80
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
Box 19
S-16393 SPÅNGA
Tel: (08) 750-2000
Telex: (854) 17886
A,CH,CM,CS,E,MS,P
Hewlett-Packard Sverige AB
Fröllingsgatan 30
S-42132 VÄSTRA-FRÖLUNDA
Tel: (031) 49-09-50
Telex: (854) 17886 (via Spånga
office)
CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASLE
Tel: (61) 33-59-20
A
Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 1
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
CH,CM,CS
Hewlett-Packard (Schweiz) AG
Allmend 2
CH-8967 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 11216 ITIKAL SY
Cable: ELECTROBOR DAMASCUS
E
Middle East Electronics
Place Azmé
P.O. Box 2308
DAMASCUS
Tel: 334592
Telex: 11304 SATACO SY
M,P

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Office
2/F 68-2, Chung Cheng 3rd Road
KAOHSIUNG
Tel: 241-2318, 261-3253
CH,CS,E
Hewlett-Packard Far East Ltd.
Taiwan Branch
5th Floor
205 Tun Hwa North Road
TAIPEI
Tel: (02) 712-0404
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P
Ing Lih Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3948191
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,CH,CS,E,M
Bangkok Business Equipment Ltd.
5/5-6 Oeja Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-8EQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
50/A Jerningham Avenue
P.O. Box 732
PORT-OF-SPAIN
Tel: 62-44213, 62-44214
Telex: 235,272 HUGCO WG
CME,M,P

TUNISIA

Tunisie Electronique
31 Avenue de la Liberté
TUNIS
Tel: 280-144
E,P
Corema
1 ter. Av. de Carthage
TUNIS
Tel: 253-821
Telex: 12319 CABAM TN
M

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere, ANKARA
Tel: 275800
Telex: 42155 TKNM TR
E
E.M.A.
Medina Eldem Sokak No.4 1/6
Yüksel Caddesi
ANKARA
Tel: 175 622
M

UNITED ARAB EMIRATES

Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: 354121, 354123
Telex: 68136 Emitac Sh
CH,CS,E,M,P

UNITED KINGDOM

GREAT BRITAIN
Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: (061) 928-6422
Telex: 668068
A,CH,CS,E,M
Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton
BRISTOL 8S8 28N, Avon
Tel: (027) 38606
Telex: 444302
CH,M,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

5



GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Fouler House
257-263 High Street
LONDON COLNEY
Herts., AL2 1HA, St. Albans
Tel: (0727) 24400
Telex: 1-895271B
CH,CS,E

Hewlett-Packard Ltd.
Quadrangle
106-118 Station Road
REDHILL, Surrey
Tel: (0737) 68655
Telex: 947234
CH,CS,E

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
SHIRLEY, Solihull
West Midlands B90 4BL
Tel: (021) 745 8800
Telex: 339105
CH

Hewlett-Packard Ltd.
West End House 41
High Street, West End
SOUTHAMPTON
Hampshire SO3 30Q
Tel: (703) 886787
Telex: 477138
CH

Hewlett-Packard Ltd.
King Street Lane
WINNERSH, Wokingham
Berkshire RG11 5AR
Tel: (0734) 784774
Telex: 84717B
A,CH,E,M

Hewlett-Packard Ltd.
Nine Mile Ride
WOKINGHAM
Berkshire, RG11 3LL
Tel: 3446 3100
Telex: 84-BB-05
CH,CS,E

NORTHERN IRELAND
Cardiac Services Company
95A Finaghy Road South
BELFAST BT 10 0BY
Tel: (0232) 625-566
Telex: 747626
M

SCOTLAND
Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9GT
Tel: (031) 331118B
Telex: 72682
A,CH,CM,CS,E,M

UNITED STATES

Alabama
Hewlett-Packard Co.
P.O. Box 7000
8290 Whitesburg Drive, S.E.
HUNTSVILLE, AL 35802
Tel: (205) 830-2000
CH,CM,CS,E,M*

Arizona
Hewlett-Packard Co.
8080 Point Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (802) 889-4631
CH,E,MS**

California
Hewlett-Packard Co.
99 South Hill Dr.
4BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS
Hewlett-Packard Co.
7621 Canoga Avenue
CANOGA PARK, CA 91304
Tel: (213) 702-8363
A,CH,CS,E,P
Hewlett-Packard Co.
P.O. Box 7830 (93747)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
CH,CS,MS

Hewlett-Packard Co.
P.O. Box 4230
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
320 S. Kellogg, Suite B
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
Telex: 910-325-6608
CH,CM,CS,MP

Hewlett-Packard Co.
3200 Hillview Avenue
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
P.O. Box 1597B (95813)
4244 So. Market Court, Suite A
SACRAMENTO, CA 95834
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333 SAN DIEGO, CA
92123
Tel: (619) 279-3200
CH,CM,CS,E,MP

Hewlett-Packard Co.
2305 Camino Ramon "C"
SAN RAMON, CA 94583
Tel: (415) 838-5900
CH,CS

Hewlett-Packard Co.
P.O. Box 4230
Fullerton, CA 92631
363 Brookhollow Drive

SANTA ANA, CA 92705
Tel: (714) 641-0977
A,CH,CM,CS,MP
Hewlett-Packard Co.
3003 Scoll Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0586
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91382
Tel: (213) 706-6800
E*,CH*,CS*

Colorado
Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 771-3455
Telex: 910-835-0785
A,CH,CM,CS,E,MS

Connecticut
Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida
Hewlett-Packard Co.
P.O. Box 24210 (33307)
2901 N.W. 62nd Street
FORT LAUDERDALE, FL 33309
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
P.O. Box 13910
6177 Lake Ellenor Drive
ORLANDO, FL 32809
Tel: (305) 859-2900
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
5750B N. Hoover Blvd., Suite 123
TAMPA, FL 33614
Tel: (813) 884-3282
A*,CH,CM,CS,E,M*

Georgia
Hewlett-Packard Co.
P.O. Box 105005
30348 ATLANTA,GA
2000 South Park Place
ATLANTA, GA 30339
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hawaii
Hewlett-Packard Co.
Kawalahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 528-1555
A,CH,E,MS

Illinois
Hewlett-Packard Co.
P.O. Box 1607
304 Eldorado Road
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,MS**

Hewlett-Packard Co.
1100 31st Street, Suite 100
DOWNERS GROVE, IL 60515
Tel: (312) 960-5780
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,MP

Indiana
Hewlett-Packard Co.
P.O. Box 50807
7301 No. Shadeland Avenue
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa
Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50262
Tel: (515) 224-1435
CH,MS**
Hewlett-Packard Co.
2415 Heinz Road
IOWA CITY, IA 52240
Tel: (319) 351-1020
CH,E*,MS

Kansas
Hewlett-Packard Co.
7804 East Funston Road
Suite 203
WICHITA, KA 67207
Tel: (316) 684-8491
CH

Kentucky
Hewlett-Packard Co.
10300 Linn Station Road
Suite 100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana
Hewlett-Packard Co.
P.O. Box 1449
KENNER, LA 70063
160 James Drive East
ST. ROSE, LA 70087
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland
Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, Md. 21227
Tel: (301) 644-5800
Telex: 710-B62-1943
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,CH,CM,CS,E,MP

Massachusetts
Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
A,CH,CM,CS,E,MP

Michigan
Hewlett-Packard Co.
23855 Research Drive
FARMINGTON HILLS, MI 48024
Tel: (313) 476-6400
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48064
Tel: (313) 643-6474
CH,CS

Minnesota
Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Missouri
Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
A,CH,CM,CS,E,MS
Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,CH,CS,E,MP

Nebraska
Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1B13
CM,MS

New Jersey
Hewlett-Packard Co.
W120 Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
60 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico
Hewlett-Packard Co.
P.O. Box 11634 (87192)
11300 Lomas Blvd.,N.E.
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH,CS,E,MS

New York
Hewlett-Packard Co.
Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
Telex: 710-444-4691
A,CH,E,MS
Hewlett-Packard Co.
P.O. Box AC
9600 Main Street
CLARENCE, NY 14031
Tel: (716) 759-8621
CH

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
CH,CM,CS,E,MS

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & Bih Avenue
MANHATTAN NY 10001
Tel: (212) 971-0800
CH,CS,E*,M*

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 328-0884
CM,CH,CS,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
Telex: 510-221-21B3
A,CH,CM,CS,E,MS



SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

North Carolina

Hewlett-Packard Co.
P.O. Box 26500 (27420)
5605 Roanne Way
GREENSBORO, NC 27409
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
CH,CM,CS,E*

Hewlett-Packard Co.
P.O. Box 280
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS

Oklahoma

Hewlett-Packard Co.
P.O. Box 75609 (73147)
304 N. Meridian, Suite A
3
OKLAHOMA CITY, OK 73107
Tel: (405) 946-9499
A*,CH,E*,MS

Hewlett-Packard Co.
3840 S. 103rd E. Avenue
Logan Building, Suite 100
TULSA, OK 74145
Tel: (918) 665-3300
A**,CH,CS,M*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
1021 8th Avenue
KING OF PRUSSIA, PA 19046
Tel: (215) 265-7000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP

South Carolina

Hewlett-Packard Co.
P.O. Box 21708 (29221)
Brookside Park, Suite 122
1 Harbison Way
COLUMBIA, SC 29210
Tel: (803) 732-0400
CH,E,MS

Tennessee

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Texas

Hewlett-Packard Co.
Suite C-110
4171 North Mesa
EL PASO, TX 79902
Tel: (915) 533-3555
CH,E*,MS**

Hewlett-Packard Co.
P.O. Box 42816 (77042)
10535 Harwin Street
HOUSTON, TX 77036
Tel: (713) 776-6400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
P.O. Box 1270
930 E. Campbell Rd.
RICHARDSON, TX 75080
Tel: (214) 231-6101
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
P.O. Box 32993 (78216)
1020 Central Parkway South
SAN ANTONIO, TX 78232
Tel: (512) 494-9336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
P.O. Box 26626 (84126)
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
P.O. Box 9669 (23228)
RICHMOND, Va. 23228
4305 Cox Road
GLEN ALLEN, Va. 23060
Tel: (804) 747-7750
A,CH,CS,E,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99206
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
P.O. Box 4297
4604 MacCorkle Ave., S.E.
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CM,E,M

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3A Transversal Los Ruices Norte
Edificio Segre
Apartado 50933
CARACAS 1071
Tel: 239-4133
Telex: 25146 HEWPACK
A,CH,CS,E,MS,P

Hewlett-Packard de Venezuela C.A.
Calle-72-Entre 3H Y 3Y, No.3H-40
Edificio Ada-Evelyn, Local B
Apartado 2646
MARACAIBO, Estado Zulia
Tel: (061) 80.304
C,E*

Hewlett-Packard de Venezuela C.A.
Calle Vargas Rondon
Edificio Seguros Carabobo, Piso 10
VALENCIA
Tel: (041) 51 385
CH,CS,P

Colimodio S.A.
Este 2 - Sur 21 No. 148
Apartado 1053
CARACAS 1010
Tel: 571-3511
Telex: 21529 COLMODIO
M

ZIMBABWE

Field Technical Sales
45 Kelvin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,M,P

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7 Rue du Bois-du-Lan
CH-1217 MEYRIN 1, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

ASIA

Hewlett-Packard Asia Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Rd.
G.P.O. Box 795
HONG KONG
Tel: 5-832 3211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Liebigasse 1
P.O. Box 72
A-1222 VIENNA, Austria
Tel: (222) 2365110
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
NL-1183 AG AMSTELVEEN
The Netherlands
P.O. Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 20 437771

OTHER EUROPE

Hewlett-Packard S.A.
7 rue du Bois-du-Lan
CH-1217 MEYRIN 1, Switzerland
Tel: (022) 83 1212
Telex: 27835 hpse
Cable: HEWPACKSA Geneve

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Ave.
Maroussi, ATHENS, Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
Rockville, MO 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
P.O. Box 105005
450 Interstate N. Parkway
ATLANTA, GA 30339
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankershim Blvd.
LOS ANGELES, CA 91604
Tel: (213) 877-1282

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

March 1983 5952-6900

HP distributors are printed in italics.

